

Register your product and get support at
www.philips.com/welcome

DCD7010



EN	User manual	3
ZH-CN	用户手册	27

PHILIPS

DEMO MODE

To turn ON

Press



button

(in standby mode)

To turn OFF

Press



button

(in standby mode)

PLUG&PLAY - for tuner installation

1



Plug in the unit

2

Press

RADIO

"AUTO INSTALL" scrolls

3

Press &
HOLD



button

for 2 seconds

Contents

1 Important	4
Know these safety symbols	4
Important Safety Instructions	4
Hearing safety	5
Copyright notice	5
Trademark notice	5
2 Congratulations	7
Feature introduction	7
What's in the box	7
Overview of the main unit	8
3 Before use	11
Place the unit	11
Connect	11
Install/replace the battery of remote control	12
4 Get started	12
Turn on	12
Adjust brightness of display panel	13
Turn on or off LED light	13
Store radio stations automatically	13
Find the correct video input channel	13
Select the correct TV system	13
Select a language for on-screen display	13
5 Play disc/USB	14
Basic operation	14
Play a disc	14
Play recored files	14
Control the play	15
Search by time or title/chapter/track number (for DVD or VCD)	16
Adjust sound	16
6 Play iPod/iPhone/iPad	17
Compatible iPod/iPhone/iPad	17
Load the iPod/iPhone/iPad	17
Listen to the iPod/iPhone/iPad	17
Charge the iPod/iPhone/iPad	17
Remove the iPod/iPhone/iPad	17

7 Listen to FM radio	18
Program radio stations automatically	18
Program radio stations manually	18
Tune to a programmed radio station	18
8 Setup	19
General setup	19
Audio Setup	19
Video Setup	19
Preference setup	20
Update software	20
9 Other features	21
Play audio from an external device	21
Listen through headphone	21
Timer and sleep	21
Add your file to play list	21
Use the sleep timer	21
10 Product information	22
Region Code	22
Specifications	22
Supported disc formats	23
Supported audio	23
USB playability information	23
11 Troubleshooting	24
Picture	24
Sound	24
Play	24
Others	25
12 Notice	26
Compliance and Environment	26

1 Important

Know these safety symbols




This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- ① Read these instructions.
 - ② Keep these instructions.
 - ③ Heed all warnings.
 - ④ Follow all instructions.
 - ⑤ Do not use this apparatus near water.
 - ⑥ Clean only with dry cloth.
 - ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - ⑩ Only use attachments/accessories specified by the manufacturer.
 - ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
 - ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - ⑭ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
 - ⑮ Apparatus shall not be exposed to dripping or splashing.

- ⑩ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.



Warning

- Never remove the casing of this unit.
- Never lubricate any part of this unit.
- Place this unit on a flat, hard and stable surface.
- Never place this unit on other electrical equipment.
- Only use this unit indoors. Keep this unit away from water, moisture and liquid-filled objects.
- Keep this unit away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside the unit.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.

- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Copyright notice



**Be responsible
Respect copyrights**

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Trademark notice



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.

Made for



iPod



iPhone



iPad

note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.



Note

- The type plate is located on the bottom of the unit.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please

2 Congratulations

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of this product. The model number and serial number are on the back of the main unit. Write the numbers here:

Model No. _____

Serial No. _____

Feature introduction

This unit can

- play videos, audios, and display pictures from discs and USB storage devices
- play audios from iPod/iPhone/iPad


For the details of supported media, refer to "Specifications".




What's in the box

Check and identify the contents of your package:

- Main unit
- 2 speakers
- Remote control
- 2 AAA batteries
- AC power cord
- Video cable
- 2 speaker wires
- FM antenna wire
- MP3-LINK cord
- User manual

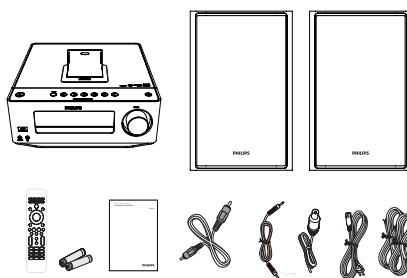

Overview of the main unit

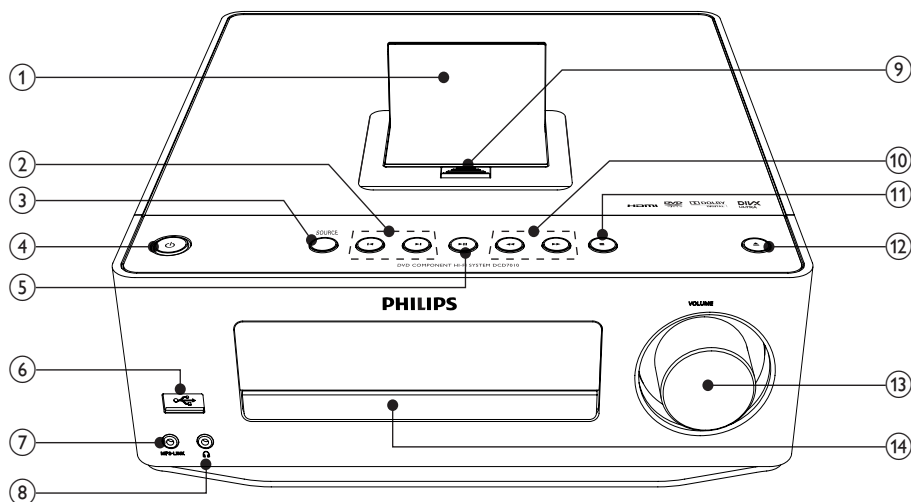

① Dock for iPod/iPhone/iPad

② ◀ / ▶

- Skip to the previous or next title, chapter, track, or file.

③ SOURCE

- Select a media source (disc, USB storage device, iPod/iPhone/iPad, FM tuner, or external device connected through MP3 link cable).

④ ⏻

- Turn on or off the unit.
- Switch to ECO mode.

⑤ ▶ ||

- Start, pause or resume the play.

⑥ 🔌

- Connect a USB storage device.

⑦ MP3 LINK

- Connect an MP3 link cable.

⑧ 🎧

- Socket for headphones.

⑨ Pull open

- Pull to open the dock.

⑩ ◀◀ / ▶▶

- Search fast backward or forward.

⑪ ■

- Stop the play.
- Erase a programmed radio station.
- Activate/deactivate demonstration mode.

⑫ ▲


- Eject or close the disc compartment.

⑬ VOLUME

- Increase or decrease the volume level.

⑭ Disc compartment

Back view

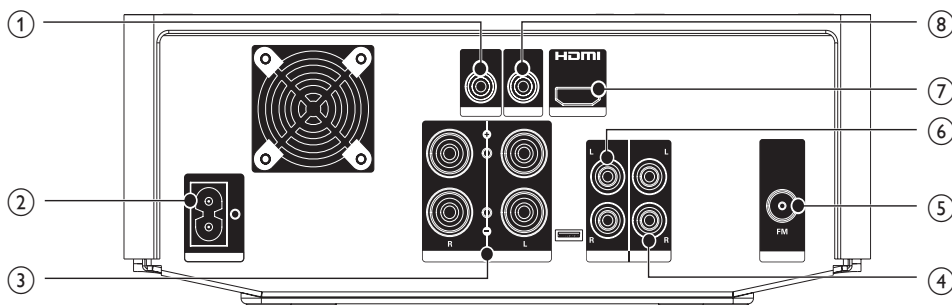

① COAXIAL/DIGITAL OUT

- Coaxial / digital out jack

② AC MAIN~

- Power supply socket.

③ SPEAKER OUT

- Connect the speakers.

④ AUX-IN

- Connect an external audio device.

⑤ FM ANTENNA

- Improve FM reception.

⑥ LINE OUT

- Connect audio cables.


⑦ DIGITAL AV OUT

- Connect an HDMI cable.

⑧ VIDEO OUT

- Video output jack.

Overview of remote control

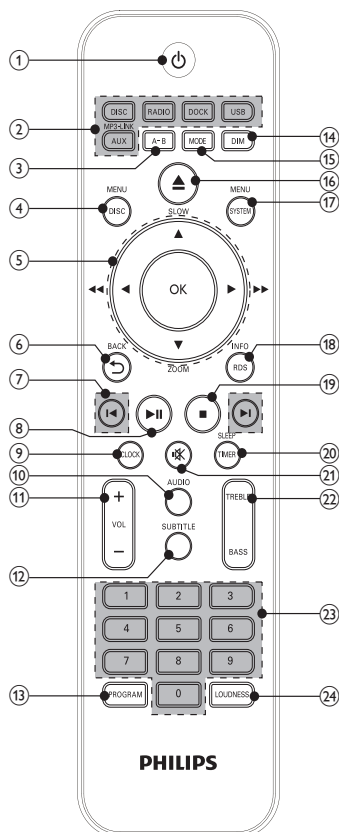

- ① **Power**
 - Switch the device on/off.
- ② **DISC / RADIO / DOCK / USB / AUX / MP3 LINK**
 - Select the source.
- ③ **A-B**
 - Marks the section for repeat play, or turns off repeat mode.
- ④ **DISC MENU**
 - Access the main menu of the disk.
- ⑤ **Navigation**
 - Navigate through the menus;
 - Press **◀▶** to rotate a picture clockwise or counter-clockwise during slideshow.
 - Press **◀◀ / ▶▶** to fast backward or forward; Press repeatedly to change the search speed.


- ⑥ **↶ BACK**
 - Return to a previous display menu.
- ⑦ **◀ / ▶**
 - Skip to the previous or next title, chapter, track, or file.
- ⑧ **⏸**
 - Start, pause or resume play.
- ⑨ **CLOCK**
 - Show time.
- ⑩ **AUDIO**
 - Select an audio language or channel.
- ⑪ **VOL +/-**
 - Adjust the volume.
- ⑫ **SUBTITLE**
 - Select a subtitle language.
- ⑬ **PROGRAM**
 - Program radio stations.
- ⑭ **DIM**
 - Select different level of brightness.
 - Turn on/off the VOL knob light and the LED light.
- ⑮ **MODE**
 - Select repeat play or random play.
- ⑯ **▲**
 - Open or close the disc compartment.
- ⑰ **SYSTEM MENU**
 - Go to the system menu.
- ⑱ **RDS/INFO**
 - Show the disk information such as title, chapter, subtitle, time elapsed, total time etc.
- ⑲ **■**
 - Stop play.
 - Erase a programed radio station.
 - Activate/deactivate the demonstration mode.
- ⑳ **TIMER/SLEEP**
 - To time or enter SLEEP mode in 120/90/60/45/30/15 min.
- ㉑ **🔇**
 - Mute.
- ㉒ **TREBLE/BASS**
 - Increase/decrease the treble/bass level.
- ㉓ **Numeric buttons**
 - Select a title/chapter/track to play.
- ㉔ **LOUDNESS**
 - Turn on/off loudness control.

3 Before use

Place the unit

Note


- Risk of overheating! Never install this apparatus in a confined space. Always leave a space of at least 4 inches around this apparatus for ventilation. Ensure curtains or other objects never cover the ventilation slots on this apparatus.
- Place this unit on a flat, hard, and stable surface.
- Never place this unit in an enclosed cabinet, nor on any other electrical equipment.
- Keep this unit away from direct sunlight, naked flames, or heat.
- Do not insert any object other than indicated into ventilation openings nor other openings.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (for example, liquid filled objects, lighted candles).
- Install this unit near the AC outlet where the AC power plug can be easily reached.
- To avoid magnetic interference or unwanted noise, never place the main unit and speakers too close to any radiation devices.

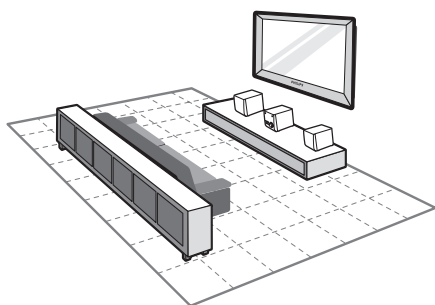

- 1 Place the unit near to the TV.
- 2 Place the speakers at a suitable distance from the TV and at an angle of approximately 45 degrees from the listening position.

Connect

Connect speakers

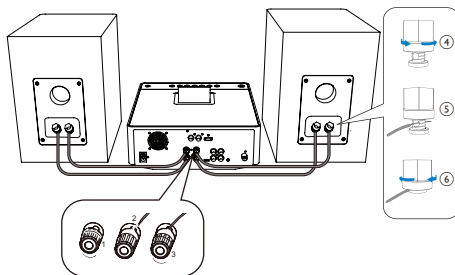

Note


- For the best sound quality, use the supplied speakers only.
- Connect speakers with the same or higher impedance only. Refer to "Product information" > "Specifications" for details.

Connect TV

Connect the audio and video cables to the output sockets on the unit and the corresponding input sockets on your TV.

Select the best video connection that your TV supports.


Connect through a composite video cable

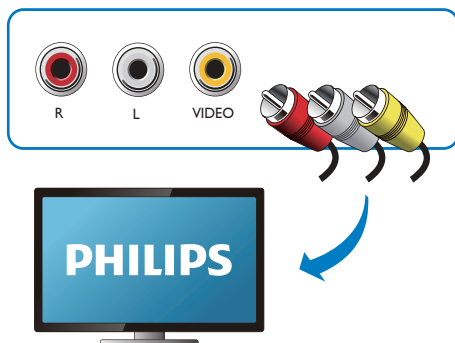


Connect power

Note

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back of the MAIN plug.
- Before you connect the AC power cord, make sure that you have complete all other connections.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the points where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

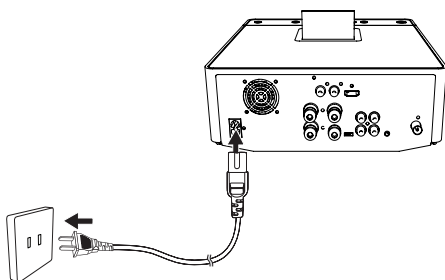

 Install/replace the battery of remote control

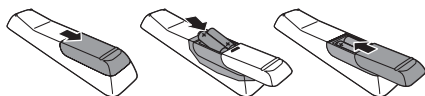

- ① Push to open the battery compartment cover.
- ② Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- ③ Close the cover.

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Do not mix batteries (old and new or carbon and alkaline, etc).
- Remove the battery if the remote control is not to be used for an extended period of time.

4 Get started

Turn on

- 1 Press **⏻**.
↳ The unit switches to the last selected source.

Note

- If no source is played within 15 minutes, the unit switches to standby mode.
- If no operation is performed within 15 minutes in standby mode, the unit switches to Eco-power standby mode.
- Press **⏻** to switch the unit to the last source when it was turned off.

Demonstrate the unit's features

1. In the standby mode, press **■** to turn on DEMO mode
↳ This system's features are displayed one by one.
 - To turn off the demonstration, press **■** again.

Set the clock

The unit uses the 24-hour or 12-hour time format.

- 1 In standby mode, press and hold **CLOCK** for 2 seconds.
↳ "CLOCK SET" scrolls on the display. Then the time format **[24H]** or **[12H]** appears.
- 2 Press **VOL +/-** to select a time format. Press **CLOCK** to confirm.
↳ The hour digits blink.
- 3 Press **VOL +/-** to set the hour. Press **CLOCK** to confirm.
↳ The minute digits blink.
- 4 Press **CLOCK** to confirm the setup.



Note

- The number key on the RC is deactivated in this mode.

Adjust brightness of display panel

- 1 Press **DIM** repeatedly to select different brightness levels.

Turn on or off LED light

- 1 In power-on mode, press and hold **DIM** to turn on or off the LED light at the bottom of the unit or at the volume knob.

Store radio stations automatically

If no radio stations are stored, the unit can store radio stations automatically.

- 1 Turn on the unit.
- 2 Press **RADIO**.
↳ **[AUTO INSTALL ---- PRESS PLAY -- STOP CANCEL]** (press ►|| to start automatic installation, or press ■ to cancel) is displayed.
- 3 Press ►||.
↳ The unit automatically stores radio stations with sufficient signal strength.
↳ After all available radio stations are stored, the first stored radio station is broadcast automatically.

Find the correct video input channel

- 1 Turn on your unit.
- 2 Press **DISC** to select the disc source.
 - Turn on the TV and switch to the correct video-in channel.



Note

- See the user manual of your TV for how to switch between video-in channels.

Select the correct TV system

This unit is compatible with both NTSC and PAL. If the picture is abnormally displayed with the default setting, select a TV system that matches your TV. (Refer to "Setup" > "Video Setup" > **[TV Type]** for details)

Select a language for on-screen display

Chinese is the default language options for this setting. (See "Setup" > "General Setup" > **[OSD LANGUAGE]** for details)

5 Play disc/USB



Caution

- Risk of damage to the unit! During play, never move the unit.
- Never put any object other than a disc into the disc compartment.
- Never look at the laser beam inside the unit.
- Never play discs with accessories such as disc stabilizer rings or disc treatment sheets.

When **X** is displayed, it means that this operation is unavailable for the current media or at the current time.

Basic operation

The listed operations are applicable for all supported media.

Function	Action
Stop play	Press ■ .
Pause or resume play	Press ▶ .
Skip to the previous/next title, chapter, track, or file	Press ◀ / ▶ .

Play a disc

- 1 Press **DISC** to select the disc source.
- 2 Press **▲** to eject the disc tray.
- 3 Place a disc onto the disc tray with the printed side upward, and then press **▲**.
- 4 The unit starts playing automatically.
 - To start the play manually, press **▶||**.
 - To play a DVD that has a rating level higher than your setting, enter the 6 (000000)-digit password first.

Play recorded files


You can play DivX/MP3/WMA/JPEG files that are copied onto a CD-R/RW, recordable DVD, or USB storage device.




Note

- You can only play DivX videos that are rented or purchased with DivX® registration code of this unit. (See "Setup" > "General setup" > **[DivX(R) VOD Code]**)
- Subtitle files with the following file extensions (.srt, .smi, .sub, .ssa, .ass) are supported but not displayed in the file list.
- The subtitle filename has to be the same as the filename of the DivX video (the file extension excluded).
- The DivX video file and the subtitle files must be saved under the same directory.

Connect a USB storage device

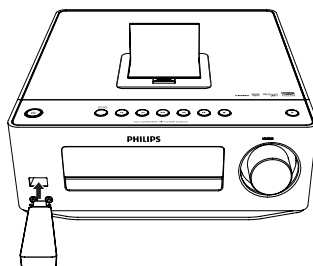

- 1 Press **USB** to select the source for USB storage device.
- 2 Insert the USB storage device.
 - ↳ The unit starts playing automatically.
 - ↳ The user interface is displayed.

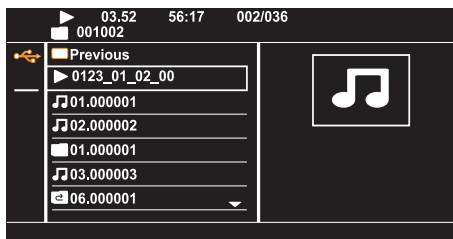

- On the top: time elapsed, total time for the audio/video, the numeric place in the USB storage files and the name of current folder.
- On the left: the information source.
- In the middle: the folder and file list.
- On the right: the detailed file information.

Access a folder

- 1 Press **▲ / ▼** to highlight the selected folder name.
- 2 Highlight **[Previous]** and press **OK** back to the last-level menu.

Play a file

- 1 Access the selected folder.
- 2 Press **▲ / ▼** to highlight the selected file name.
- 3 Press **OK** to confirm.
 - ➔ The selected file starts playing.
 - ➔ The unit stops playing automatically at the end of the last file of same category.

Play slideshow and music simultaneously



Note

- Make sure that the USB storage device or the disc contains both WMA/MP3 files and JPEG photos.

- 1 Play a WMA/MP3 file.
- 2 Access a photo folder.
- 3 Select a photo file.
- 4 Press **OK** to start the slideshow.
 - The slideshow stops after all photos are displayed for one time.
 - To stop the slideshow, press **■**.







Note





- This unit can only display digital camera pictures with JPEG-EXIF format, which is widely used in digital cameras. It cannot display Motion JPEG, nor pictures in formats other than JPEG. Sound clips associated with pictures cannot be displayed either.
- If the JPEG photo is not recorded with an "exif" type file, it is displayed as a "blue mountain" thumbnail picture.

Control the play

Follow the instructions to control the play.

Media	Function	Action
	Return to the disc menu	Press DISC MENU .
	Enable/disable the PBC (playback control) feature	Press DISC MENU repeatedly. <ul style="list-style-type: none"> • Enable PBC to display the PBC menu, and then use Navigation buttons and OK to enter your choice.
	Select an audio language or audio channel	Press AUDIO repeatedly.
	Select a subtitle language	Press SUBTITLE repeatedly.
	Select a play mode (repeat chapter, title, all, random or repeat off)	Press MODE repeatedly.

Media	Function	Action
	Repeat a specific section within a chapter or track	1) Press A-B to select the start point. 2) Press A-B again to select the end point. ↳ The selected section starts play repeatedly. • To resume normal play, press A-B until [Repeat off] is displayed.
	Zoom in or out	• Long press ZOOM repeatedly to change the zoom degree. • Press ▲▼ ◀▶ buttons to move the zoomed picture up, down, left, or right.
	Display the play information	Press INFO .
	Play or rewind in slow speed.	• During DVD/VCD playback, press ▼ to play in slow speed. • During DVD playback, press ▲ to rewind in slow speed. • Press ▼ repeatedly to change the slow forward speed. • Press ▲ repeatedly to change the slow backward speed. • Press OK back to normal speed play.

Media	Function	Action
	Search backward or forward fast	Press ◀◀ / ▶▶ to search in a fast speed. • Press OK back to normal speed play.
	Preview photos	Press ▲▼ to highlight a file info near the file list
	Reverse a photo	Press ▲▼ .
	Rotate a photo	Press ◀◀ / ▶▶ .

Search by time or title/ chapter/track number (for DVD or VCD)

- 1 During play, press **INFO**.
- 2 Press **◀◀ / ▶▶** to highlight the title number; chapter number; track number; or time field.
- 3 Use the **numeric buttons** to enter the number or time digits.
- 4 Press **OK** to confirm.
 ↳ the selected segment is displayed.
 ↳ Play starts automatically.

Adjust sound

You can adjust the volume level and select sound effects.

Function	Action
Increase/decrease the volume level	Press + VOL - ; turn VOLUME clockwise or anti-clockwise.
Adjust treble or bass	To activate treble level, press TREBLE and then adjust with VOL +/- . To activate bass level, press BASS and then adjust with VOL +/- .
Mute/unmute the speakers	Press 🔇 .

6 Play iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this unit.

Note

- The audio is only output through the supplied speakers.

Compatible iPod/iPhone/iPad

The unit supports the following iPod/iPhone/iPad models:


- iPod 4G
- iPod 5G
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPod Classic
- iPod Touch (4th generation)
- iPod Touch (3rd generation)
- iPod Touch (2nd generation)
- iPod Touch (1st generation)
- iPod Mini
- iPhone
- iPhone 3G
- iPhone 3GS
- iPhone 4
- iPad

Note

- iPod with color display, iPod classic, and iPod with video are not compatible with dock charging.

Load the iPod/iPhone/iPad

- 1 Lift the lid of the dock.
- 2 Load the iPod/iPhone/iPad onto the dock.

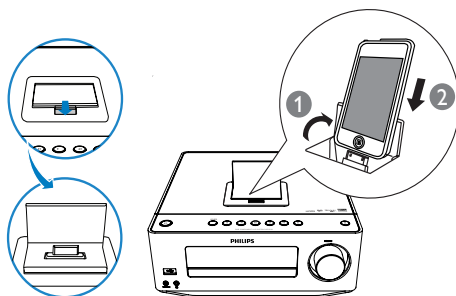

Listen to the iPod/iPhone/iPad

- 1 Load your iPod/iPhone/iPad.
- 2 Press the button **DOCK** on your RC.
- 3 Play the selected track on your iPod/iPhone/iPad.
 - To pause/resume the play, press **▶||**.
 - To stop the play, press **■**.
 - To skip to the previous/next audio track, press **◀ / ▶**.
 - To select a track: press **▲ / ▼** to highlight a track, and then press **OK** to confirm.

Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad starts charging.



Tip

- For certain iPod models, it may take up to a minute before the charging indication appears.

Remove the iPod/iPhone/iPad

- 1 Unload the iPod/iPhone/iPad from the dock.
- 2 Flip down the lid to hide the dock.

7 Listen to FM radio



Note

- A maximum of 20 radio stations can be stored.
- Fully extend the FM antenna for better reception.

Program radio stations automatically

- 1 Press **RADIO**.
- 2 Press and hold **PROGRAM** for 2 seconds.
 - ↳ **AUTO** appears.
 - ↳ Available stations are stored automatically.
 - ↳ The first programmed radio station is broadcast automatically.

Program radio stations manually

- 1 Press **RADIO**.
- 2 Long press **◀◀ / ▶▶** to search to a radio station, or press **◀◀ / ▶▶** to manually tune to a radio station.
- 3 Press **PROGRAM** to program the current station .
 - ↳ The sequence number blinks with the current frequency displayed.
- 4 Press **◀ / ▶** to allocate a sequence number from 01 to 20 to this radio station.
- 5 Press **PROGRAM** to confirm.
 - ↳ The sequence number and the current frequency are displayed.
- 6 Repeat steps 2-5 to program more stations.



Tip






- To overwrite a programmed station, store another station with its sequence number.
- **[STEREO]** is default setting for tuner mode.
- Under tuner mode, you can press **OK** repeatedly to toggle between **[STEREO]** and **[MONO]**, and the unit memorizes your setting even if you turn off the unit or turn to other sources.

Tune to a programmed radio station


- 1 Press **RADIO**.
- 2 Press **◀ / ▶** repeatedly to select a programmed radio station.

8 Setup


- 1 After you press the button **SYSTEM MENU**.
 ↳ The system menu appears. Click the symbol to access each setup.

General Setup	
	Disc Lock
	OSD Language
	Sleep Timer
	Auto Standby
	DivX(R) VOD Code

Note

- You cannot change a menu option that is grayed out.
- To return to the previous menu, press . To exit the menu, press **SYSTEM MENU** again.


General setup

- 1 Press **SYSTEM MENU** button.
- 2 Select  to access the **[General Setup]** options.
 - **[Disc Lock]**: Turn Disc lock.
 - **[Display Dim]**: Change the brightness of the display panel of the unit.
 - **[OSD Language]**: Select an on-screen display menu language.
 - **[Screen Saver]**: Enable or disable screen saver mode. If enabled, the screen enters idle mode after 5 minutes of inactivity (for example, in pause or stop mode).
 - **[Sleep Timer]**: Enable a countdown timer to switch this unit to standby mode after a specific period of time.
 - **[DivX(R) VOD Code]**: Get registration code of DivX Video On Demand Registration.

Note

- If you select a language which is not available on a disc, this unit uses the default language of the disc.


Audio Setup

- 1 Press **SYSTEM MENU** button.
- 2 Select  to access the **[Audio Setup]** options.
 - **[HDMI Audio]**: Selects HDMI audio format when this unit is connected through HDMI or disables HDMI audio output for the TV.
 - **[Audio Sync]**: Set the delay time for audio output when you play a video disc.
 - **[Night Mode]**: Select quiet or full dynamic sound. Night mode decreases the volume of loud sound and increases the volume of soft sound (such as speech).

Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is only available for Dolby encoded DVD.

Video Setup

- 1 Press **SYSTEM MENU** button.
- 2 Select  to access the **[Video Setup]** options.
 - **[TV Type]**: Select video output format(PAL, Multi or NTSC).
 - **[TV Display]**: Set screen display format(Pan Scan, Letter Box or Wide Screen).
 - **[Picture Settings]**: Select a predefined color setting or set the color manually.
 - **[HDMI Setup]**: When you connect this unit and TV with HDMI cable, select the best HDMI setup that your TV can support.



Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is only available for Dolby encoded DVD.

Preference setup

- 1 Press **SYSTEM MENU** button .
- 2 Select ☒ to access the **[Preference Setup]** options.
 - **[Audio]**: Select an audio language for video.
 - **[Subtitle]**: Select a subtitle language for video.
 - **[Disc Menu]**: Select a menu language for a video disc.
 - **[Parental]**: Set the rating level to a disc. Restrict access to discs that are encoded with ratings These discs must be recorded with rating levels.
 - **[PBC]**: Display or skip the content menu for VCD and SVCD.
 - **[MP3/JPEG Display]**: Set Mp3 or jpeg view mode.
 - **[Password]**: Set or change a password to play a restricted disc.
 - **[DivX Subtitle]**: Select the language of the DivX.
 - **[Version Info.]**: Display the software version for the .
 - **[Default]**: Reset the home theater to the default settings programmed at the factory.



Note

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you need to name the text file 'Movie.sub' or 'Movie.srt'.

Update software

Before you update the software of this unit, check the current software version:

- Press **SYSTEM MENU** , and then select ☒ (**[Preference Setup]**).
- Use navigation button to find **[Version Info.]**, and find out current version.

Update software via USB

- 1 Check the latest software version on www.philips.com/support.
 - Search for your model and click on "Software and drivers".
- 2 Download the software into a USB storage device.
- 3 Unzip the download in the root directory.
- 4 Connect the USB storage device to the (USB) connector on this unit.
 - ↳ The unit will read the file automatically. A box comes out on the TV screen.
- 5 Follow the instructions on the TV screen to update the software.
 - ↳ When the update is complete, this unit automatically turns off and on again.



Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this unit.
- You may also burn a disc to update your software.


9 Other features

Play audio from an external device

You can use this unit to play audio from an external device.

- 1 Connect the MP3 link cable to
 - the **MP3 LINK** jack of this unit
 - the audio output jack (usually headphone jack) of the external device.
- 2 Press **MP3-LINK**.
- 3 Play the external device (see the user manual of this device for details).

Listen through headphone

Plug a headphone into the  socket.

Timer and sleep


You can set a time for automatic back to one source.



Note

- Make sure that you have set the clock before this setup.

- 1 In standby mode, press and hold **SLEEP/TIMER**.
- 2 Press **VOL +/-** to select **SOURCE** (DISC USB, DOCK, TUNER and PLAY LIST). Then press **SLEEP/TIMER** to confirm.
 - ↳ The hour digits blink.
- 3 Press **VOL +/-** to set the hour.
- 4 Press **SLEEP/TIMER** again.
 - ↳ The minute digits blink.
- 5 Press **VOL +/-** to set the minute.
- 6 Press **SLEEP/TIMER** to confirm the time for auto power on.

- 7 Press **VOL +/-** to select a volume for the timer, and press **SLEEP/TIMER** to confirm.
- 8 Press **SLEEP/TIMER** to activate the timer.
 - ↳  is displayed.
 - ↳ The system turns on to the set source at the set time.
 - To deactivate the timer, press **SLEEP/TIMER** again.



Note

 
- Alarm timer is not available in MP3 LINK mode.
- If DISC/USB source is selected and the track cannot be played, tuner is activated automatically.
- If iPod/iPhone/iPad playlist is selected as alarm source, you need create a playlist called "PHILIPS" in your iPod/iPhone/iPad.
- If no playlist called "PHILIPS" created in the iPod/iPhone/iPad or no track is stored in the playlist, the unit switches to iPod/iPhone/iPad alarm source.

Add your file to play list

- 1 Select one file (MP3, WMA).
- 2 Press **PROGRAM** to add this file into playlist.
- 3 Repeat step 1 and 2 to add other files.
- 4 Press **DISC MENU** to view the detailed information about playlist.

Use the sleep timer

The system can also turn off automatically after a preset period (120, 90, 60, 45, 30, 15 minutes).

- 1 During play, press **SLEEP/TIMER** repeatedly to select a period.
 - ↳ **SLEEP** is displayed.
 - ↳  is displayed.
- 2 To deactivate the sleep timer, press **SLEEP/TIMER** repeatedly until **SLEEP OFF** is displayed.

10 Product information



Note

- Product information is subject to change without prior notice.

Region Code

You can play DVD discs with the following region codes:

DVD region code	Country
	China

Specifications

Amplifier

Rated Output Power	2 X 50 W RMS
Frequency Response	20-20000 Hz, ± 3 dB
Signal to Noise Ratio	> 82 dB
Aux Input	1000 mV RMS 22kohm

Disc

Laser Type	Semiconductor
Disc Diameter	12 cm/8 cm
Video Decoding	MPEG-1 / MPEG-2 / DivX
Video DAC	12 Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	> 57 dB
Audio DAC	24 Bits / 96 kHz
Total Harmonic Distortion	< 0.1% (1 kHz)
Frequency Response	4 Hz - 20 kHz (44.1 kHz) 4 Hz - 22 kHz (48 kHz) 4 Hz - 24 kHz (96 kHz)
S/N Ratio	> 82 dBA

Tuner (FM)

Tuning Range	87.5 - 108MHz
Tuning grid	50KHz
Sensitivity - Mono, 26dB S/N Ratio	<22 dBf
Sensitivity - Stereo, 46dB S/N Ratio	<43 dBf
Search Selectivity	<28dBf
Total Harmonic Distortion	<2%
Signal to Noise Ratio	>55dB

Speakers

Speaker Impedance	6 ohm
Speaker Driver	13cm woofer+2.5cm" Dome tweeter
Sensitivity	> 86 dB/m/W \pm 4dB/m/W

General information

AC power	220 V, 50 Hz
Operation Power Consumption	38 W
Eco Standby Power Consumption	<1 W
Headphone output	2 X 15 mW, 32 ohm
USB Direct	Version 2.0
Composite Video Output	1.0 Vp-p, 75 ohm
Coaxial Output	0.5 Vpp±0.1Vpp, 75 ohm
Dimensions	
- Main Unit (W x H x D)	250 X 92 X 285 mm
- Speaker Box (W x H x D)	174 X 260 X 240 mm
Weight	
- With Packaging	10 kg
- Main Unit	2.5 kg
- Speaker Box	6.1 kg

Supported disc formats

- **Supported video media:**
- DivX Ultra
- Digital Video Discs (DVDs)
- Picture CD
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- DVD-R/-RW
- MP3-CD
- CD-R/CD-RW
- DVD+R/+RW
- Compact Discs (CDs)

Supported compression formats:

- MPEG1, MPEG2, DivX(DivX Ultra+addendum 1.0), XivD, AVI(MPG), MPEG4, ASF
- JPEG file

Supported audio

- **Supported audio media**
- CD
- CD-R/RW
- MP3-CD
- WMA-CD

Supported following audio formats:

- Dolby Digital Plus/5.1
- PCM Audio
- MP3, MP3 ID3 Tag
- WMA, WMA Tags
- The following formats are not supported:
 - Files like *.VMA,, *.DLF, *.M3U
 - *.PLS, *.WAV
 - Discs recorded in Joliet format
 - MP3 Pro

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards is not compatible with this set.

Supported formats:

- USB host shall support FAT16 and FAT 32 File System
- Audio playback: MP3, WMA
- Video playback: MPEG4, AVI, DivX 5.0, DivX Ultra+addendum 1.0
- Photo playback: JPEG

Unsupported formats:

- Empty albums: An empty album is an album that does not contain MP3/WMA files.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, DTS, PCM audio files
- Dolby True HD files
- DRM protected WMA files (.wav, .m4a, .m4p, .aac)
- WMA files in Lossless format

11 Troubleshooting



Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the philips web site (www.philips.com/support). When you contact philips, ensure that your apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC cord of the apparatus is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

Picture

No picture

- Check the video connection.
- Turn on the TV to the correct Video-In channel.
- Progressive scan is activated but the TV does not support progressive scan.

Black and white or distorted picture

- The disc does not match the TV color system standard (PAL/NTSC).
- Sometimes a slight picture distortion may appear. This is not a malfunction.
- Clean the disc.
- A distorted picture may appear during progressive scan setup.

The aspect ratio of the TV screen cannot be changed even though you have set the TV display format.

- The aspect ratio is fixed on the loaded DVD disc.
- The aspect ratio may not be changed for some TV systems.

The disc does not play high-definition video.

- Make sure that the disc contains high-definition video.
- Make sure that the TV supports high-definition video.

Sound

No audio output from the TV.

- Ensure that the audio cables are connected to the audio input of the TV.
- Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.

No audio output from the loudspeakers of the audio device (stereo system/amplifier/receiver).

- Ensure that the audio cables are connected to the audio input of the audio device.
- Turn on the audio device to its correct audio input source.

Play

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Disc does not play

- Insert a readable disc with the label side facing you.

- Check the disc type, color system and regional code. Check for any scratches or smudges on the disc.
- Press **SYSTEM MENU** to exit the system setup menu.
- Disable the password for parental control or change the rating level.
- Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour. Disconnect and reconnect the AC power plug, and then turn on the system again.
- As a power-saving feature, the system turns off automatically 15 minutes after disc play reaches the end and no control is operated.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

Audio or subtitle languages cannot be set

- The disc is not recorded with sound or subtitles in multiple languages.
- The audio or subtitle language setting is prohibited on the disc.

DivX video files cannot be played.

- Make sure that the DivX video file is complete.
- Make sure that the file extension is correct.
- Due to Digital Rights issue, the DRM-protected video files stored on a USB storage device cannot be played through an analog video connection (e.g. composite, component, and scart). Transfer the video content onto a supported disc to play these files.

Others

Poor radio reception

- Increase the distance between the apparatus and your TV or VCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB storage device is incompatible with the unit. Try another one.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

12 Notice

Compliance and Environment

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household


waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes this label:

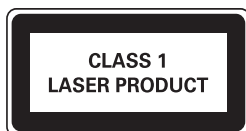

<div> <div>部件名称</div> <div>Name of the Parts</div> </div>	<div>有毒有害物质或元素</div> <div>Hazardous/toxic Substance</div>					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉(Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
<div>Housing</div> <div>外壳</div>	○	○	○	○	○	○
<div>DVD/CD loader</div> <div>DVD/CD光盒</div>	×	○	○	○	○	○
<div>PWBs</div> <div>电路板组件</div>	×	○	○	○	○	○
<div>Accessories</div> <div>(Remote control & cables)</div> <div>附件（遥控器，电源线，连接线）</div>	×	○	○	○	○	○
<div>Batteries in Remote (ZnC)</div> <div>遥控器电池</div>	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 – 2006.

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 – 2006 标准规定的限量要求。
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

