Register your product and get support at www.philips.com/welcome



- EN User manual
- DA Brugervejledning
- DE Benutzerhandbuch
- EL Εγχειρίδιο χρήσης
- ES Manual del usuario
- FI Käyttöopas
- FR Mode d'emploi
- I⊤ Manuale utente

- NL Gebruiksaanwijzing
- NO Brukerhåndbok
- PT Manual do utilizador
- SV Användarhandbok
- TR Kullanım kılavuzu

PHILIPS

Contents

_		
1	Important	2 2 2 3 3
	Safety	2
	Product care	2
	Disposal of your old product and batteries	3
	3D health warning	د
2	Your home theater	4
	Main unit	4
	Remote control	4
3	Connect your home theater	7
	Connectors	7
	Connect to the TV	8
	Connect audio from TV or other devices	9
	Connect to a computer network	
	and the Internet	10
	Connect a wireless module	11
4	Use your home theater	11
	Before you start	11
	Access the home menu	11
	Choose your sound	12
	Play a disc	13
	Use Bonus View on Blu-ray	13
	Access BD-Live on Blu-ray	14
	Play 3D video	14
	Play from a USB storage device	14
	More play features for disc or USB	15
	Play from PC (DLNA)	16
	Browse Net TV	17
	Access online video stores	17
	Play from radio	18
	Play audio from TV or other devices	19
	Play from an MP3 player	19
	Play from an iPod or iPhone	19
	Use Philips EasyLink	19

5 Change settings	20
Access the setup menu	20
Change video settings	20 21
Change audio settings	
Set up surround sound automatically	21 22
Set up surround sound manually	22
Set up network	
Set up EasyLink	22
Multiview	23
Change preference settings	23
Change advanced settings	23
6 Update software	24
Check software version	24
Update software from the network	24
Update software from a USB	24
Update electronic user manual	25
	25
7 Product specifications	25
7 Product specifications 8 Troubleshooting	23
8 Troubleshooting	27
8 Troubleshooting Main unit	27 27
8 Troubleshooting Main unit Picture	27 27 27 27
8 Troubleshooting Main unit Picture Sound	27 27 27 27 27

English

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

• For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.

- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.

Risk of overheating!

• Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

English

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on

separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3D health warning


If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.

To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first. Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six years of age as their visual system is not fully developed yet.

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit

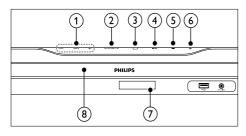

→ +/- (Volume)

Increases or decreases volume.

2 SOURCE

Selects an audio/video source for the home theater.


- ③ & (Standby-On) Switches on the home theater or switches to standby mode.
- (4) ►II (Play/Pause) Starts, pauses or resumes play.
- (5) (Stop) Stops play.
- (6) ▲ (Open/Close) Opens or closes the disc compartment.
- (7) Display panel
- 8 Disc compartment

Remote control



• Your home theater is supplied with one of the following remote controls.

Remote control - A

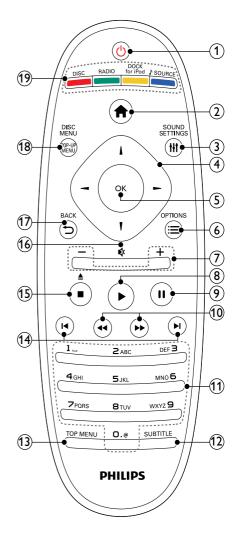

English

(1) ^(b) (Standby-On)

- Switches the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
- (1) 1 (Home)
 - Accesses the home menu.

3 HI SOUND SETTINGS

Accesses or exits various sound OPTIONS.

(4) Navigation buttons

- Navigates menus.
- In radio mode, press left or right to start auto search.
- 5 ок
 - Confirms an entry or selection.

⑥ ≡ OPTIONS

- Accesses more play OPTIONS during playback.
- In radio mode, programs radio stations.
- 7 +/- (Volume)

Increases or decreases volume.

⑧ ► (Play)

Starts or resumes play.

- (9) II (Pause) Pauses play.
- (10) ◀◀ / ▶▶ (Fast Backward/Fast Forward) Fast backwards or fast forwards. Press repeatedly to change the search speed.

(1) Alphanumeric buttons

Enters values or letters (using SMS style entry).

12 SUBTITLE

Selects subtitle language for video.

(13) TOP MENU

Accesses the main menu of a video disc.


(14) I / ►I (Previous/Next)

- Skips to the previous or next track, chapter or file.
- In radio mode, selects a preset radio station.

- (15) (Stop) / ▲ (Eject / Open/Close)
 - Stops play.
 - Press and hold to eject the disc or open the disc compartment.
 - In radio mode, erases the current preset radio station.
- (16) ♦ (Mute)

Mutes or restores volume.

- (17) → BACK Returns to a previous menu screen.
- (18) POP-UP MENU/DISC MENU Accesses or exits the disc menu.
- (19) Source buttons
 - Color buttons (for Blu-ray discs): Selects tasks or OPTIONS.
 - DISC: Switches to disc source.
 - **RADIO**: Switches to FM radio.
 - **DOCK for iPod**: Switches to Philips Dock for iPod/iPhone.
 - J SOURCE: Selects an audio input source.

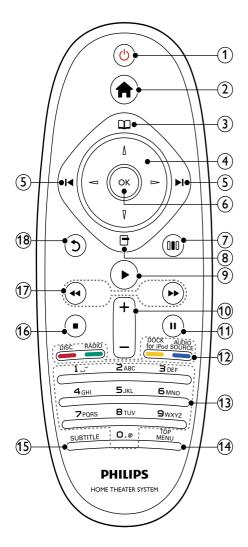

(1) ⁽) (Standby-On)

- Switches the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

2 🔒 (Home)

Accesses the home menu.

(3) (Disc menu) Accesses or exits the disc menu.

(4) Navigation buttons

- Navigates menus.
- In radio mode, press left or right to start auto search.

(5) I < / ►I (Previous/Next)

- Skips to the previous or next track, chapter or file.
- In radio mode, selects a preset radio station.

6 ок

Confirms an entry or selection.

- (7) III (Sound OPTIONS)
 - Accesses or exits various sound OPTIONS.

- Accesses more play OPTIONS during playback.
- In radio mode, programs radio stations.

(9) ►(Play)

Starts or resumes play.

- (1) +/- (Volume) Increases or decreases volume.
- (1) II (Pause)

Pauses play.

- (12) Source buttons / Color buttons
 - Blu-ray discs: Selects tasks or OPTIONS.
 - AUDIO SOURCE: Selects an audio input source.
 - DOCK for iPod: Switches to Philips Dock for iPod/iPhone.
 - **RADIO**: Switches to FM radio.
 - **DISC**: Switches to disc source.
- (13) Alphanumeric buttons Enters values or letters (using SMS style
 - Enters values or letters (using SMS style entry).
- (4) **TOP MENU** Accesses the main menu of a video disc.
- (15) SUBTITLE

Selects subtitle language for video.

(16) ■ (Stop)

- Stops play.
- Press and hold to eject the disc or open the disc compartment.
- In radio mode, erases the current preset radio station.
- (17) ◀◀/▷► (Fast Backward/Fast Forward) Fast backwards or fast forwards. Press repeatedly to change the search speed.
- (18) 5 (Back)

Returns to a previous menu screen.

3 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide.philips.com.



 
Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

Connectors

Connect other devices to your home theater.

Front connectors




① •<⇒ (USB)

Audio, video or picture input from a USB storage device.

2 MP3 LINK

- Audio input from an MP3 player.
- Connects to the auto calibration microphone.

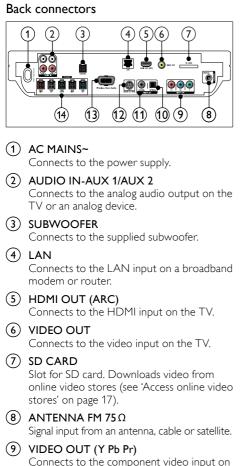

the TV.

10 DIGITAL IN-OPTICAL

Connects to the optical audio output on the TV or a digital device.

1 DIGITAL IN-COAXIAL

Connects to the coaxial audio output on the TV or a digital device.

(12) DOCK for iPod

Connects to a Philips Dock for iPod/iPhone. (See Quick Start guide.)

(13) Wireless Rear Audio

Connects to a Philips wireless module. (Model: Philips RWSS9500, sold separately.)

(14) SPEAKERS

Connects to the supplied speakers.

Connect to the TV


Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

- 1 HDMI
- Component video
- 3 Composite video

Option 1: Connect to the TV through HDMI

Note

- The HDMI connector on the TV might be labeled HDMI IN or HDMI ARC.
- If the TV supports HDMI Audio Return Channel (ARC), you can use it to output digital audio to the home theater.
- If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.
- If the TV supports EasyLink HDMI CEC, control the home theater and TV with one remote control (see 'Use Philips EasyLink' on page 19).

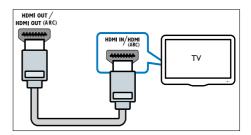


Option 2: Connect to the TV through YPbPr (component video)

Note

• The component video cable or connector might be labeled **Y Cb Cr** or **YUV**.


(Cable not supplied)

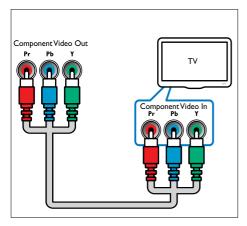

Option 3: Connect to the TV through composite video (CVBS)



  The composite video cable or connector might be labeled AV IN, VIDEO IN, COMPOSITE or BASEBAND.



Connect audio from TV or other devices


Use your home theater to play audio from the TV or other devices such as a cable box.




 Press J SOURCE / AUDIO SOURCE repeatedly to select the audio output of your connection.

Option 1: Connect audio through analog audio cables

(Cable not supplied)

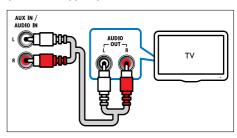

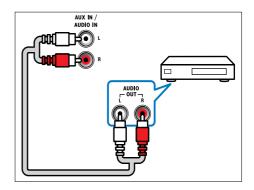


Option 2: Connect audio through coaxial cable


Note

• The digital coaxial cable or connector might be labeled COAXIAL/DIGITAL OUT or SPDIF OUT.

 (Cable not supplied)



Option 3: Connect audio through a digital optical cable

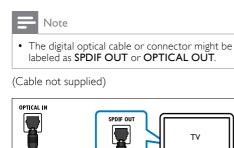

Connect to a computer network and the Internet


Connect the home theater to a computer network and enjoy:

- Multimedia content streamed from your computer : view photos, play music and watch video files streamed from your computer (see 'Play from PC (DLNA)' on page 16).
- Net TV : browse Net TV services (see 'Browse Net TV' on page 17).
- Software update : update the software of the home theater through the network (see 'Update software from the network' on page 24).

What you need:

- A network router (with DHCP enabled).
- A network cable (RJ45 straight cable).
- A computer with media server software installed (see 'Set up media server software' on page 16).
- For Net TV and software update, make sure that the network router has access to the Internet and is not restricted by firewalls or other security systems.

(Cable not supplied)

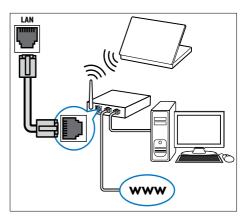

Set up network

- Connect the home theater to a network router through wired or wireless network connection. This home theater has a built-in Wi-Fi for easy access to the wireless network.
- 2 Turn on your TV and switch to the correct source for the home theater.
- 4 Select [Setup], then press OK.
- 5 Select [Network] > [Network Installation], then press OK.
 - For wired network, select [Wired (Ethernet)] and press OK.
 - For wireless network, select [Wireless (Wi-Fi)] and press OK.
- 6 Follow the instructions on the TV to complete the setup.
 - → The home theater connects to the Internet. If connection fails, select [Retry], then press OK.
- 7 Select [Finish], then press OK to exit.

Caution

 Familiarize yourself with the network router, media server software and networking principles before attempting to connect the home theater to a computer network. If necessary, read documentation accompanying network components. Philips is not responsible for lost, damaged or corrupt data.

Connect a wireless module



• When you connect and switch on the wireless module, the rear speaker connectors on the home theater are muted, the rear surround sound is output through the connectors on the wireless receiver.

(Wireless module not supplied - Philips RWSS9500)



4 Use your home theater

T sc ilo

This section helps you use the home theater to play media from a wide range of sources.

Before you start

Check that you:

- Make the necessary connections described in the Quick Start and User Manual.
- Complete the first time setup. First time setup appears when you turn on the home theater for the first time. If you do not complete the setup, you are prompted to complete it each time you turn on the home theater.
- Switch the TV to the correct source for the home theater.

Access the home menu

The home menu gives you easy access to connected devices, audio and video settings, and other features.

- 1 Press 🛧 (Home).
 - → The home menu appears.
- 2 Press the Navigation buttons and OK to select the following:
 - [play Disc] : Starts disc play.
 - [browse USB] : Accesses the content browser of the connected USB storage device.
 - [browse iPod] : Accesses the content browser of the connected iPod or iPhone.
 - [browse PC] : Accesses the content browser of the connected PC network.
 - [browse Net TV] : Accesses Net TV.
 - [Setup] : Accesses menus to change picture, sound and other settings.
 - [User Manual] : Launches the electronic user manual.

Choose your sound

This section helps you choose the ideal sound for your video or music.

- 1 Press tht SOUND SETTINGS / DD (Sound OPTIONS).
- 2 Press the Navigation buttons (left/right) to access the sound OPTIONS.

Sound experience	Description
AUTO VOLUME	Sets a constant output signal at the speaker output. This option is best for TV audio input where the commercial signal level is usually higher than the content.
SOUND	Selects a sound mode.
SURROUND	Selects a surround sound or stereo sound.
TREBLE	Adjusts the high frequency output.
MID	Adjusts the middle frequency output.
BASS	Adjusts the low frequency output.
AUDIO SYNC	Delays the audio to match the video.

3 Select an option, then press OK.

Press 🕁 BACK to exit.

If you do not press a button within five seconds, it automatically exits the menu.

Change auto volume

Select the level of volume which output from your TV or other devices to the home theater.

- 1 Press 111 SOUND SETTINGS / 010 (Sound OPTIONS).
- 2 Select AUTO VOLUME, then press OK.
- 3 Press the Navigation buttons (up/down) to select ON or OFF.
- 4 Press OK to confirm your choice.

Change sound mode

Select predefined sound modes to suit your video or music.

- Press ## SOUND SETTINGS / DID (Sound OPTIONS).
- 2 Select SOUND, then press OK.
- **3** Press the Navigation buttons (up/down) to select the following settings:
 - ACTION/ROCK : Enhanced low and high-range. Ideal for action movies and rock or pop music.
 - DRAMA/JAZZ : Clear mid and highrange. Ideal for drama movies and jazz music.
 - GAMING/PARTY : Moderate lowrange and strong mid-range. Ideal for video games and party.
 - CONCERT/CLASSIC : Neutral sound. Ideal for live concerts and classical music.
 - **SPORTS** : Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.
 - **NEWS** : Enhanced mid-range for clear vocals and speech.
- 4 Press OK to confirm your choice.

Change surround sound mode

Experience an immersive audio experience with surround sound modes.

1 Press 111 SOUND SETTINGS / DID (Sound OPTIONS).

2 Select SURROUND, then press OK.

- Press the **Navigation buttons** (up/down) to select the following settings:
 - **360SOUND** : 9.1 surround sound mode, best cinematic experience.
 - **360SOUND STEREO** : Enhanced stereo mode with 4.1 channels.
 - STEREO : Two-channel stereo sound. Ideal for listening to music.
 - **MULTI-CH** : Traditional 5.1 channels for a more relaxing cinematic experience.
- Press **OK** to confirm your choice.

Change treble, mid and bass

Change the high frequency (treble), mid frequency (mid) and low frequency (bass) settings of the home theater to suit your video or music.

- 1 Press HI SOUND SETTINGS / DID (Sound OPTIONS).
- 2 Select TREBLE, MID or BASS, then press OK.
- **3** Press the Navigation buttons (up/down) to adjust the frequency level.
- 4 Press OK to confirm.

Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

- 1 Press HI SOUND SETTINGS / DD (Sound OPTIONS).
- 2 Select AUDIO SYNC, then press OK.
- **3** Press the Navigation buttons (up/down) to sync the audio with the video.
- 4 Press OK to confirm.

Play a disc

The home theater can play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

1 Insert a disc into the home theater.

- 2 Press DISC, or select [play Disc] in the home menu and press OK.
 - → The disc plays or the disc main menu appears.
- **3** Press the following buttons to control play:

Button	Action
Navigation buttons	Navigate menus.
ОК	Confirms an entry or selection.
► (Play)	Starts or resumes play.
П	Pauses play.
	Stops play.

Button	Action
I ⊲ / ►I	Skips to the previous or next track, chapter or file.
44 / >>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (up/down)	Rotates the picture counter-clockwise or clockwise.
SUBTITLE	Selects subtitle language for video.
POP-UP MENU/ DISC MENU / CDisc menu)	Accesses or exits the disc menu.
	Accesses more play OPTIONS during playback.

For video formats such as, DivX and WMV:

- To stop play, press ■.
- To resume the video from where you stopped, press ► (Play).
- To play the video from the start, press **OK**.

Note

• To play DivX DRM - protected files from a disc or a USB storage device, connect your home theater to a TV through an HDMI cable.

Use Bonus View on Blu-ray

Blu-ray discs that support the Bonus View feature (also known as Picture-In-Picture) allow you to view special content such as a director's commentary while watching the main feature.

- 1 If necessary, enable BonusView (or Picture-In-Picture) in the Blu-ray disc menu.
- 2 During playback of the main feature, press ≡ OPTIONS / ☐ (OPTIONS).
 - \blacktriangleright The OPTIONS menu is displayed.
- 3 Select [PIP Selection] > [PIP], then press OK.
 - → PIP OPTIONS [1]/[2] depend on the video contents.
 - → The picture-in-picture video appears in a small window.

- 4 Select [2nd Audio Language] or [2nd Subtitle Language], then press OK.
- 5 Select the language to play, then press OK.
 - Note

Access BD-Live on Blu-ray

BD-Live enabled Blu-ray discs include exclusive services such as movies and other online bonuses.

- 1 Prepare the internet connection and set up the network (see 'Connect to a computer network and the Internet' on page 10).
- 2 Connect the USB storage device to the home theater.
- **3** Select the BD-Live icon in the disc menu, then press **OK**.
 - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- **4** Press the **Navigation buttons** to navigate BD-Live.
- 5 Press OK to select an item.

- Note

- The range of BD-Live services depends on the disc.
- When you use BD-Live, data on the disc and home theater are accessed by the content provider.
- Use a USB storage device with at least 1GB of free space to store the downloaded files.
- If there is insufficient memory to download BD-Live content, clear memory space.

Play 3D video

Your home theater can play 3D videos on 3DTVs. Before you start, make sure that:

- your TV is a 3D TV, and is connected to your home theater through HDMI,
- your disc is a Blu-ray 3D disc, and
- you have 3D glasses that are compatible with your 3D TV.
- 1 Insert a Blu-ray 3D disc into your home theater.
 - → Your TV switches to the correct HDMI source, and the disc plays automatically.
- 2 If the disc does not play automatically, press DISC or select [play Disc] in the home menu, and then press OK.
- **3** Press the play buttons to control play. When you search forward or backward, and in some other play modes, the video displays in 2D. It returns to 3D when you play normally again.
- 4 Put on the 3D glasses to enjoy the 3D effects.

Play 3D discs in 2D

- 1 Press 🛧 (Home).
- 2 Select [Setup] > [Video] > [Blu-ray 3D video] > [Off].
- 3 Press OK.

4

- Play your Blu-ray 3D disc.
 - \mapsto The 3D video is displayed in 2D.

Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures, listen to music or watch movies stored on a USB storage device.

- 1 Connect the USB storage device to the home theater.
- 2 Press ₳ (Home).
 - → The home menu appears.
- **3** Select [browse USB], then press OK.
 - → A content browser appears.
- Select a file, then press OK.
- 5 Press the playback buttons to control play (see 'Play a disc' on page 13).

- Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be NTFS, FAT or DOS-formatted, and Mass Storage Class compliant.

More play features for disc or USB

Several advanced features are available for video or picture playback from a disc or USB storage device.

Use video OPTIONS

Access several useful features while viewing video.

- Note

- Available video OPTIONS depend on the video source.
- Press ≡ OPTIONS / ⊕ (OPTIONS).
 → The video OPTIONS menu appears.
- 2 Press the Navigation buttons and OK to select and adjust:
 - [Audio Language] : Selects audio language for video.
 - [Subtitle Language] : Selects subtitle language for video.
 - [Subtitle Shift] : Adjusts the subtitle position on the screen.
 - **[Info]** : Displays information about what is playing.
 - [Character Set] : Selects a character set that supports the DivX subtitle.
 - [Time Search] : Skips to a specific part of the video by entering the time of the scene.
 - [2nd Audio Language] : Selects the second audio language to play.
 - [2nd Subtitle Language] : Selects the second subtitle language to play.

- [Titles] : Selects a specific title.
- [Chapters] : Selects a specific chapter.
- [Angle List] : Selects a different camera angle.
- [Menus] : Displays the disc menu.
- [PIP Selection] : Displays Picture-in-Picture window.
- [Zoom] : Zooms into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
- [Repeat] : Repeats a chapter or title.
- [Repeat A-B] : Marks two points within a chapter or track for repeat play, or turns off repeat mode.
- [Picture Settings] : Selects a predefined color setting.

Use picture OPTIONS

Access several useful features while viewing pictures.

- - → The pictures OPTIONS menu appears.
- 2 Press the Navigation buttons and OK to select and adjust:
 - [Rotate +90] : Rotates the picture 90 degree clockwise.
 - **[Rotate -90]** : Rotates the picture 90 degree counter-clockwise.
 - [Zoom] : Zooms into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Info] : Displays picture information.
 - [Duration per slide] : Sets the display speed for each picture in a slide show.
 - [Slide Animation] : Selects animation for the slide show.
 - **[Picture Settings]** : Selects a predefined color setting.
 - [Repeat] : Repeats a selected folder.

Use audio OPTIONS

Access several useful features while audio is played.

- 1 Press :≡ OPTIONS / ∃ (OPTIONS) repeatedly to cycle through the following functions:
 - **REPEAT TRACK** : Repeats the current track.
 - **REPEAT DISC** : Repeats all the tracks on the disc or folder.
 - **REPEAT RANDOM** : Plays audio tracks in random order.
 - **REPEAT OFF** : Turns off repeat mode.

Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow.

- Select a music track, then press **OK**.
- 2 Press → BACK and go to the picture folder.
- **3** Select a picture, then press **OK** to start slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

Play from PC (DLNA)

When you connect your home theater to your home network, you can play music, photo, and video from a computer or other media server on that network.

What you need:

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A Philips wireless USB adapter or a LAN able to connect your home theater to your home network.
- A media server such as:
- PC running Windows Media Player 11 or higher; or
- Mac running Twonky Media Server.

For help to use other media servers, such as TVersity, see the web site of the media server.

Set up media server software

Before you start:

- Connect your home theater to your home network (see 'Connect to a computer network and the Internet' on page 10).
- Connect your PC to the same home network.
- Make sure that your PC firewall allows you to run Windows Media Player programs.

In Microsoft Windows Media Player 11

- Connect the home theater to a network router (see 'Connect to a computer network and the Internet' on page 10).
- 2 Switch on the computer and router.
- 3 Open Windows Media Player on the computer.
- 4 Select Library > Media Sharing, then select settings to share your media.
- 5 Select Library > Add to Library, then select settings to share the folder containing your media.
- 6 Select Advanced OPTIONS, then add the folders to share.
- 7 Select Library > Apply Media Information Changes to activate the changes.

In Macintosh OS X Twonky Media (v4.4.2)

- Connect the home theater to a network router (see 'Connect to a computer network and the Internet' on page 10).
- 2 Switch on the Macintosh and router.
- Visit www.twonkymedia.com to purchase the software or download a free 30-day trial to your Macintosh.
- 4 Open Twonky Media on the Macintosh.
 - → The media sharing setting is turned on by default, thus enabling you to directly add folders for media sharing.
- 5 Select Basic Setup > Sharing, then select settings to add a folder location or add more folders.
- 6 Select Save Changes to activate the changes.

Play multimedia content

- Note

- Before playing multimedia content from the computer, ensure that the home theater is connected to the computer network and the media server software is properly set up.

→ The home menu appears.

- 2 Select [browse PC], then press OK.
 → A content browser appears.
- 3 Select a file, then press OK.
- 4 Press the playback buttons to control play (see 'Play a disc' on page 13).

Browse Net TV

With the home theater connected to the Internet, you can use NetTV to access videos, pictures, music, information, games and other online services.



 Koninklijke Philips Electronics N.V. bears no responsibility for content provided by Net TV service providers.

Access Net TV

- 1 Prepare the internet connection and set up the network (see 'Connect to a computer network and the Internet' on page 10).
- 3 Select [browse Net TV], then press OK.
 - → The NetTV home page appears.
- **4** Press the **Navigation buttons** to navigate Net TV web pages or services.
- 5 Press OK to view or select an item.
- 6 Press → BACK to return to the previous page, or press ♠ (Home) to exit.

Clear browsing history

Clear browsing history to remove passwords, cookies and browsing data from your home theater.

- 1 Press 🕁 (Home).
- 2 Select [Setup], then press OK.
- 3 Select [Network] > [Clear Net TV Memory], then press OK

Access online video stores

Rent videos from online stores, through your home theater. You can watch them right away or later. Many online video stores offer a huge choice of video, with different rental prices, periods, and conditions. For some stores, you must create an account before you can rent.

What you need:

- A high-speed internet connection to the home theater (see 'Connect to a computer network and the Internet' on page 10).
- An HDMI connection between your home theater and TV.
- An SD memory card of type SDHC Class 6, with at least 4GB of memory.

Format an SD card

Before you can rent online videos, your SD card must be in the SD card slot and formatted. After formatting, leave the card in place so that you are always ready to rent or watch.

When you have downloaded a video to your card, you can watch it only on your home theater. You can't move the card and watch it on another device. If you move the card and format it in another device, your downloaded video is erased. You must download your video again before you can watch.

To format an SD card



Switch your TV to the correct HDMI source for your home theater.

2 Insert the SD memory card into the SD CARD slot on your home theater.



- **3** Follow the on-screen instructions to format the card.
 - → Any content on the card is erased during formatting.
- 4 After formatting, leave the card in the SD CARD slot.

Rent and play online video

- 1 Prepare the internet connection (see 'Connect to a computer network and the Internet' on page 10).
- 3 Select [browse Net TV] > Video stores (Video stores), and then press OK.
- 4 Press the Navigation buttons to navigate to a video store, and press OK.
- 5 If prompted, follow the video store instructions to register or log in to an account.
 - → You see an option to rent videos.
 - ➡ If you have rented videos and are still within the rental period, you also see an option to watch the videos.
- 6 Follow the video store instructions to rent or watch a video.
 - → The video is downloaded to your SD memory card. You can watch it now or at any time within the rental period.
- 7 Press the play buttons on your remote control to play, pause, search, and stop the video.

Play from radio

The home theater can store up to 40 radio stations.

- 1 Check that the FM antenna is connected.
- 2 Press RADIO.
 - → "AUTO INSTALL...PRESS PLAY" appears on the display panel if you have not installed any radio stations. Press ►(Play).
- **3** Press the following buttons to control play:

	• •
Button	Action
I ⊲ / ►I	Selects a preset radio station.
Navigation buttons (left/right)	Searches for a radio station.
Navigation buttons (up/down)	Fine tunes a radio frequency.
	Press and hold to erase the preset radio station. Press to stop the installation of radio stations.
	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for five seconds to reinstall radio stations.
RADIO	Toggles between stereo and mono sound.

- Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Play audio from TV or other devices

Press **SOURCE** / **AUDIO SOURCE** repeatedly to select the audio output of the connected device.

Play from an MP3 player

Connect and play audio files from an MP3 player or other external audio devices.

- Connect the MP3 player to the home theater as described in the Quick start guide.
- 2 Press → SOURCE / AUDIO SOURCE repeatedly until 'MP3 LINK' appears on the display panel.
- **3** Press the buttons on the MP3 player to select and play audio files.

Play from an iPod or iPhone

By connecting and installing a Philips Dock for iPod/iPhone, you can use the home theater to play music, movies and photos from your iPod or iPhone.



• You can charge your iPod/iPhone on the dock while the home theater is in iPod mode.

Dock your iPod or iPhone

- 1 Move the slide at the bottom of the dock to 'STANDARD', then connect the dock to the home theater.
- 2 Connect the yellow composite cable from the dock to the TV.
- **3** Switch on the iPod or iPhone and place it in the dock.
- 4 On the home theater remote control, press
 ★ (Home), then select [browse iPod] and press OK.

Listen to music

- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 999).
- 2 Press DOCK for iPod on the home theater remote control.
 - ightarrow The playlists are displayed on the TV.
- **3** Press the Navigation buttons and OK to select and play tracks.

Watch video or view slideshows

- Note

- On iPod, enable the TV ON setting.
- On iPhone, select the TV Out option.
- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 999).
- 2 Switch the TV to the AV/VIDEO source (corresponding to the yellow composite cable).
 - → The TV screen goes blank.
- **3** Browse on the iPod or iPhone screen to select videos or photos.
- 4 Press ► (Play) to play the video and photos.
 → The picture is displayed on the TV.

Use Philips EasyLink

The home theater supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLinkcompliant devices that are connected through HDMI connectors can be controlled by a single remote control.

- Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.
- Switch on the HDMI CEC operations on the TV and other connected devices. See the manual of the TV or other devices for details.
- 2 Press ₳ (Home).

- 3 Select [Setup], then press OK.
- 4 Select [EasyLink] > [EasyLink], then press OK.
- 5 Select [On], then press OK.
- 6 You can now enjoy the following Philips EasyLink controls.

One-touch play

When you play a disc, the TV automatically switches to the correct channel.

One-touch standby

When you press and hold \mathfrak{O} (**Standby**) on the remote control, the home theater and all the connected HDMI CEC devices (if they support one-touch standby) switch to standby mode simultaneously.

System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, enable this feature and follow the instructions on the TV to map the connected devices correctly to the audio input jacks of the home theater.

Audio Input Mapping

Updates audio input mapping if there are new devices connected.

5 Change settings

This section helps you to change the settings of your home theater.

Caution

• Most of the settings are already configured with the best value for the home theater. Unless you have a specific reason to change a setting, it is best to leave it at the default value.

Access the setup menu

- 1 Press 🛧 (Home).
- 2 Select [Setup], then press OK.
 - \mapsto The setup menu appears.
- 3 Select a setup menu, then press OK. See the following sections for information about how to change the settings of your home theater.
- 4 Press → BACK to return to the previous menu, or press to exit.

- Note

• You cannot change a setting that is grayed out.

Change video settings

- 1 Press 🕇 (Home).
 - Select [Setup], then press OK.
 - Select [Video], then press OK.
 - Select and adjust the following settings:
 - **[TV Display]**: Selects a picture display format to fit the TV screen.
 - [HDMI Video]: Selects the HDMI video resolution.
 - [HDMI Deep Color]: Displays colors with more shades and hues when the video content is recorded in Deep Color and the TV supports this feature.

- [Component Video]: Selects the component video resolution. Copyprotected DVDs can display only 480p/576p or 480i/576i.
- [Blu-ray 3D video]: Selects the 3-dimensional video output when you play a 3D video on your home theater. The home theater must be connected to a 3D TV through HDMI.
- [Picture Settings]: Selects a predefined color setting.
- 5 Press OK to confirm your choice.

- Note

- The best setting is automatically selected for the TV. If you change the setting, ensure that the TV supports the new setting.
- For settings related to HDMI, the TV must be connected through HDMI.
- For settings related to progressive or component video, the TV must be connected through Component Video.

Change audio settings

Press <table-cell-rows> (Home).

Select [Setup], then press OK.

Select [Audio], then press OK.

Select and adjust the following settings:

- [Night Mode]: Selects quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases the volume of soft sounds such as speech.
- [HDMI Audio]: Selects HDMI audio format or disables HDMI audio output for the TV.
- [360Sound Setup]: Calibrates the speakers to 360 degrees SOUND SETTINGS when a calibration microphone is connected to the home theater.
- [Speaker Setup]: Sets the volume level and distance of each speaker to obtain the best possible surround sound based on your room setup.

5 Press OK to confirm your choice.

- Note


- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is available for Dolby encoded DVD and Blu-ray discs (for models support Blu-ray playback).

 
Set up surround sound automatically

When you set up the home theater for the first time, the setup menu prompts you to calibrate your speakers for the best surround sound. If you move your speakers or change the layout of the room, calibrate the speakers again to continue getting the best sound.

Before you start, make sure that the calibration microphone is less than 5m from each of the speakers. If it is more, set up your sound manually (see 'Set up surround sound manually' on page 22).

- 1 Connect your speakers and subwoofer as described in the Quick Start. For the best surround sound, turn your rear speakers to face your listening position.
- 2 Connect the calibration microphone to the MP3 LINK connector on your home theater and place it in your usual listening place, at ear height.

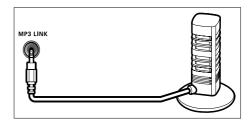



- 3 Make sure that there is nothing between the speakers and the microphone to block the sound, and make sure that the room is quiet. For example, switch off your TV or radio, close doors and windows, and switch off the air conditioning. Don't put the microphone on top of speaker.
- 4 Press 🖨 (Home) on your home theater remote control, and select [Setup] > [Audio] > [360Sound Setup].
- 5 Follow the onscreen instructions to set up the sound.
 - → During the calibration, you hear a series of test tones from the speakers and the subwoofer. These sounds are normal don't change the volume or move the speakers, and be sure to keep guiet until the calibration finishes.
- 6 After the auto calibration, disconnect the calibration microphone.

Set up surround sound manually

Your home theater has a calibration microphone that allows you to calibrate your speakers automatically. If your speakers are more than 5m (16 feet) away from the calibration microphone, you can still get the best surround sound by setting them up manually.

- 1 Connect your speakers and subwoofer as described in the Quick Start. For the best surround sound, turn your rear speakers to face your listening position.
- 2 Press **1** (Home) on your home theater remote control, and select [Setup] > [Audio] > [Speaker Setup].
- 3 Enter the distance for each speaker, and then listen to the test tones and adjust the volume

Set up network

- 1 2 3 Press (Home).
- Select [Setup], then press OK.
- Select [Network], then press OK.
- Select and adjust the following settings:
 - [Network Installation] : Starts wired (Ethernet) or wireless setup. Follow the instructions to set up the network connection.

- [View Network Settings] : Displays the current network settings.
- [View Wireless Settings] : Displays the current Wi-Fi settings.
- [Net TV User Location] : Selects the location for accessing Net TV content and services.
- [Clear Net TV Memory] : Clears Net TV memory, delete the temporary downloaded files (e.g., cookies) of the Net TV browser.
- 5 Press OK to confirm your choice.

Set up EasyLink

- 1 Press **1** (Home). 234
 - Select [Setup], then press OK.
 - Select [EasyLink], then press OK.
 - Select and adjust the following settings:
 - [EasyLink] : Enables or disables EasyLink.
 - [One Touch Play] : Enables or disables One Touch Play.

If enabled, you can use the remote control to start disc play in the home theater and the TV switches. automatically to the correct channel.

[One Touch Standby] : Enables or disables One Touch Standby.

If enabled, the home theater can be switched off to standby by a remote control from the TV or other connected HDMI CEC devices.

[System Audio Control] : Enables or disables System audio control.

> If enabled, follow the instructions on the TV to map the connected devices correctly to the audio connectors of the home theater. The home theater switches automatically to the audio source of the connected device.

- [Audio Input Mapping] : Updates audio input mapping if there are new devices connected.
- 5 Press OK to confirm your choice.

Note

The connected devices must be connected through HDMI and switched on.

Multiview

On Philips 21:9 Cinema TV (model 58PFL9955H/12), you can watch two video sources side by side. The sources can be:

- video from your home theater,
- TV broadcasts, and
- Net TV.

For information about how to set up multi-view, see yourTV user manual.

Change preference settings

- 1 2 3 Press (Home).
 - Select [Setup], then press OK.
 - Select [Preference], then press OK.
 - Select and adjust the following settings:
 - [Menu language] : Selects the on-screen display menu language.
 - [Audio] : Selects audio language for video.
 - [Subtitle] : Selects subtitle language for video.
 - [Disc Menu] : Selects menu language for video disc.
 - [Parental Control] : Restricts access to discs that are recorded with ratings. To play all discs irrespective of the rating, select level '8'.
 - [Screen Saver] : Enables or disables screen saver mode. If enabled. the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
 - [Auto Subtitle Shift] : Enables or disables shift subtitle. If enabled, it adjusts the subtitle position automatically to fit the TV screen.
 - [Change Password] : Sets or changes a PIN code to play a restricted disc. Enter '0000' if you do not have a PIN or if you have forgotten your PIN.
 - [Display Panel] : Changes the brightness of the display panel.
 - [Auto Standby] : Enables or disables auto standby. If enabled, the home theater switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
 - [VCD PBC] : Displays or skips the content menu for VCD and SVCD discs.

- [Sleep Timer] : Sets a sleep timer to switch the home theater to standby after a specific time.
- 5 Press OK to confirm your choice.

Note

- If your preferred disc language is not available, you can select [Other] from the list and enter the 4-digit language code which can be found at the back of this manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Change advanced settings

- 1 Press (Home). 2 3
 - Select [Setup], then press OK.
 - Select [Advanced], then press OK.
 - Select and adjust the following settings:
 - [BD-Live Security] : Restricts or allows access to BD-Live.
 - [Enhanced Audio] : Enables or disables the audio post processing at the speaker output.
 - [Software Update] : Selects to update software from the network or from USB storage device.
 - [Clear memory] : Clears local memory, delete the BD-Live files that you previously downloaded. If using an USB storage device, the local storage folder is 'BUDA'.
 - [DivX[®] VOD Code] : Displays the DivX VOD registration code for the home theater.
 - [Version Info.] : Displays the software version for the home theater.
 - **[Restore default settings]** : Resets the home theater to the default settings programmed at the factory.
- 5 Press **OK** to confirm your choice.

Note

- You cannot restrict internet access on commercial Blu-ray discs.
- Before you purchase DivX videos and play them on the home theater, register the home theater on www.divx.com using the DivX VOD code.
- You cannot reset parental control setting to its default value.

6 Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

Check software version

- 2 Select [Setup], then press OK.
- 3 Select [Advanced] > [Version Info.], then press OK.
 - → The software version is displayed.

Update software from the network

- 1 Prepare the internet connection (see 'Connect to a computer network and the Internet' on page 10).
- 2 Press ♠ (Home) and select [Setup].
- 3 Select [Advanced] > [Software Update] > [Network].
 - → If an upgrade media is detected, you are prompted to start or cancel the update.
- 4 Follow the instruction on the TV to confirm the update.
 - → When complete, the home theater automatically switches off and restarts.
 - If not, disconnect the power cord for a few seconds and then reconnect it.

- Note

Update software from a USB

- Check for the latest software version on www.philips.com/support.
 - Search for your model and click on 'software and drivers'.
- 2 Create a folder named 'UPG' in the root directory of your USB storage device.
- **3** Download the software into the '\UPG' folder of the USB storage device.
- 4 Unzip the software in the '\UPG' folder.
- 5 Connect the USB storage device to the home theater.

Select [Advanced] > [Software Update] > [USB].

- 8 Follow the instructions on the TV to confirm the update.
 - → When complete, the home theater automatically switches off and restarts.
 - If not, disconnect the power cord for a few seconds and then reconnect it.

Caution

• Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage the home theater.

Update electronic user manual

- Check the current version of the electronic user manual installed in your home theater (see 'Check software version' on page 24).
- Insert a USB storage device into your PC.
 In your web prowser navigate to www.
- 3 In your web browser, navigate to www. philips.com/support, and find your product.
- 4 Click on 'Software and drivers' in the left panel, and then locate the 'Electronic Manual'. The electronic user manual is compressed into a *.zip archive.
- 5 If the *.zip file at the Philips Support website is a later version than the file in your home theater, download the file in the root directory of your USB storage device.
- 6 Unzip the downloaded file in the root directory of the USB storage device.
 - ➡ A file named 'HTSxxxxeDFU.zip' is extracted in the '\UPG' folder of your USB storage device, 'xxxx' being the model number of your home theater.
- 7 Disconnect the USB storage device from the PC, and connect it to the home theater.
- - Ensure that there is no disc inside the disc compartment of your home theater and it is closed.
- Press [3], [3], [8] on the remote control.
 → Software update starts. When complete, the home theater automatically switches off and restarts.
- **10** When complete, disconnect the USB storage device from the home theater.

Caution

- Do not turn off the power or remove the USB storage device during the update.
- If power failure occurs during the update, do not remove the USB flash drive from the home theater. The home theater continues the update as soon as the power is restored.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

7 Product specifications



 Specification and design are subject to change without notice.

Region code

The type plate on the back or bottom of the home theater shows which regions it supports

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		0
China		\bigcirc

Playback media

 AVCHD, BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R
 DL, CD-R/CD-RW, Audio CD, Video CD/ SVCD, Picture files, MP3 media, WMA media, DivX (Ultra)/DivX Plus HD media, USB storage device

File Format

- Audio: .mp3, .wma, .wav
- Video: .avi, .divx, .mp4, .mkv, .wmv
- Picture: .jpg, .gif, .png

Amplifier

- Total output power: 800W RMS
- Frequency response: 40 Hz-20 kHz / ±3dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)

- Input sensitivity:
 - AUX1, AUX2: 400 mV
 - MP3 LINK: 150 mV

Video

- Signal system: PAL / NTSC
- Component video output: 480i/576i, 480p/576p, 720p, 1080i
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

Audio

- S/PDIF Digital audio input:
 - Coaxial: IEC 60958-3
 - Optical: TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 112 kbps 320 kbps
 - WMA: 48 kbps 192 kbps

Radio

- Tuning range:
 - Europe/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Russia/Latin America/India: FM 87.5-108 MHz (50/100kHz)
- Signal-to-noise ratio: FM 55 dB
- Frequency response: FM 60 Hz-12.5 kHz / ±3dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: NTFS, FAT16, FAT32
- Maximum memory support: < 160GB

Main Unit

- Power supply:
 - Europe/China: 220-240V, ~50 Hz;
 - Latin America/Asia Pacific: 110-127V/220-240V, ~50-60Hz;
 - Russia/India: 220-240V, ~50Hz
- Power consumption: 125 W
- Standby power consumption: ≤ 0.22 W
- Dimensions (WxHxD): 437 x 75 x 342 (mm)
- Weight: 4.5 kg

Subwoofer

- Impedance: 4 ohm
- Speaker drivers: 165 mm (6.5'') woofer
- Frequency response: 40 Hz-150 Hz
- Dimensions (WxHxD): 196 x 397 x 342 (mm)
- Weight: 6.4 kg
- Cable length: 3 m

Speakers

- System: full range satellite
- Speaker impedance: 4 ohm (center), 6 ohm (Front/Rear)
- Speaker drivers:
 - Center: 2 x 2.5" woofer + 1" soft-dome tweeter
 - Front/Rear: 2 x 2.5" full range + 2.5" woofer + 1" soft-dome tweeter
- Frequency response: 150 Hz-20 kHz
- Dimensions (WxHxD):
 - Center: 435 x 85 x 111 (mm)
 - Front/Rear : 99 × 247 × 117 (mm)
- Weight:
 - Center: 1.67 kg
 - Front/Rear : 1.17 kg/each
- Cable length:
 - Center: 2 m
 - Front: 3 m
 - Rear: 10 m

Laser Specification

- Laser Type (Diode): InGaN/AIGaN (BD), AIGaInP (DVD/CD)
- Wave length: 405 +5nm/-5nm (BD), 655 +5nm/-10nm (DVD), 790 +10nm/-10nm (CD)
- Output power (Max. ratings): 20mW (BD), 6mW (DVD), 7mW (CD)

8 Troubleshooting

Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here: Model No.

Serial No.

Main unit

The buttons on this home theater do not work.

• Disconnect the home theater from the power outlet for a few minutes, then reconnect.

Picture

No picture.

• Ensure that the TV is switched to the correct source for the home theater.

No picture on HDMI connection.

- Change the HDMI video setting or wait for 15 seconds for auto recover.
- Check if the HDMI cable is faulty. Replace with a new HDMI cable.

No picture on the Component (Y Pb Pr) connection.

 If the HDMI video connection is set to [Auto] or [1080p/24Hz], there is no video output through the component connection. Change the HDMI video setting or remove the HDMI connection.

No high-definition video signal on the TV.

- Ensure that the disc contains high-definition video.
- Ensure that the TV supports high-definition video.

Sound

No sound.

 Ensure that the audio cables are connected and select the correct input source (for example, ♪ SOURCE / AUDIO SOURCE) for the device you want to play.

No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (Highbandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the [HDMI Audio] is enabled.

No sound from TV program.

 Connect an audio cable from the audio input on the home theater to the audio output on the TV, then press > SOURCE / AUDIO SOURCE repeatedly to select the correct audio source.

Distorted sound or echo.

• Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

Audio and video are not synchronized.

 1) Press III SOUND SETTINGS / III (Sound OPTIONS) . 2) Press the Navigation buttons (left/right) repeatedly until AUDIO SYNC is displayed, then press OK. 3) Press the Navigation buttons (up/down) to sync the audio with the video.

Cannot calibrate the speakers by using the calibration microphone.

- Ensure that the speakers, subwoofer, and calibration microphone are connected as described in the Quick Start.
- Try a different position for the speakers, and then calibrate the speakers again.
- Ensure that you follow all the steps for auto calibration (see 'Set up surround sound automatically' on page 21).
- If you cannot calibrate the speakers automatically, or are unhappy with the automatic settings, set up the speakers manually (see 'Set up surround sound manually' on page 22).

Play

Disc cannot be played.

- Clean the disc.
- Ensure that the home theater supports the disc (see 'Product specifications' on page 25).

- Ensure that the home theater supports the region code of the disc.
- For DVD±RW or DVD±R, ensure that the disc is finalized.

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

DivX subtitles do not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.

The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 25).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater.

'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink feature does not work.

• Ensure that the home theater is connected to a Philips brand EasyLink TV and that EasyLink is on.

I do not want my home theater to be switched on when I switch on my TV.

• This is the correct behavior for Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

I cannot access BD-Live features.

- Check the network connection (see 'Connect to a computer network and the Internet' on page 10) or ensure that the network has been set up (see 'Set up network' on page 10).
- Clear memory storage. (see 'Change advanced settings' on page 23)
- Ensure that the Blu-ray disc supports BD-Live feature.

The video (movies, photos, video clips, etc.) contents of the iPod/iPhone do not display on TV.

• Video and photo browsing is not supported, you can only browse the video and photo contents on the iPod/iPhone itself.

Cannot see pictures from my iPod/iPhone on the TV.

- Connect a yellow composite cable from the dock to the TV.
- Switch the TV to the AV/VIDEO source (corresponding to the yellow composite cable).
- Press **PLAY** on the iPod or iPhone to start the slideshow.

The audio is interrupted when I play music from my iPod or iPhone in the docking station.

• Ensure that you have installed the latest firmware on your iPod or iPhone. For more information, refer to the support website of your iPod or iPhone.

My 3D video plays in 2D mode.

- Ensure that your home theater is connected to your 3D TV through HDMI.
- Ensure that your disc is a Blu-ray 3D disc.
- Ensure that the **[Blu-ray 3D video]** setting is turned on (see 'Change video settings' on page 20).

I see black video on my TV screen.

- Ensure that your home theater is connected to the TV through HDMI.
- Switch to the correct HDMI source on your TV.

I cannot download the video from the online video store.

- Ensure that your home theater is connected to the TV through HDMI.
- Ensure that the SD card is in place and formatted.
- Ensure that the SD memory card has enough memory to download the video, and is of type SDHC Class 6.
- Ensure that you have paid for the video and are within the rental period.
- Check the network connection (see 'Connect to a computer network and the Internet' on page 10).
- Contact the online video store for more help.

Network

Wireless network not found or distorted.

- Ensure that the wireless network is not disturbed by the microwave ovens, dect phones or other Wi-Fi devices in your neighbourhood.
- Try the wired network installation if the wireless network does not work properly (see 'Set up network' on page 999).

9 Index

3	
360 degree sound	21, 22
3D video	14

A

amplifier	25
audio	
connection	9
language	23
synchronize with video	13
audio input mapping	19, 22
auto calibration	21
automatic speaker setup	21

В

BD-Live	
access	14
set up	10
Bonus View	13
Browse	
Net TV	17
PC	17

С

calibration	21
care	2
change settings	20
chapter	15
connect	
audio from TV	9, 19
guide	7
network	10
other devices	9
TV	8
wireless module	11
connectors	7
contact us	27

D

_	
disc	
play	13
supported discs	25
disposal of your product	3
DivX	
character set	15
DLNA	16
Download video	17

Ε

19, 22	English
25	
17	
	25

H HD

HDMI CEC (see Easylink)	
-------------------------	--

19

I

•	
Internet	
BD-Live	14
connect	10
online video stores	17
software update	24
iPod	
play	19
slideshow	19

L Iar

anguage	
audio	15, 23
disc menu	23
on-screen display	23
subtitle	15, 23

Μ

manual speaker setup	22
media server software set up	16
MP3 play	19
Multiview	23

N

Net TV network	17
connect	10
set up	10
software update	24

EN 29

0

•	
one-touch play	19, 22
one-touch standby	19, 22
online video stores	17
overview	
connectors	7
main unit	4
remote control	4

Ρ

password (PIN code)	23
picture	
OPTIONS	15
rotate	15
slide show	16, 15
troubleshooting	27
picture-in-picture	
2nd audio language	13
2nd subtitle language	13
enable	13
play	
2D video	14
3D video	14
disc	13
from PC	16
MP3 player	19
multimedia content	16
options	13
radio	18
troubleshooting	27
USB storage device	14
product care	2
product specifications	25

R

radio	
play	18
program	18
tune	18
recycle	3
region code	25
remote control	4
rent video	17, 18
repeat	15, 13
rotate pictures	15

S safety SD card settings EasyLink

network parental control preferences slideshow	22 23 23
animation	15
duration	15
play from iPod/iPhone	19
play musical slideshow	16
software	
update	24
version	24
sound	
auto volume	12
mode	12
surround	12
treble and bass	13
troubleshooting	27
speaker setup	21, 22, 21
subtitle	
language	15, 23
subtitle shift	15, 23
Surround sound setup	21, 22
system audio control	19

Т

time search video title troubleshooting TV	15 15 27
audio from TV	9, 19
connect	8

U

USB	
play	14
software update	24

۷

video	
online video stores	17
options	15
rent and watch a video	17
synchronize with audio	13

W

2 17

22

wireless	module	

11

Language Code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu Bashkir	7783
	6665
Belarusian	6669
Bengali Bihari	6678 6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanj	
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
ldo	7379
Interlingua (Internationa	
Interlingue Inuktitut	7365 7385
muktitut	/ 305

Inupiaq	7375
lrish	7165
lslenska	7383
Italiano	7384
lvrit	7269
Japanese	7465 7486
Javanese Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish Lao	7585 7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx	7186
Maori Marathi	7773 7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868 7878
Norwegian Nynorsk; Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa Xiddiah	8872
Yiddish Yoruba	8973 8979
Zulu	9085
Zuiu	2005



© 2011 Koninklijke Philips Electronics N.V. All rights reserved. sgptt_1138/12_v4