# Quick start guide

Step A Connect

Step B


Setup


Step C


Enjoy

#### What's in the Box?



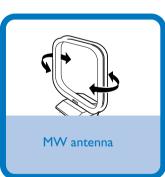

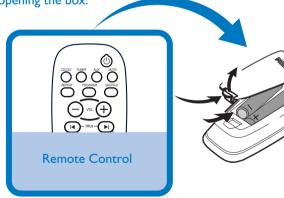

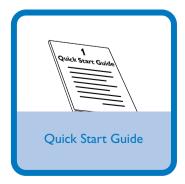






## Step A Connect

Connect the speaker cables.

Connect the MW antenna.

Connect the power cable of the system.

See the User Manual for how to connect other equipment to this system.

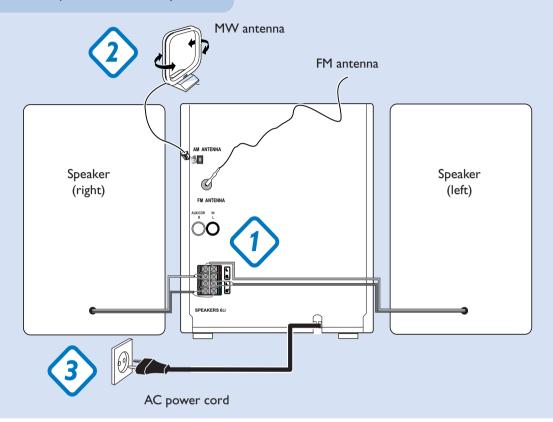


## Step B Setup


## Setting the clock

In standby or view clock mode, press **CLOCK** on the remote control once. In other source mode, press **CLOCK** twice.

Press **PROGRAM** on the remote control to select clock mode. The clock can be set in either 12-hour or 24-hour mode.

 Press or repeatedly to set the hour.



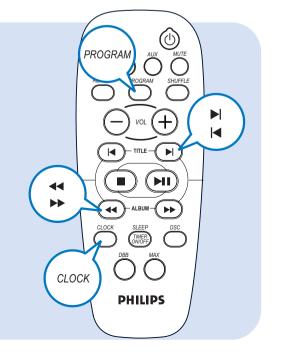

# Step C Enjoy

### Playing a disc

0

Press OPEN•CLOSE to open the disc tray and load up to two discs on the individual disc trays. To load the third disc, press DISC CHANGE

→ Make sure the label side of each loaded disc is facing up.



Press **OPEN•CLOSE** again to close the disc tray.



Use CD 1/2/3 to select a disc for playback and then press PLAY•PAUSE ▶ ■ to start playback.

4

To stop playback, press **STOP**■.

#### Tuning to radio stations




Press **TUNER** to select the tuner source.

2

Press TUNER again to select the desired waveband: FM or MW.



Turn the **TUNING** knob on the system until the frequency indication starts to change.

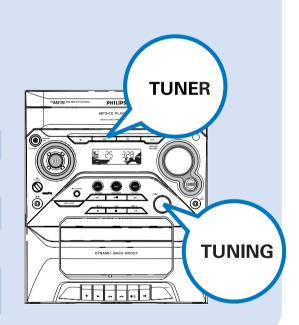

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

