

Always there to help you
Register your product and get support at
www.philips.com/support



AJ3275DZ




EN Short User Manual
ZH-CN 短版使用手册

PHILIPS




EN
To download the full user manual, visit www.philips.com/support.

ZH-CN
要下载完整用户手册, 请访问 www.philips.com/support

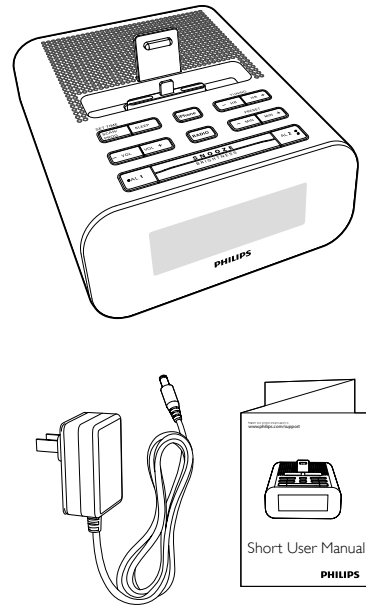


EN
To download the full user manual, visit www.philips.com/support.

ZH-CN
要下载完整用户手册, 请访问 www.philips.com/support

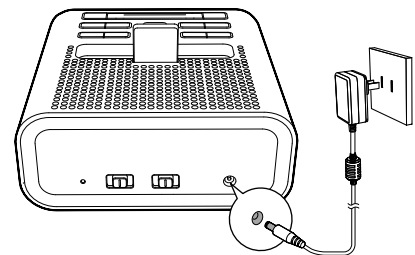


EN
For first-time use:
Remove the protective tab to activate the battery.

ZH-CN
首次使用时:
取下保护片以激活电池。

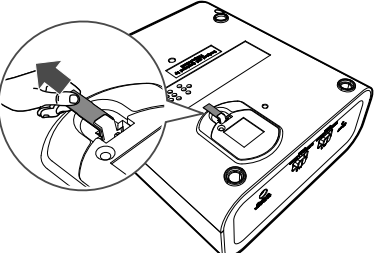

EN
Note: The lithium CR2032 battery can only backup time and alarm settings.


ZH-CN
注: CR2032 锂电池只能备份时间和闹钟设置。

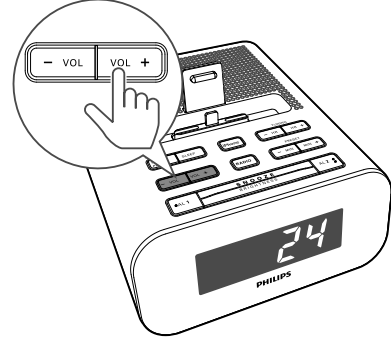

Specifications are subject to change without notice.
2014 © WOOX Innovations Limited. All rights reserved.
Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.



AJ3275DZ_93_Short User Manual_V1.0



EN
SET TIME
1 SCAN/PROG 2 sec


2 - HR HR + / - MIN MIN +

ZH-CN
SET TIME
3 SCAN/PROG

4 - HR HR +

5 - MIN MIN +

6 SET TIME SCAN/PROG

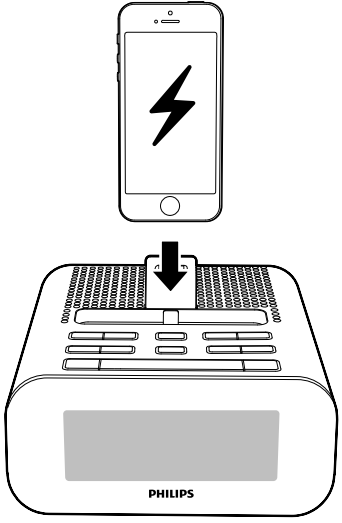


EN
1 Place the iPod/iPhone in the dock.
2 Press **iPhone** on the clock radio to enter iPod/iPhone mode.
3 Play audio on the iPod/iPhone.
• To skip to a track, press - HR/HR + (or - MIN/MIN +).
• To search during play, press and hold - HR/HR + (or - MIN/MIN +), then release to resume normal play.
• Press **iPhone** on the clock radio again to switch to standby mode.

ZH-CN
1 将 iPod/iPhone 放在底座中。
2 按时钟收音机上的 **iPhone** 键可进入 iPod/iPhone 模式。
3 播放 iPod/iPhone 中的音频。
• 要跳至某首曲目, 请按 - HR/HR + (或 - MIN/MIN +)。
• 要在播放期间搜索, 请按住 - HR/HR + (或 - MIN/MIN +), 然后放开可恢复正常播放。
• 再次按时钟收音机上的 **iPhone** 键切换至待机模式。

iPod nano (7th generation) ✓
iPod touch (5th generation)
iPhone 6 Plus, iPhone 6,
iPhone 5s, iPhone 5, iPhone 5c

EN
Tune to FM radio stations

ZH-CN
调谐至 FM 电台



EN
Press **RADIO** repeatedly to turn on or off the radio.

ZH-CN
反复按 **RADIO** 打开或者关闭收音机。

EN
Store FM radio stations automatically

ZH-CN
自动存储 FM 电台

1 SET TIME SCAN/PROG 2 sec

2 PRESET - MIN MIN +

EN
Store FM radio stations manually



ZH-CN
手动存储 FM 电台


1 TUNING - HR HR +

2 SET TIME SCAN/PROG

3 PRESET - MIN MIN +

4 SET TIME SCAN/PROG

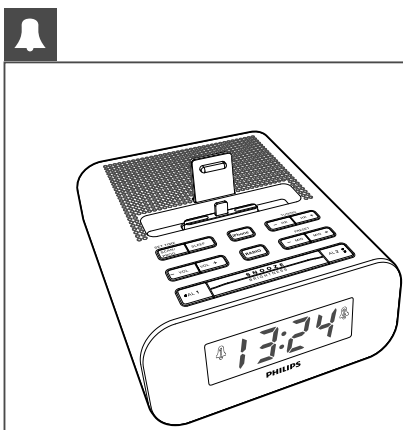

EN

Set the alarm timer

- Press and hold **AL1/AL2** for 2 seconds to enter alarm setting mode.
→ The hour and minute digits blink.
→ **A** or **A** is displayed accordingly.
- Press **- HR/HR +** and **- MIN/MIN +** to set hour and minute respectively.
- Press **AL1/AL2** again to confirm.

Note:

- Make sure that you have set the clock correctly.
- When alarm sounds, press **SNOOZE**. The alarm snoozes and repeats ringing nine minutes later.

ZH-CN

设置闹钟定时

- 在按住 **AL1/AL2** 2 秒钟，以进入闹钟设置模式。
→ 小时和分钟数字开始闪烁。
→ **A** 或 **A** 将相应显示。
- 按 **- HR/HR +** 和 **- MIN/MIN +** 可分别设置小时和分钟。
- 再次按 **AL1/AL2** 确认。

注:


- 确保您已正确设置时钟。
- 闹钟响起时，按 **SNOOZE**。九分钟以后，闹钟再响并重复响铃。

EN

Select the alarm sound

ZH-CN



选择闹钟声音

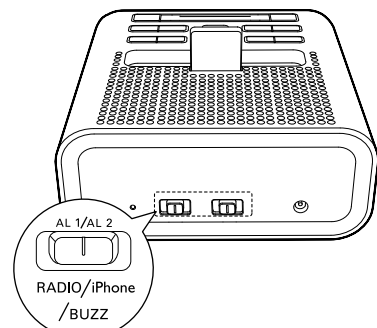

zzz



120 → 90 → 60 → 30 → 15
OFF

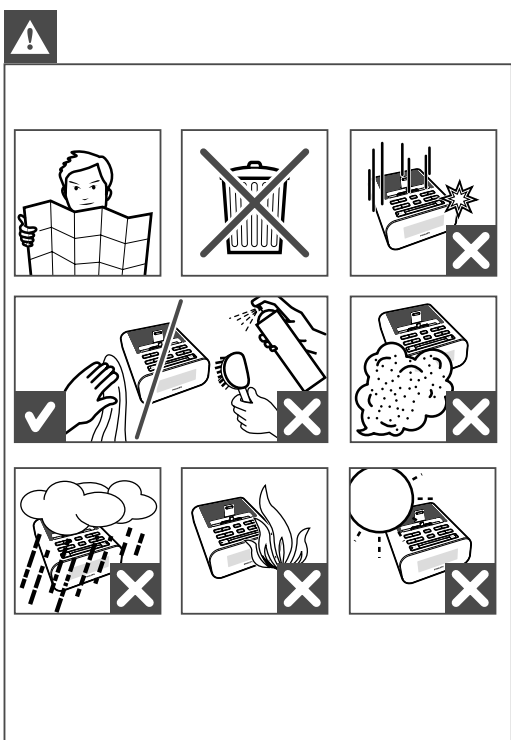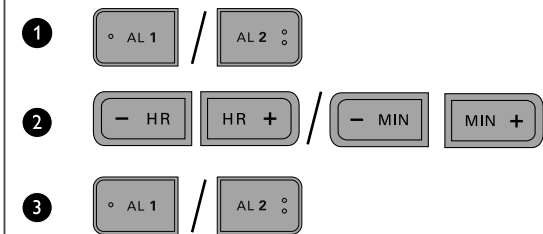

EN

Specifications

Amplifier	
Rated Output Power	2W RMS
Tuner	
Tuning Range	FM: 87.5 - 108 MHz
Tuning Grid	FM: 50 KHz
Sensitivity	- Mono, 26dB S/N Ratio FM: <22 dBf
Total Harmonic Distortion	FM: <3%
Signal to Noise Ratio	FM: >50 dBA
General information	
AC Power	Model: AS100-050-AB200; Input: 100-240 V ~, 50/60Hz, 0.5A; Output: 5 V == 2 A
Operation Power Consumption	<10 W
Standby Power Consumption	<2 W

Max. Load for iPod/iPhone	5 V == 1 A
Dimensions - Main Unit (W x H x D)	130 x 76 x 145 mm
Weight - Main Unit	0.3 kg

ZH-CN

规格

功放器	
额定输出功率	2W RMS
调谐器	
调谐范围	FM: 87.5 - 108 兆赫
调谐栅	FM: 50 千赫

灵敏度	- 单声道, 26dB 信噪比	FM: <22 dBf
总谐波失真		FM: <3%
信噪比		FM: >50 dBA

一般信息	
交流电源	型号: AS100-050-AB200; 输入: 约 100-240 伏, 50/60赫兹, 0.5安; 输出: 5 伏 == 2 安
操作功耗	<10 瓦
待机功耗	<2 瓦
iPod/iPhone 最大负载	5 伏 == 1 安
尺寸 - 主装置 (宽 x 高 x 厚)	130 x 76 x 145 毫米
重量 - 主装置	0.3 千克

EN

1 Important

Warning

- Never remove the casing of this clock radio.
- Never lubricate any part of this clock radio.
- Never place this clock radio on other electrical equipment.
- Keep this clock radio away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.

- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specified by the manufacturer.
- Use only power supplies listed in the user manual.
- The clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

2 Notice

Any changes or modifications made to this device that are not expressly approved by WOXX Innovations may void the user's authority to operate the equipment.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point or recycling. By doing this, you help to preserve the environment.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet). Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This is CLASS II apparatus with double insulation, and no protective earth provided.

Note

- The type plate is located on the bottom of the apparatus.

ZH-CN

1 注意事项

警告

- 切勿拆下本时钟收音机的外壳。
- 切勿润滑本时钟收音机的任何部件。
- 切勿将本时钟收音机置于其他电器设备之上。
- 应让本时钟收音机远离阳光直射、明火或高温。
- 确保始终可轻易地接触到电源线、电源插头或适配器，以便于断开时钟收音机的电源。

- 请确保产品周围有足够的空间进行通风。
- 仅使用制造商指定的附件/配件。
- 仅使用用户手册中列出的电源。
- 不得将时钟收音机暴露于漏水或溅水环境下。
- 不要将任何危险源放在本时钟收音机上（例如装有液体的物体、点燃的蜡烛）。
- 如果将直插式适配器的插头用作断开设备，则断开设备应可以随时使用。

吞咽电池的危險

- 本产品或遥控器可能包含纽扣电池，并可能被吞咽。始终将电池放在儿童接触不到的地方！如不慎吞咽，电池可能导致严重受伤或死亡。摄入后 2 小时内可能发生严重的内部烧伤。
- 如果您怀疑电池不慎被吞咽或位于体内的任何部位，请立即就医。
- 更换电池时，请务必将所有新旧电池放在儿童接触不到的地方。更换电池后，确保电池仓完全紧闭。

- 如果电池仓无法完全紧闭，请不要继续使用产品。放在儿童接触不到的地方并联系制造商。

2 注意

如果用户未经 WOXX Innovations 的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。



"Made for iPod" and "Made for iPhone" 表示电子附件专为连接 iPod 或 iPhone 而设计，并经开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全和法规标准不负任何责任。请注意，通过 iPod 或 iPhone 使用该附件可能影响无线性能。iPod 和 iPhone 是 Apple Inc. 在美国和其它国家/地区注册的商标。

弃置旧产品



本产品采用可回收利用的高性能材料和组件制造而成。弃置产品时，请不要将其与一般生活垃圾一同丢弃，应将其交给政府指定的回收中心或回收。这样做有利于环保。

环境信息

已省去所有不必要的包装。我们努力使包装易于分为三种材料：纸板（盒）、泡沫塑料（缓冲物）和聚乙烯（袋、保护性泡沫片）。您的系统包含可回收利用的材料（如果由专业公司拆卸）。请遵守当地有关包装材料、废电池和旧设备的处理的规定。

此款 II 类设备具有双重绝缘，不提供保护接地。

注

- 铭牌（铭牌上的信息包括工作电压、消耗功率）位于主机底部，使用前请先了解铭牌上的相关信息。

产品中有害物质的名称及含量

部件名称 Name of the Parts	有害物质 Hazardous Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬 (Chromium (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
LCD Panel 液晶面板	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	○	○	○	○	○	○
Accessories (cables) 附件 (电源线)	○	○	○	○	○	○
Batteries 电池	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
The table is compiled according to SJ/T 11364.

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。
○: Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求。
×: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.



环保使用期限 Environmental Protection Use Period

这标志表示的期间 (10 年) 是电子产品中有害物质在正常使用条件下不会发生外泄或突变、电子产品用户使用该电子产品不会对环境污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.