PHILIPS


# Quick Start Guide



## Connection

- For radio reception, connect the supplied MW antenna to the MW aerial terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.
- **3** Connect the power cord of the system to the AC power outlet.


**Tip** It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

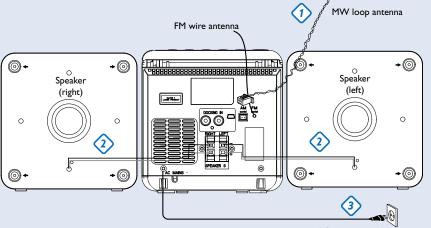


AC power cord

### Setting the clock

- 1 In standby mode, press **PROG/CLOCK** button. The clock digits for the hours flash.
- 2 Press | | | | | to set the hours.
- **3** Press **PROG/CLOCK** again. The clock digits for the minutes flash.
- 4 Press < / >>> to set the minutes.
- 5 Press **PROG/CLOCK** to confirm the time.

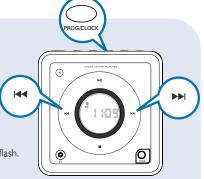

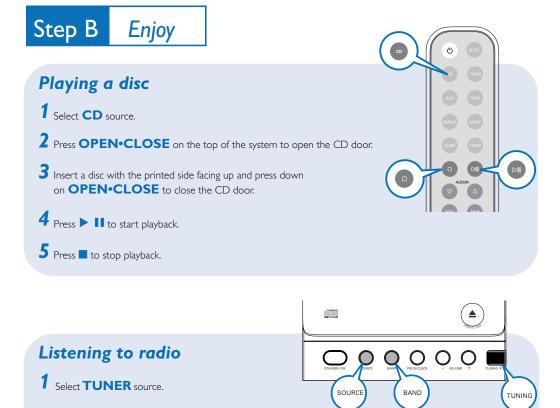

- 2 Press BAND (TUNER on the remote control) once or more to select your waveband.
- **3** Turn **TUNING** to tune to a station.

#### Тір

Detailed playback features and additional functions are described in the accompanied owner's manual. Notes for the remote control: – First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).


- Then select the desired function (  $\triangleright$ II,  $\mid \triangleleft$ ,  $\triangleright \mid$  for example).

## Playing iPod / Philips GoGear using the dock

- 1 Select the correct dock supplied, as indicated on the bottom panel of the dock, to work with either your Apple iPod or Philips GoGear.
- 2 Select the correct dock adaptor supplied, then snap the adaptor into the dock to provide a snug fit for the player.
  - For the iPod adaptors, the indication on the adaptor's back fits specific iPod player.
  - For the Philips adaptors, a number marked on the adaptor's back fits specific Philips GoGear player.
- **3** Correctly place your iPod or Philips GoGear in the dock.

Enjoy

- Using the docking cable supplied, connect the **DOCKING OUT** jack and Mini-USB port on the dock to **DOCKING IN** jacks (L and R) and Mini-USB port on the main set, marked-red to R jack, and marked-white to L jack.
- 5 Press SOURCE repeatedly or on the set (or DOCK on the remote) to select DOCK source.
  - For Philips GoGear player, make sure that you have powered it on before selecting DOCK source.
  - The connected player will play automatically.
  - The iPod/Philips GoGear battery will be charged in either standby mode or power-on mode.

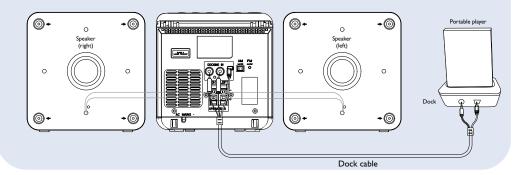

#### Tip

Step B

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.

