

# Quick Start Guide





Step A *Connect*

Step B *Setup*



Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

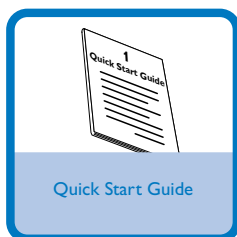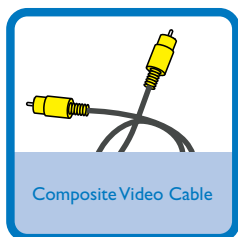

Remove the plastic protective sheet

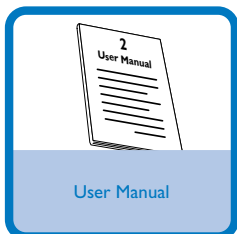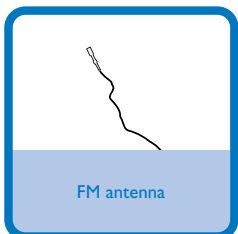

**PHILIPS**

## Step A Connect

### Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2



Connect the FM antennas.

3


Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

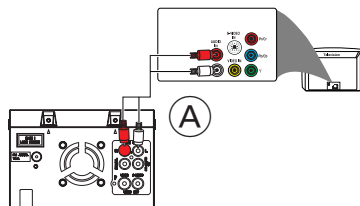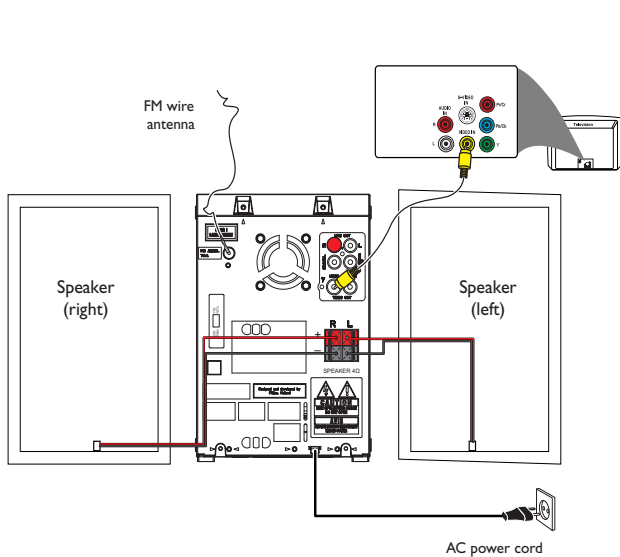

A To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

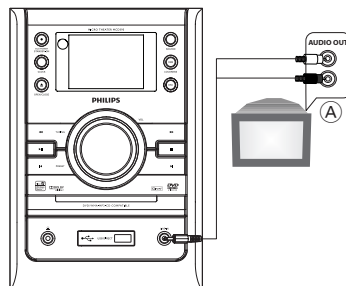

B To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **LINE-IN** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

## Step B Setup


### Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

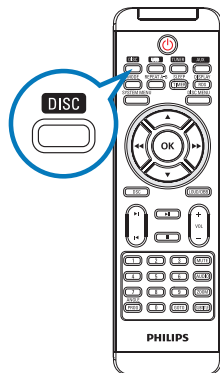

# Step B Setup

## Setting the clock

Important!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON** on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the system.

2


When the hour digits flash, turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then turn the **VOL** control on the front panel or press **VOL +/-** on the remote to set the minutes.


4

Press **CLOCK** again to confirm the time setting.

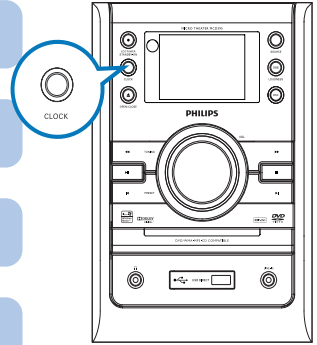






### Before using the remote control

 - 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).
- 3 Then select the desired function (for example ► || , ◀◀, ▶▶)



Remove the plastic protective sheet

## Setting system menu options

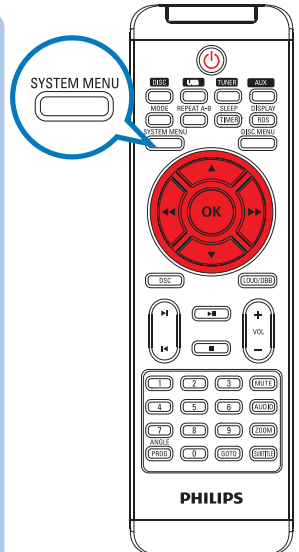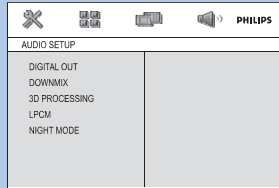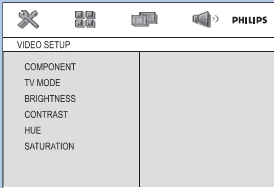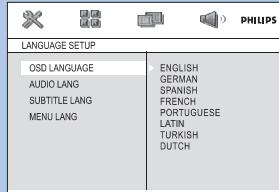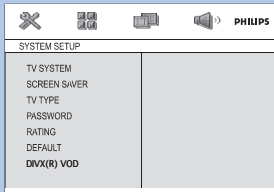

### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

