

Always there to help you  
Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)



## Short User Manual

PHILIPS



2015 © Gibson Innovations Limited. All rights reserved.  
This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

AZ215\_AZ216\_05\_Short User Manual\_V1.0



## 1 Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.  
WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.  
CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.



### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

- The device shall not be exposed to dripping or splashing.
- Do not place any source of danger on the device (e.g. liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure that there is enough free space around the product for ventilation.
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Batteries (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
  - Remove batteries when the unit is not used for a long time.
- Only use attachments/accessories specified by the manufacturer.



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous laser exposure or other unsafe operation.

## 2 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.

### Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Important notes for users in the U.K.

This information applies only to products with a UK mains plug. This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

### How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

### Copyright in the U.K.

Recording and playback of material may require consent. see Copyright Act 1956 and The performer's Protection Acts 1958 to 1972.

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.



### Note

- The type plate is located on the bottom of the apparatus.

## Specifications

### Amplifier

Rated Output Power	3W
Frequency Response	80 Hz - 16000 Hz, +/-3 dB
Signal to Noise Ratio	>72 dBA
Total Harmonic Distortion	<1 %

### Disc


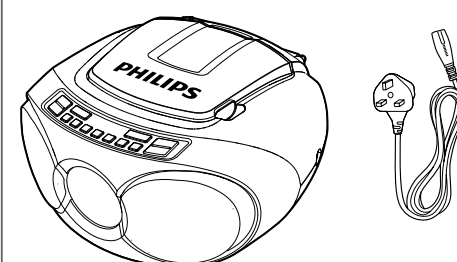

Audio DAC	24 Bits, 44.1 kHz
Frequency Response	80 Hz -16000Hz, +/-3 dB

### Tuner



Tuning Range	FM: 87.5 - 108 MHz
Tuning grid	50 KHz
Preset stations	20

### General

Power supply	
- AC Power	220 - 240V ~, 50/60 Hz
- Battery	DC 9V, 6 x 1.5 V R14/UM2/C Cell
Standby Power Consumption	< 0.5 W
Dimensions	
- Main Unit (W x H x D)	252 x 124 x 232 mm
Weight	
- Main Unit	1.0 kg
- With Packing	1.6kg





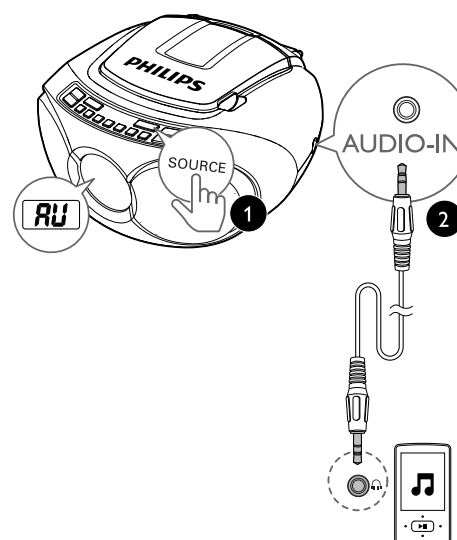

Before using your product, read all accompanying safety information.

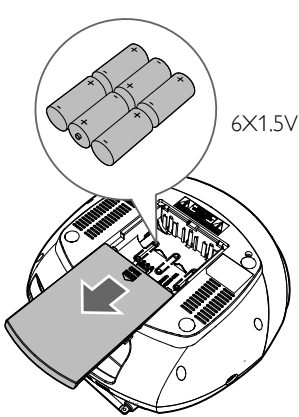




6X1.5V R14/UM2/C CELL

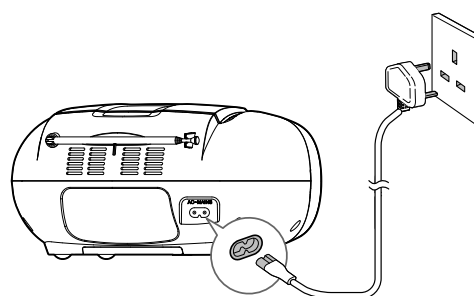To play with the device, you can use either alkaline battery (R14) or AC power.




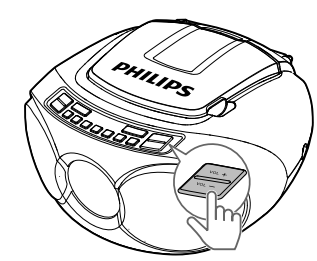







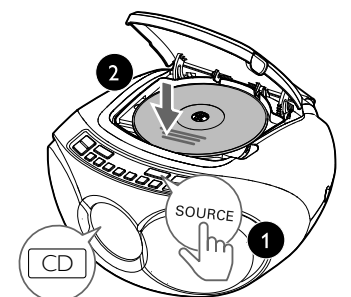

To download full user manual, visit [www.philips.com/support](http://www.philips.com/support).



In CD mode, you can control play through the following operations.

	Press and hold to fast-forward or fast-reverse the track during playback, then release to resume play.
	Start or pause play.
	Stop play.
MODE	<p>[REP]: Play the current track repeatedly.</p> <p>[REP ALL]: Play all tracks repeatedly.</p> <p>[SHUF]: Play tracks randomly.</p> <p>To return to normal play, press repeatedly until the repeat icons disappear.</p>

Note: Only [REP] and [REP ALL] be selected when you play the programmed tracks.

PROG

Program tracks

1

2

3

4

5

PROG

PROG

PROG

PROG

PROG



PROG

PROG

PROG

PROG

PROG

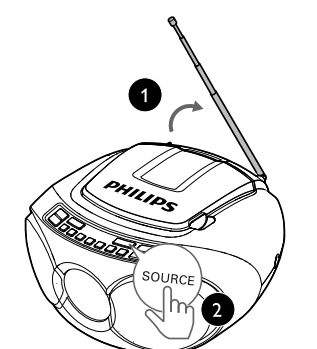

Tune to a radio station

Program radio stations manually

1

2

3

4

SOURCE

PROG

PRESET/PRESET+

PROG

87.50

87.50

P01

P01

87.50

87.50

P01

87.60

