

User manual
 Manuel de usuario

Need help? Call us!
 Philips representatives are ready to help you
 with any questions about our products.
CALL US BEFORE YOU CONSIDER
RETURNING THE PRODUCT!
 1-888-PHILIPS(744-5477)
 or visit us on the web at www.usapnp.philips.com

PHILIPS
 PHILIPS CONSUMER ELECTRONICS COMPANY
 Marietta, GA 30006-0026
 Meet Philips at the Internet
<http://www.philips.com/us/apnp>
 or call
 1-888-philips (744-5477)

CLASS 1
 LASER PRODUCT

Be responsible
 Respect copyrights

Specifications are subject to change without notice.
 Trademarks are the property of Koninklijke Philips Electronics N.V.
 or their respective owners.
 ©2006 © Koninklijke Philips Electronics N.V. All rights reserved.

Printed in China

Important! SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Battery usage CAUTION — To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

- Install all batteries correctly, + and - as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.

16. Apparatus shall not be exposed to dripping or splashing.

17. Do not place any sources of danger on the apparatus (e.g., liquid filled objects, lighted candles).

18. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

CONSIGNES DE SECURITE IMPORTANTES

- Lisez ces instructions.
- Conservez ces instructions.
- Respectez les avertissements.
- Suivez toutes les instructions.
- N'utilisez pas cet appareil à proximité d'une source d'eau.
- Nettoyez l'appareil uniquement avec un chiffon sec.
- N'obstruez aucun orifice de ventilation. Installez l'appareil selon les instructions du fabricant.
- N'installez pas l'appareil près d'une source de chaleur comme par exemple de radiateurs, bougies de chaleur; cuisinières, ou autres appareils (même des amplificateurs) dégageant de la chaleur.
- Ne détruisez pas la incorporée dans la prise de terre ou prise polarisée fournie. Une prise polarisée est dotée de deux lames dont une plus large que l'autre. Une prise de terre est dotée de deux fiches semblables et d'une troisième, plus large, qui assure la mise à la terre pour votre sécurité. Si la prise fournie ne convient pas à la prise murale dont vous disposez, consultez un électricien pour remplacer et adapter votre prise murale.
- Protégez le cordon d'alimentation pour éviter de marcher dessus ou de le pincer particulièrement aux endroits des prises, mâles et femelles, et au point de raccordement sur l'appareil lui-même.
- Utilisez uniquement des accessoires ou options recommandés par le fabricant.
- Ne produisez pas de chaleur. L'élimination de ces matières est réglementée par la loi.
- Pour savoir comment les éliminer ou les recycler, contactez les autorités locales [ou Electronic Industries Alliance : www.eiae.org].
- Utilisez uniquement un support, un pied, une étagère ou une table de type recommandé par le fabricant.
- Utilisez uniquement un meuble sur roulettes, veillez à le déplacer avec précaution afin d'éviter tout accident corporel si l'équipement se renverse.
- Débranchez l'appareil pendant les orages ou si il doit rester inutilisé pendant une période de temps prolongée.
- Pour toute réparation, faites appel à un personnel qualifié. Une réparation sera nécessaire si l'appareil a subi des dommages tels que détérioration du cordon d'alimentation ou de la prise, liquide renversé sur l'appareil, ou encore si un objet est tombé dessus, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou s'il a fait une chute.
- Précaution d'emploi des piles — Afin d'éviter toute fuite des piles qui risquerait de causer des blessures corporelles, des dommages matériels, ou d'endommager l'appareil :
 - Installez toutes les piles correctement, + et - tels qu'indiqués sur l'appareil.
 - Né mélangez pas les piles (pas de piles neuves avec des usagées ou de piles au carbone avec des alcalines, etc.).
 - Évitez les piles lorsque l'appareil reste inutilisé pendant une longue période.
- Cet appareil ne doit pas être exposé à des éblouissements.
- N'exposez pas cet appareil à sources de problème potentielles (objets remplis de liquide, bougies allumées, etc.).
- Ce produit peut contenir du plomb et du mercure. L'élimination de ces matières est réglementée par la loi.
- Pour savoir comment les éliminer ou les recycler, contactez les autorités locales [ou Electronic Industries Alliance : www.eiae.org].

12. Utilisez uniquement un support, un pied, une étagère ou une table de type recommandé par le fabricant.

13. Débranchez l'appareil pendant les orages ou si il doit rester inutilisé pendant une période de temps prolongée.

14. Pour toute réparation, faites appel à un personnel qualifié. Une réparation sera nécessaire si l'appareil a subi des dommages tels que détérioration du cordon d'alimentation ou de la prise, liquide renversé sur l'appareil, ou encore si un objet est tombé dessus, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou s'il a fait une chute.

15. PRÉCAUTION d'emploi des piles — Afin d'éviter toute fuite des piles qui risquerait de causer des blessures corporelles, des dommages matériels, ou d'endommager l'appareil :

- Installez toutes les piles correctement, + et - tels qu'indiqués sur l'appareil.
- Né mélangez pas les piles (pas de piles neuves avec des usagées ou de piles au carbone avec des alcalines, etc.).
- Évitez les piles lorsque l'appareil reste inutilisé pendant une longue période.

16. Cet appareil ne doit pas être exposé à des éblouissements.

17. N'exposez pas cet appareil à sources de problème potentielles (objets remplis de liquide, bougies allumées, etc.).

18. Ce produit peut contenir du plomb et du mercure. L'élimination de ces matières est réglementée par la loi.

Pour savoir comment les éliminer ou les recycler, contactez les autorités locales [ou Electronic Industries Alliance : www.eiae.org].

Main unit controls (see figure 1)

- OPEN — Open disc door to insert or remove disc
- POWER — Switch the player on / off
- PAUSE — Press once to stop playback and store the stop position. Press twice to stop playback completely.
- HI — Start / pause / resume playback
- SKIP — Search backward (◀) or search forward (▶)
- VOL + — Volume control
- SETUP — Enters SETUP menu
- MENU — Display MENU page
- UP / DOWN / LEFT / RIGHT — Up / down / left / right cursor
- OK — Confirm selection

Front of player (see figure 1)

- POWER/CHARGE — Power and charging indicator / Remote sensor

Right of player (see figure 1)

- PHONE — Headphones jack
- AV IN — Audio/Video input jack
- AV OUT — Audio/Video output jack
- COAXIAL — Digital audio output jack
- DC IN 12V — Power supply socket

Remote controls (see figure 2)

- ▶ ◀ — Previous / Next
- OK — Confirm selection
- VOL + — Volume control
- ◀ ▶ — Previous / Next
- HI — Start / pause / resume playback
- SKIP — Search backward (◀) or search forward (▶)
- OSD — On-Screen Display on / off
- AUDIO — Audio language selector
- REPEAT — Repeat
- ANGLE — For LCD menu page
- SUBTITLE — Subtitle language selector
- LANGUAGE — Language selector
- MENU — Displays MENU page
- SETUP — Enters SETUP menu
- Infra Red port
- BATTERY COMPARTMENT

Right of player (see figure 2)

- ▶ ◀ — Previous / Next
- OK — Confirm selection
- VOL + — Volume control
- ◀ ▶ — Previous / Next
- HI — Start / pause / resume playback
- SKIP — Search backward (◀) or search forward (▶)
- OSD — On-Screen Display on / off
- AUDIO — Audio language selector
- REPEAT — Repeat
- ANGLE — For LCD menu page
- SUBTITLE — Subtitle language selector
- LANGUAGE — Language selector
- MENU — Displays MENU page
- SETUP — Enters SETUP menu
- Infra Red port
- BATTERY COMPARTMENT

CAUTION
 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

GENERAL INFORMATION

Power Sources
 This unit operates on a supplied AC adapter, car adapter, or a rechargeable battery pack.

- Make sure that the input voltage of the AC adapter is in line with the local voltage. Otherwise, the AC adapter and unit may be damaged.
- Do not touch the AC adapter with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adapter, be sure the input voltage of the adapter is identical with car voltage.
- Unplug the AC adapter from the outlet or remove the battery pack when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adapter. Do not pull the power cord.

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes.
- Any device should be done by qualified service personnel.
- Unplug the AC adapter to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof; do not allow your player to be submerged in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Do not touch the lens!

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

GENERAL INFORMATION

[illegible]

(ya sea de tipo polarizado o con toma de tierra). Las clavijas portátiles tienen dos patillas, una más ancha que la otra. Las que disponen de toma de tierra tienen dos patillas y una tercera que es la conexión a tierra. Tanto la patilla más ancha como la toma de tierra han sido incorporadas a la clavija para su seguridad personal. Si la clavija suministrada con este equipo no es compatible con la toma de corriente, consulte a un electricista para sustituir la toma de corriente obsoleta.

10. Preteja debidamente el cable impidiendo que pueda pisarlo o incluso perforarlo, especialmente en la parte más próxima a la clavija y en el punto de salida del equipo.

11. Utilice exclusivamente cables, dispositivos/accesorios recomendados por el fabricante.

El aparato cumple los normas FCC Parte 15 y 21 CFR 104.10. Funcionamiento dependiente de dos condiciones siguientes:

1. Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.

(ya sea de tipo polarizado o con toma de tierra). Las clavijas portátiles tienen dos patillas, una más ancha que la otra. Las que disponen de toma de tierra tienen dos patillas y una tercera que es la conexión a tierra. Tanto la patilla más ancha como la toma de tierra han sido incorporadas a la clavija para su seguridad personal. Si la clavija suministrada con este equipo no es compatible con la toma de corriente, consulte a un electricista para sustituir la toma de corriente obsoleta.

10. Preteja debidamente el cable impidiendo que pueda pisarlo o incluso perforarlo, especialmente en la parte más próxima a la clavija y en el punto de salida del equipo.

11. Utilice exclusivamente cables, dispositivos/accesorios recomendados por el fabricante.

El aparato cumple los normas FCC Parte 15 y 21 CFR 104.10. Funcionamiento dependiente de dos condiciones siguientes:

1. Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.

no función con normalidad o cuando hubiera sufrido algún tipo de caída.

15. Uso de las pilas – ADVERTENCIA:

Para prevenir escapes de las pilas, que pueden ocasionar lesiones físicas, daños a su propiedad o dañar la unidad:

- Instale **todas** las pilas correctamente, + y - como está marcado en la unidad.
- No mezcle las pilas (**viejas**) con nuevas o de **carbono y zinc** con **de níquel-metal hidruro**.
- Extraiga las pilas cuando vaya a usar la unidad durante largo tiempo.

16. El aparato no debe exponerse a goteros ni salpicaduras.

17. No coloque nada que pueda ser peligroso sobre el aparato (por ejemplo, objetos llenos de líquido, vases encendidos).

18. Este producto puede contener el plomo y mercurio. La eliminación de este material puede estar regulada debido a consideraciones medioambientales. Para obtener información sobre la eliminación o reciclaje de material, póngase en contacto con las autoridades locales [o con la Electronic Industries Alliance – www.eia.org].

EL 6475-5005: 04/01

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

PHILIPS

 
Vea más sobre este Web o visite www.philips.com/support

PHILIPS

Vea más sobre este Web o visite www.philips.com/support

</

[illegible]

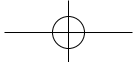

Portable DVD player

PET830

User manual
Manuel d'utilisation
Manual del usuario
Manual do usuário

PHILIPS




Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2006 © Koninklijke Philips Electronics N.V. All rights reserved.



Printed in China

 wk6461

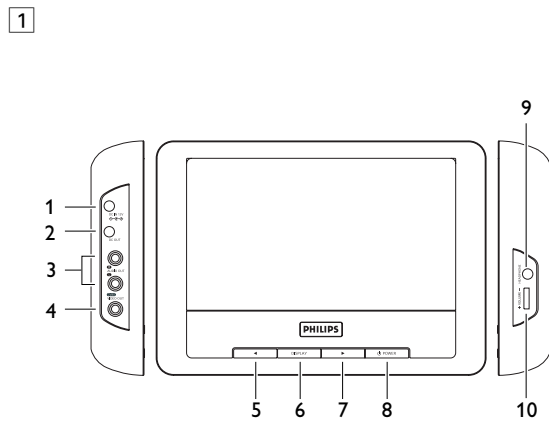

English

Content

1	Control elements and functional components	3.3	Connect to headphone
1.1	Left side of the player	3.4	Connect to camcorder
1.2	Front side of the player	4	Enjoyment
1.3	Right side of the player	4.1	Screen brightness and contrast
2	General information	4.2	Volume control
3	Connection	4.3	Screen brightness and contrast
3.1	Use in car environment	5	Troubleshooting
3.2	Use at home	6	Technical data

1 Control elements and functional components

1.1 Left side of the player (see figure 1)

- 1 DC IN Adapter connection for power supply
- 2 DC OUT
- 3 AUDIO IN Audio input
- 4 VIDEO IN Video input

1.2 Front side of the player (see figure 1)

- 5,7◀▶ Left/right cursor
- 6 DISPLAY Adjust the display value of the system
- 8 ⏻ POWER Switch the player on / off

1.3 Right side of the player (see figure 1)

- 9 Headphone jack
- 10 + VOLUME - Volume control

2 General information

Power Sources

This unit operates on a supplied AC adaptor or car adapter.

- Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.
- Do not touch the AC adaptor with wet hands to prevent electric shock.
- When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.
- Unplug the AC adaptor from the outlet or remove the battery pack when the unit is not used for long periods of time.
- Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Please always use supplied AC/DC adaptor (AY4129)

Safety and maintenance

- Do not disassemble the unit for laser rays are dangerous to eyes.
Any service should be done by qualified service personnel.
- Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.
- Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.

Hearing Safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.
- Important (for models with by-packed headphones): Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips.
- Traffic safety: do not use while driving or cycling as you may cause an accident.
- Do not expose to excessive heat caused by heating equipment or direct sunlight.
- This product is not waterproof: do not allow your player to be submersed in water. Water entering the player may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.
- Apparatus shall not be exposed to dripping or splashing. Do not place any sources of danger on the appartus (e.g. liquid filled objects,lighted candles)
- Do not touch the lens!

When the player is in use for a long period of time, the surface will be heated. This is normal.

On handling the LCD screen

The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

 
Copyright information

All other brand and product names are trademarks of their respective companies or organizations.

3 Connection


Make sure that the master DVD player; slave LCD screen and any other electrical equipment are off before connection.

3.1 Use in car environment

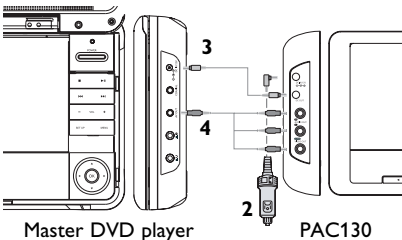

- 1 Mount the devices to the headrest with the mounting kits.
- 2 Connect the car adapter power plug to the PAC130
- 3 Connection the power source to the master DVD with the power cord
- 4 Connection the video and audio signal to the devices

 
3.2 Use at home

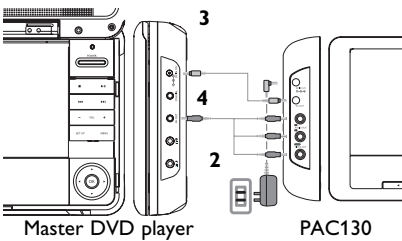


- 1 Connect the AC/DC adapter power plug to the PAC130
- 2 Connection the power source to the master DVD with the power cord
- 3 Connection the video and audio signal to the devices

3.3 Connect to headphone

 Connect the headphones to the right side of the player for private listening.

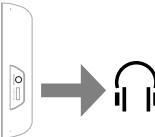

 3.4 Connect to camcorder

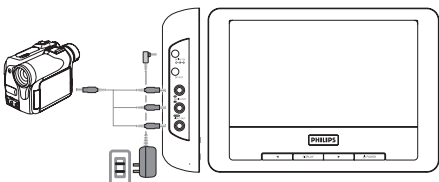

You can connect with you Camcorder to view video with bigger screen.

- 1 Connect the PAC130 to power source
- 2 Connect to video/audio between the the camcorder and PAC130

4 Enjoyment

During enjoy the video you can adjust the sound volume and screen display brightness.

4.1 Screen brightness and contrast

- 1 Power on the connected device such as master DVD player, camcorder etc.
- 2 Power on the PAC130
- 3 PAC130 will show the video content automatically
- 4 Power off all the devices when you finish enjoyment

4.2 Volume control

Adjust the rotary volume control on the right side of the screen.

4.3 Screen brightness and contrast

- 1 Press **DISPLAY** repeatedly for brightness or contract setting.
- 2 Press ◀ or ▶ key to adjust the values.

5 Troubleshooting

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked.

WARNING Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee. If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom	Remedy
No sound	• Make sure system connection is correct. • Make sure the speakers are turned on. • Make sure the audio source is correct.
No sound	• Make sure LCD screen is on and in correct video mode. • Make sure your system connection is correct. • Make sure the video source is correct.
No video	• Make sure all the connected device is power on. • Make sure your system connection is correct. • Make sure the master device such as DVD player, camcorder start to playback video • Sometimes the video out of the master devices have to be switched on / activated.

6 Technical data

TFT screen size	7 inches
Weight	0.86 kg / 1.89 lb
Power supply	DC 9V 1.8A
Power Consumption	≤ 20W
Operating temperature range	0 - 50°C (32 - 122°F)
Video system	NTSC / PAL / AUTO

PHILIPS reserves the right to make design and specification changes for product improvement without prior notice. Modifications not authorized by the manufacturer may void users authority to operate this device. All rights reserved.