

Quick Start Guide



Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.





1 x AC power cable
1 x power plug adaptor

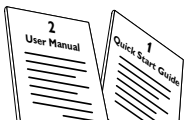

Quick Start Guide
User Manual



 
Remote Control with 2
AAA batteries

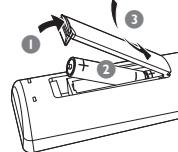

1 x MP3 link cable



 1 x FM wire antenna




1 x AM loop antenna

PHILIPS

Step A **Connect**

- 1 Connect the speaker cables.
- 2 Connect the AM and FM antennas.
- 3 Connect the supplied AC power cable to the main unit and the wall socket.

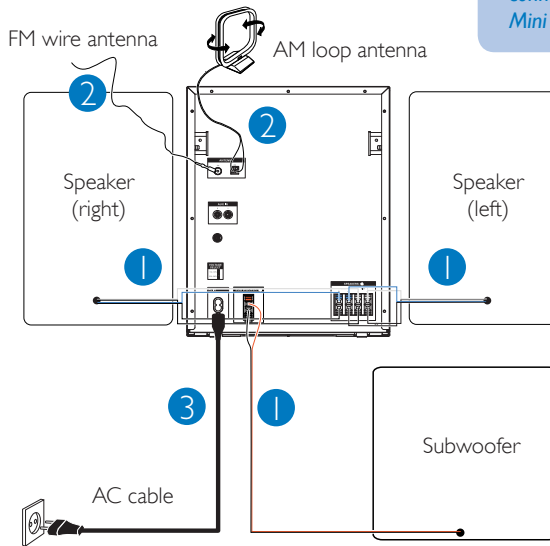

Note

If your power supply voltage is 110V-127V, adjust the voltage selector (on the back of the main unit) to 110V-127V.


Tip

See the User Manual on how to connect other equipment to this Mini Hi-Fi.

Step B **Setup**



Set clock

- 1 In the standby mode, press **PROG/CLOCK** (or **CLOCK** on the remote control) to activate the clock setting mode.
→ The 12 hour or 24 hour format is displayed.
- 2 Press **ALBUM/PRESET +/-** (or **ALBUM +/-<< / >>**) on the remote control repeatedly to select 12 hour or 24 hour format.
- 3 Press **PROG/CLOCK** (or **CLOCK** on the remote control) to confirm.
→ The clock digits are displayed and begin to blink.
- 4 Press **ALBUM/PRESET +/-** (or **ALBUM +/-<< / >>**) on the remote control to set the hour.
- 5 Press **<< / >>** (or **TITLE +/- << / >>**) on the remote control to set the minute.
- 6 Press **PROG/CLOCK** (or **CLOCK** on the remote control) to confirm.

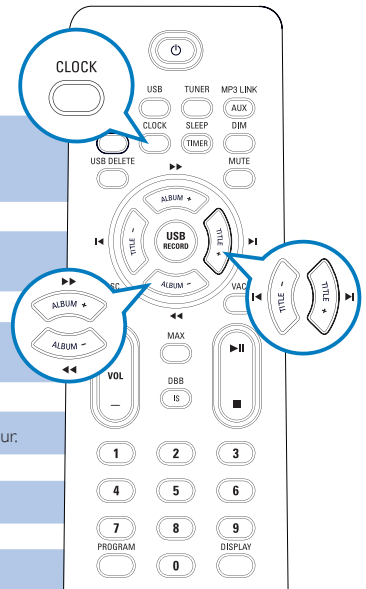


Play disc

- 1 Press **DISC 1/2/3** (or **CD 1/2/3** on the remote control) to select the disc source.
- 2 Press **OPEN/CLOSE** on the main unit to open the disc compartment.
- 3 Load up to two discs on the disc trays, with the printed side facing up
 → To load the third disc, press **DISC CHANGE** on the main unit to rotate to the disc tray.
- 4 Press **OPEN/CLOSE** to close the disc compartment.
- 5 Press **▶||** to start play.
- 6 To stop play, press **■**.
 To select a disc, press **DISC 1/2/3** (or **CD 1/2/3** on the remote control).

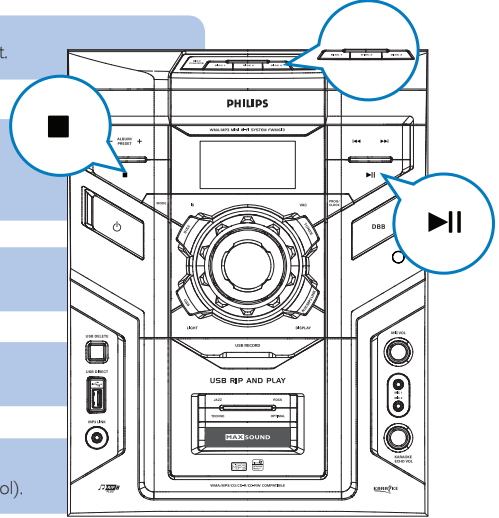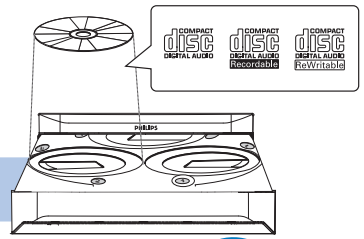


Listen to radio

- 1 Press **TUNER** repeatedly to select FM or AM.
- 2 Press **PROG/CLOCK** (or **PROGRAM** on the remote control) for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET +/-** (or **TITLE +/-** **◀▶** on the remote control) to select a preset number.

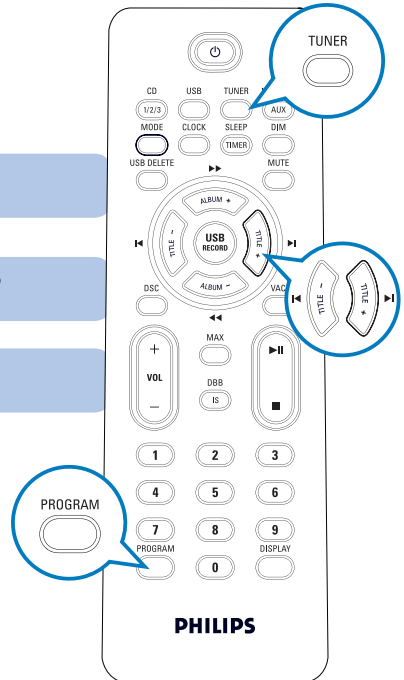


Play USB

With this Mini Hi-Fi, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Mini Hi-Fi).

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Press **USB** to select the USB source.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

USB record

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Prepare the source to record from.
- 3 Press **USB RECORD** to start recording.
- 4 To stop recording, press **■**.

Tip

Detailed play features and additional functions are described in the supplied user manual.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>

