

ORT2300



User manual
Brugervejledning
Benutzerhandbuch
Mode d'emploi

PHILIPS

All registered and unregistered trademarks are property of their respective owners.
© 2013 Koninklijke Philips Electronics NV.
All rights reserved.

ORT2300_10_UM_V1.0

English

DCongratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Safety

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Risk of electric shock or fire!

- Never remove the casing of the product.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or onto the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories, near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, hold the plug securely, never the cable.

Risk of short circuit or fire!

- Use only power supplies listed in the user manual.
- Before you connect the product to the power outlet, make sure that the power voltage matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different.
- Never expose the product to rain, water, sunshine, or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- This product is not to be exposed to dripping or splashing.
- Do not place any sources of direct heat on the product (e.g. liquid filled objects, lighted candles).
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
- Make sure that curtains or other objects never cover the ventilation slots on the product.

Note

- The model number and serial number are printed on the bottom.

2 What's in the box (Fig. 1)

Check and identify the contents of the package.

3 Connect power (Fig. 2)

- Select a proper plug and fit it to the power adaptor securely.
- Connect the power adaptor between the power outlet and the product.
- Press the power and volume knob to power on the product.
- To switch the product to standby mode, press the power and volume knob again.

4 Set the time and date (Fig. 3)

Note

- To manually set the clock, switch the product to standby mode first.

- In standby mode, press and hold **MENU / INFO** until [Set time] is displayed.
- The hour digits blink.
- Press **2** or **1** to set the hour, and then press **SCAN / SELECT** to confirm.
- The minute digits blink.
- Press **2** or **1** to set the minute, and then press **SCAN / SELECT** to confirm.
- The date is displayed with the day digits blink.
- Press **2** or **1** to set the day, and then press **SCAN / SELECT** to confirm.
- The month digits blink.
- Press **2** or **1** to set the month, and then press **SCAN / SELECT** to confirm.
- The year digits blink.
- Press **2** or **1** to set the year, and then press **SCAN / SELECT** to confirm.
- [Time saved] flashes, and then the set clock and date are displayed.

Tip

- When DAB radio station that transmits fine signal is broadcast, the product automatically switches to DAB radio station automatically.


5 Use the alarm timer

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can program a maximum of 20 DAB radio stations.
- Check the [Full scan] menu or go to www.NordDAB.org for applicable DAB radio frequencies in your area.

Set an alarm (Fig. 4)

- You can set two alarms.
- Press and hold **AL1** (or **AL2**) for two seconds.
- [Alarm 1] (or [Alarm 2]) is displayed with **AL1** (or **AL2**) blinking.
- The current alarm time is displayed with hour digits blinking.
- Press **2** or **1** to set the hour, and then press **SCAN / SELECT** to confirm.
- The minute digits begin to blink.
- Press **2** or **1** to set the minute, and then press **SCAN / SELECT** to confirm.
- The alarm source menu begins to blink. [DAB], [FM] or [Buzzer]

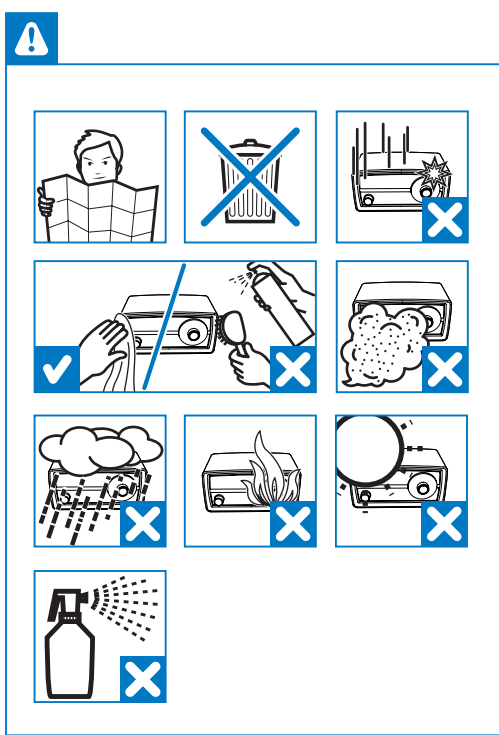

To get the detailed instructions for use, visit www.philips.com/support.

- Press **2** or **1** to select an alarm source, and then press **SCAN / SELECT** to confirm.
- If [DAB] or [FM] is selected as the alarm source, press **SCAN / SELECT** to select a preset radio station or the list of stored stations.
- The alarm frequency blinks [Daily] (daily), [Weekdays] (weekdays), [Weekend] (weekends), or [Once] (once).
- Press **2** or **1** to select a frequency, and then press **SCAN / SELECT** to confirm.
- The alarm volume level blinks.
- Press **2** or **1** to set the volume level, and then press **SCAN / SELECT** to confirm.
- [Alarm Saved] flashes.

Snooze the alarm

- When an alarm sounds, press **SNOOZE**.
- The alarm repeats after 9 minutes.

Stop the alarm

- When the first (or second) alarm sounds, press **AL1** (or **AL2**).
- The alarm stops, and then repeats at the set time.

6 Listen to FM radio stations (Fig. 5)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can store a maximum of 20 FM radio stations.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually



- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

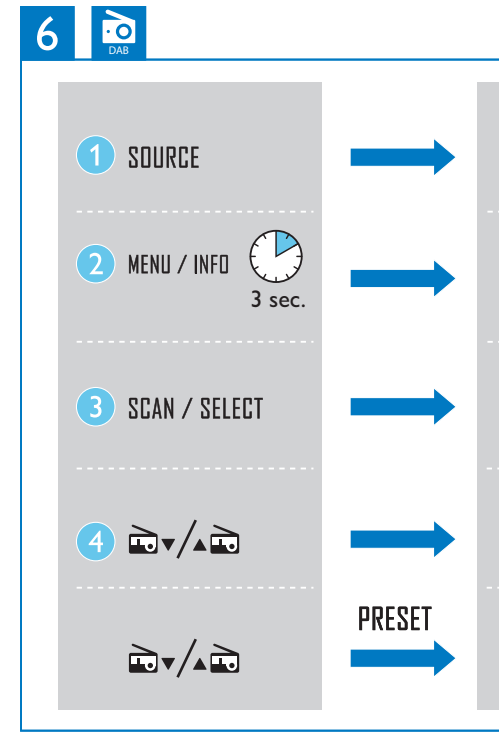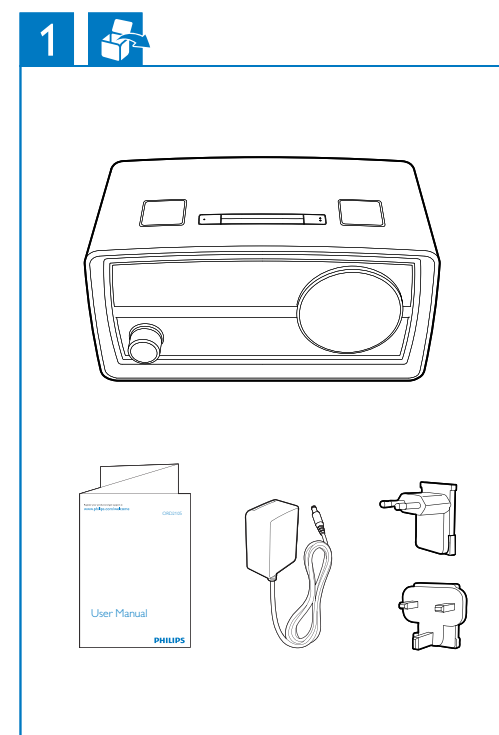

To get the detailed instructions for use, visit www.philips.com/support.

- Press **2** or **1** to select an alarm source, and then press **SCAN / SELECT** to confirm.
- If [DAB] or [FM] is selected as the alarm source, press **SCAN / SELECT** to select a preset radio station or the list of stored stations.
- The alarm frequency blinks [Daily] (daily), [Weekdays] (weekdays), [Weekend] (weekends), or [Once] (once).
- Press **2** or **1** to select a frequency, and then press **SCAN / SELECT** to confirm.
- The alarm volume level blinks.
- Press **2** or **1** to set the volume level, and then press **SCAN / SELECT** to confirm.
- [Alarm Saved] flashes.

Snooze the alarm

- When an alarm sounds, press **SNOOZE**.
- The alarm repeats after 9 minutes.

Stop the alarm

- When the first (or second) alarm sounds, press **AL1** (or **AL2**).
- The alarm stops, and then repeats at the set time.

6 Listen to FM radio stations (Fig. 5)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can store a maximum of 20 FM radio stations.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [Bluetooth Mode] is displayed.

 
 
- Bluetooth is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

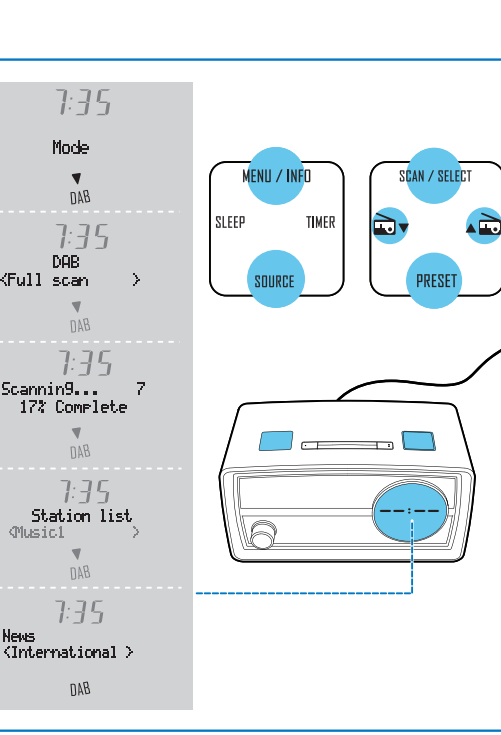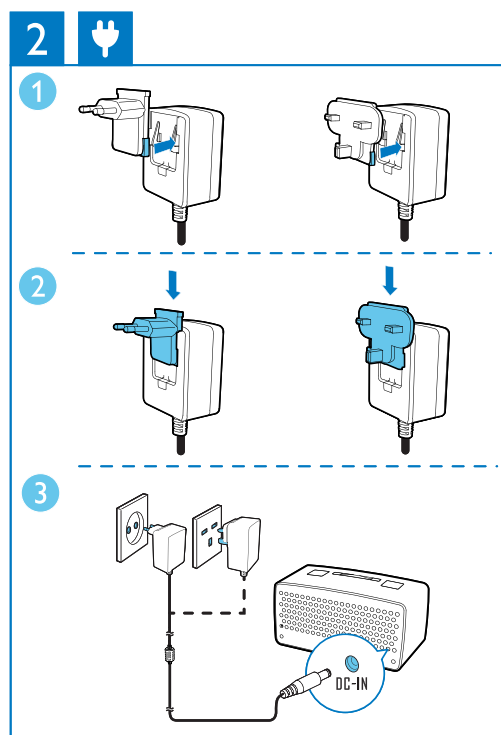

To get the detailed instructions for use, visit www.philips.com/support.

- Press **2** or **1** to select an alarm source, and then press **SCAN / SELECT** to confirm.
- If [DAB] or [FM] is selected as the alarm source, press **SCAN / SELECT** to select a preset radio station or the list of stored stations.
- The alarm frequency blinks [Daily] (daily), [Weekdays] (weekdays), [Weekend] (weekends), or [Once] (once).
- Press **2** or **1** to select a frequency, and then press **SCAN / SELECT** to confirm.
- The alarm volume level blinks.
- Press **2** or **1** to set the volume level, and then press **SCAN / SELECT** to confirm.
- [Alarm Saved] flashes.

Snooze the alarm

- When an alarm sounds, press **SNOOZE**.
- The alarm repeats after 9 minutes.

Stop the alarm

- When the first (or second) alarm sounds, press **AL1** (or **AL2**).
- The alarm stops, and then repeats at the set time.

6 Listen to FM radio stations (Fig. 5)

Note

- For optimal reception, fully extend the antenna and adjust its position.
- You can store a maximum of 20 FM radio stations.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Program radio stations manually

- Tune to a radio station.
- Press and hold **PRESET** until [Preset store] is displayed.
- Press **2** or **1** repeatedly to select a preset sequence number.
- Press **PRESET** to confirm.
- The radio station is stored with the selected sequence number.
- Repeat steps 1-4 to program more radio stations.
- To tune to a stored radio station, press **PRESET** to access the list of stored radio stations, and then press **2** or **1** repeatedly.

1 Press SOURCE repeatedly until [FM Mode] is displayed.

- FM is highlighted and the current radio station is displayed.
- Press and hold **SCAN / SELECT** until [Auto] is displayed.
- After the search is complete, the first stored radio station is broadcast.
- Press **PRESET** to access the list of stored radio stations.
- Press **2** or **1** to select a radio station, and then press **SCAN / SELECT** to confirm.

Search for a radio station manually

- Press **2** or **1** repeatedly until the frequency of target radio station is displayed.

Search for a radio station automatically

- Press and hold **2** or **1** until [Scanning...] is displayed.
- After a strong radio station is detected, the search stops and the radio station is broadcast.

Kontrol af den aktuelle softwareversion

< System >

Tryk på **SCAN / SELECT** for at vise den aktuelle softwareversion.

< System >

Dette produkt overholder EUs krav om radiointerferens. Du kan læse EU-VERORDNINGEN (CE) 2014/53/EU på http://download.philips.com/files/m/0/010RT2300_10_desc_eng.pdf.

Opråder softwaren

< System >

< System >

- Beag www.philips.com/support.
- Sej efter understøttelsesoplysninger om dit produkt med **0RT230010**, som sægdes.
 - Når en oplysning er tilgængelig, vil ikonet **»Vejr-til-fjernoverblikning«** (en firkantet) Linke) dukke op, når en version fra sprøg til sprog.
- Klik på ikonet **»Vejr-til-fjernoverblikning«**.
- Læs og forstå vejledningen om softwareopdateringen.
- Følg instruktionerne for de tidligere opdateringer.

Nulstil produktet

< System >

- Tryk på **SCAN / SELECT** for at vise indstillingerne.
- Tryk gentagne gange på **»»»»** for at vælge en indstilling.
 - [No] Vind tilbag til den forrige menu.
 - [Yes] Nulstil produktet til fabriksindstillinger.
- Tryk på **SCAN / SELECT** for at bekræfte indstillingen.

16 Fejlfinding

< System >

Prøv aldrig selv at reparere produktet, da garantien i så fald bortfalder. Hvis der forekommer fejl på produktet, bør du kontrollere følgende punkter under du bestiller reparatur. Hvis der fortset er problemer, skal du gå til Philips websted på www.philips.com/support. Når du kontakter Philips, skal du sørge for produktet er i nærheden, og at modelnummeret og serienummeret er tilgængelige.

Generelt

- Ingen stem**
- Kontroler at netledningen er st tilsluttet i.
 - Kontroler, at der er strøm i kontakten.
- Ingen lyd**
- Tryk indstøvlene.
 - Når du lytter til en ekstern enhed, skal du sørge for, at den ekstern enhed ikke kan ses på tv-ud.
- Ingen reaktion fra produktet**
- Kontroler at strømforsyningen er tilgængelig.
 - Sluk for produktet, og tænd det igen.

Dårlig radioomdækning

- Signalerne er svage på grund af interferens fra andre elektriske produkter eller trykknapperne i telefoner. Flyr produktet til et sted uden for interferens.
- Søg for at antennen er trukket helt ud. Juster placeringen af antennen.

Ud-larmindstilling er blevet slået af

- Stemmen er blevet afsluttet, eller strømdampningen er blevet frakoblet.
- Indstil uret alarmer.

Om Bluetooth-forbindelse

Musikafspilning kan ikke foretages på produktet selv efter genopretning af Bluetooth-tilslutning

- Enheden kan ikke bruges sammen med dette produkt til at afspile musik.

Udvalsten er dårlig eller overbelæst i en Bluetooth-aktiveret enhed

- Bluetooth-modtageren er dårlig til at høre den sættere på en direkte produkt, eller efter en visse forberedelse imellem dem.

- Kan ikke oprette forbindelse til et produkt**
- Enheden understøtter ikke de profiler, der bruges til produktet.
 - Færdiges Bluetooth-aktiveret er ikke aktiveret. Se indtastningsvejledningen for at finde ud af hvordan funktionen aktiveres.
 - Dette produkt er ikke i paringsstand.
 - Produktet har allerede forbindelse til en anden Bluetooth-aktiveret enhed. Afbryd enheden, og prøv igen.

- Den parrede enhed er ikke i rækkevidde**
- Bluetooth-modtageren er dårlig til at høre den sættere på en direkte produkt, eller efter en visse forberedelse imellem dem.
 - Nagle modtageren kobler muligvis til og fra telefon, når du forlanger eller afslutter en opkald. Dette er ikke tegn på en funktionsfejl i produktet.
 - På nogle enheder dukkeres Bluetooth-forbindelsen muligvis automatisk for at spare strøm. Dette er ikke tegn på en funktionsfejl i produktet.

17 Produktinformation

< Bemærk >

Generelle oplysninger

Vækstærkstrædapter	Modelnr.: CH-10150592000U1 Varemærkenavn: Philips Indgang: 100-240V ~, 50/60 Hz, 550 mVA Udgang: 5 V V ~ 2 A
Strømforsyning ved drift	10 W
Strømbegrænsning ved standby	< 1 W
»Hovedenhed (B x H x D)	245 x 123 x 122 mm
Vægt:	1,1 kg
»Hovedenhed	

< Tuner >

Indstillingsområde	FM1:87,50 - 108,00 MHz; DAB: 174,928 - 239,200 MHz
Indstilling af gfter	50 kHz
DAB-sensitivitet (EN50248)	< -95 dbm
Sættet harmonisk forvængning	< 2 %
Signal-afstødning	> 50 dBa
Antal afstødnedsidde radiostationer	20 (FM), 20 (DAB)

< Højtalere >

Højtalerempedans	4 ohm
Højtalereffekt	3" bredtøjler
Sensitivitet	> 82 dbm/mV

< Forstærker >

Udgangseffekt	3 W RMS
Frekvensgang	60 Hz - 16 kHz, ±3 dB
Signal-afstødning	> 65 dBa
Lyddragning	0,5 V RMS 20 kOhm

< Bluetooth >

Kommunikationssystem	Bluetooth-StandardVersion 2.0
Udgang	Bluetooth-Standard Power
Maksimalt kommunikationsområde	Sigtegrænse: ca. 10 m
Frekvensbånd	2,4 GHz bånd (2.4000 GHz - 2.4835 GHz)

< Kompatibelt Bluetooth-profil >

Understøttede codecs	SBC (Sub Band Code)
»Modtag	SBC (Sub Band Code)
»Send	SBC (Sub Band Code)

18 Meddelelse

Enhver ændring af dette apparat, som ikke er godkendt af Philips Consumer Lifestyle, kan annullere garantien og til at betjene dette udbyr.

Overblikelse

< € 0890 >

Dette produkt overholder EUs krav om radiointerferens. Du kan læse EU-VERORDNINGEN (CE) 2014/53/EU på http://download.philips.com/files/m/0/010RT2300_10_desc_eng.pdf.

Dette er et KLASSE II-aparat med dobbelt isolering og uden beskyttende jording.

Omsorg for miljøet

Dit produkt er udviklet og fremstillet med materialer og komponenter af høj kvalitet, som kan genbruges.

Når et produkt er forsynet med dette symbol med en overkrydset affaldspil på høj, betyder det, at produktet er omfattet af EU-direktiv 2002/96/EC, Underlagt reglerne for et separat indsamlingssystem for elektriske og elektroniske produkter.

Følg de lokale regler og bortskaff ikke uretjede produkter sammen med almindeligt husholdningsaffald. Korrekt bortskaffelse af elektriske produkter er med til at forhindre negativ påvirkning af miljø og helbred.

Miljøoplysninger

Al uendende emballage er udslett. Emballagen er forenet og består af tre materialer: Pap (bæls), polyethylen (butter) og polyethylen (poser beskyttende afslutning). Systemet består af materialer, der kan genbruges, heri det adskiltes et specifikt Overblik af lokale regler angående udsmidning af emballage, opbrugte batterier og genbrøt udstyr.

Varemærker

Philips®-mærket og -logot er registrerede varemærker tilhørende Unilever SIG, Inc., og Philips brug af sådanne markér svarer over licens.

Copyright

© 2013 © Koninklijke Philips Electronics NV.
Spektationerne kan ændres uden varsel.Varemærker tilhører Koninklijke Philips Electronics NV eller deres respektive eiere. Philips forbeholder sig retten til at ændre produkter og til at ændre produktet uden at være forpligtet til at justere tidligere udgaver herfor.

Deutsch

Herzlich Willkommen zu Ihrem Kauf und willkommen bei Philips. Um die Unterstützung von Philips optimal nutzen zu können, sollten Sie Ihr Produkt unter www.philips.com/welcome registrieren.

1 Sicherheit

Lesen Sie alle Anweisungen sorgfältig durch, bevor Sie dieses Produkt verwenden. Wenn Sie sich bei der Verwendung nicht an die folgenden Hinweise halten, ersicht Ihre Garantie.

Risiko von Stromschlägen und Brandgefahr!

- Öffnen Sie auf keinen Fall das Gehäuse des Geräts.
- Setzen Sie das Gerät sowie das Zubehör weder Regen noch Wasser aus. Platzieren Sie niemals Batterien mit Flüssigkeiten wie Vaseline in der Nähe des Geräts. Wenn das Gerät außen oder innen mit Flüssigkeit in Kontakt kommt, ziehen Sie sofort den Netzstecker. Wenden Sie sich an das Philips Service-Center, um das Gerät vor der erneuten Nutzung überprüfen zu lassen.
- Setzen Sie das Gerät sowie das Zubehör nie offenem Feuer oder anderen Wärmequellen (z.B. direktem Sonnenlicht) aus.
- Führen Sie keine Gegenstände in die Lüftungsschlitze oder andere Öffnungen des Produkts ein.
- Wenn der Netzstecker bzw. Gerätestecker als Trennvorrichtung verwendet wird, muss die Trennfunktion frei zugänglich bleiben.
- Trennen Sie das Gerät von Gewittern vom Netzanschluss.
- Ziehen Sie immer am Stecker, um das Stromkabel vom Netzanschluss zu trennen, niemals am Kabel.

Kurzschluss- und Feuergefahr!

- Verwenden Sie nie ein Benutzerhandbuch aufgeführte Netzsteckel.
- Stellen Sie vor dem Verbinden des Geräts mit dem Stromnetz sicher, dass die Netzspannung mit dem auf der Rückseite des Geräts aufgedruckten Wert übereinstimmt. Verbinden Sie das Gerät nicht mit dem Netzanschluss, falls die Spannung nicht mit diesem Wert übereinstimmt.
- Setzen Sie das Gerät niemals Regen, Wasser, Sonne oder Hitze aus.
- Vermeiden Sie die Ausübung von Kraft auf Steckdosen. Lockere Steckdosen können Funktionsbeschädigung oder Feuer verursachen.

Gefahr von Beschädigungen für das Gerät und Verletzungen! Gefährdung

- Es dürfen keine Flüssigkeiten an das Produkt gelangen.
- Auf das Produkt dürfen keine möglichen Gefahrenquellen einwirken (z.B. mit einer Flüssigkeit gefüllte Gegenstände, brennende Kerzen).
- Platzieren Sie das Gerät niemals auf Netzkabeln oder anderen elektrischen Geräten.
- Wenn das Gerät bei Temperaturen unter 5 °C transportiert wird, packen Sie es aus und warten Sie, bis es Zimmertemperatur erreicht hat, bevor Sie es mit dem Netzanschluss verbinden.

Risiko der Überhitzung

- Stellen Sie dieses Gerät nicht in einen geschlossenen Bereich auf. Das Gerät benötigt an allen Seiten einen Lüftungsabstand von mindestens 10 cm.
- Halten Sie sicher, dass keine Vorhänge und anderen Gegenstände die Lüftungsschlitze des Geräts abdecken.

2 Verpackungsinhalt (Abb. 1)

Prüfen Sie zunächst den Lieferumfang.

3 Anschließen an die Stromversorgung (Abb. 2)

- Wählen Sie einen passenden Stecker aus und befestigen Sie ihn sicher am Netzstecker.
- Verbinden Sie das Netzkabel mit der Steckdose und dem Gerät.
- Drücken Sie den Regler für Lautstärke und Betrieb, um das Gerät einzuschalten.
- Um das Gerät in den Standby-Modus zu schalten, drücken Sie den Regler für Lautstärke und Betrieb.
- Vagt:
 - »Hovedenhed

4 Einstellen der Zeit und des Datums (Abb. 3)

< Hinweis >

- Halten Sie im Standby-Modus **MENU / INFO** gedrückt, bis **[See time]** angezeigt wird.
 - Die Ziffern der Stundenanzeige blinken.
- Drücken Sie die Taste **»»»»** um die Stunden einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Das Datum wird angezeigt, und die Ziffern der Tagesanzeige blinken.

- Drücken Sie die Taste **»»»»** um den Tag einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Ziffern der Monatsanzeige blinken.

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

Einstellen eines Alarms (Abb. 4)

Sie können zwei Alarmarten einstellen.

- Halten Sie **AL1** (oder **AL2**) zwei Sekunden lang gedrückt, und drücken Sie dann **[Alarm 1]** (oder **[Alarm 2]**) wird angezeigt, dabei blinkt **AL1** (oder **AL2**).
- Die jetzige Weckzeit wird angezeigt, dabei blinken die Ziffern der Stundenanzeige.

- Drücken Sie die Taste **»»»»** um die Stunden einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Die Minutenanzeige beginnt zu blinken.
- Drücken Sie die Taste **»»»»** um die Minuten einzustellen, und bestätigen Sie anschließend mit **SCAN / SELECT**.
 - Der Name der Alarmanzeige beginnt zu blinken (**DAB**, **FM** oder **Buzzer**).

Verwenden der DAB-Menüs

- Halten Sie **MENU / INFO** gedrückt, um das DAB-Menü zu aufrufen.
- Drücken Sie **»»»»** um durch die Menüs zu blättern.

Erneute Suche

Die vollständige Suche wird für einen Suchlauf nach viel größer Reichweite verwendet.

< DAB >

Drücken Sie **SCAN / SELECT**, um die Suche nach verfügbaren DAB-Sendern zu starten.

- Wenn die Suche abgeschlossen ist, wird der erste gespeicherte Sender gesendet.

Manuelles Einstellen eines Radiosenders

Mit dieser Funktion können Sie einen bestimmten Sender/eine bestimmte Frequenz manuell einstellen. Zusätzlich zur Ausrichtung der Antenne, können Sie auch mit dieser Funktion einen optimalen Empfang erreichen.

< DAB >

- Drücken Sie **SCAN / SELECT**, um die Senderliste aufzurufen.
- Drücken Sie wiederholt **»»»»** um einen Sender zwischen 54 und 131 auszuwählen.

< Manual tune >

- Drücken Sie **SCAN / SELECT**, um die Optionsauswahl zu bestätigen.

DRC (Dynamic Range Control)

DRC entfernt oder fügt einen Anpassungsgrad für die Unterschiede im Dynamikumfang zwischen den Radiosendern hinzu.

< DRC >

- Drücken Sie **SCAN / SELECT**, um die Untertermüds auszuwählen.
- Drücken Sie wiederholt auf **»»»»** um eine Option auszuwählen.
- Drücken Sie zur Bestätigung der Taste **PRESET**.
- Der Radiosender wird mit der ausgewählten Sequenznummer gespeichert.

- »DRC off« Es wird keine Anpassung durchgeführt.
- »DRC low« Es wird eine mittlere Anpassung durchgeführt.
- »DRC high« Es wird eine maximale Anpassung durchgeführt.

- Drücken Sie **SCAN / SELECT**, um die Optionsauswahl zu bestätigen.

< System >

Drücken Sie **SCAN / SELECT**, um die aktuelle Software-Version anzuzeigen.

Entfernen ungültiger Sender

Entferne Sender in der Liste bieten keinen Service, wenn Sie in eine andere Region reisen. Vor dem Sendernamen eines ungültigen Senders wird ein Fragezeichen (?) angezeigt.

- 2 Drücken Sie wiederholt auf / um eine Option auszuwählen.
 - **[No]**: Rückkehr zum vorherigen Menü.
 - **[Yes]**: Entfernen ungültiger Sender aus der Senderliste.