

Register your product and get support at
www.philips.com/welcome

CD180



EN User manual

PHILIPS

Contents

1	Important safety instructions	4			
2	Your CD180	5			
	What is in the box	5			
	Overview of the phone	6			
	Overview of the base station	7			
	Display icons	7			
3	Get started	8			
	Connect the base station	8			
	Install the handset	8			
	Configure your phone (country dependent)	9			
	Charge the handset	9			
	Check the battery level	10			
	What is standby mode?	10			
	Check the signal strength	10			
	Switch your handset On/Off	10			
4	Calls	11			
	Make a call	11			
	End a call	12			
	Answer a call	12			
	Adjust the earpiece volume	12			
	Mute the microphone	12			
	Make a second call	12			
	Answer a second call	12			
	Toggle between two calls	12			
	Make a conference call with the external callers	13			
5	Text and numbers	14			
	Enter text and numbers	14			
6	Phonebook	15			
	View the phonebook	15			
	Search a record	15			
	Call from the phonebook	15			
	Access the phonebook during a call	15			
	Add a record	15			
	Edit a record	16			
	Delete a record	16			
	Delete all records	16			
	Direct access memory	16			
7	Call log	17			
	View the call records	17			
	Save a call record to the phonebook	17			
	Delete a call record	17			
	Delete all call records	17			
	Return a call	17			
8	Redial list	18			
	View the redial records	18			
	Redial a call	18			
	Save a call record to the phonebook	18			
	Delete a redial record	18			
	Delete all redial records	18			
9	Phone settings	19			
	Sound settings	19			
	Name the handset	19			
	Set the date and time	19			
	Set the display language	19			
10	Services	20			
	Auto conference	20			
	Network type	20			
	Select the recall duration	20			
	Dial mode	20			
	Register the handsets	21			
	Unregister the handsets	21			
	Restore default settings	21			
11	Default settings	22			
12	Technical data	23			
13	Frequently asked questions	24			
14	Notice	25			
	Declaration of conformity	25			
	Use GAP standard compliance	25			
	Compliance with EMF	25			

1 Important safety instructions

Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

To avoid damage or malfunction



Caution

- Use only the power adapter listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.
- Metallic objects may be retained if placed near or on the handset receiver.

About operating and storage temperatures

 
- Operate in a place where temperature is always between 0°C to +35°C (32°F to 95°F).
- Store in a place where temperature is always between -20°C and +45°C (-4°F to 113°F).
- Battery life may be shortened in low temperature conditions.

2 Your CD180

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


What is in the box

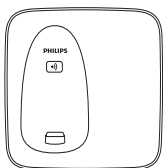


Base station



 
Handset



Charger

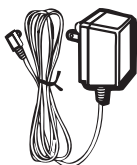 

Power adapter

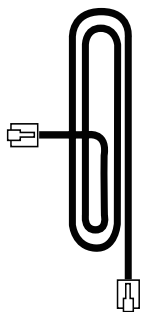 

Line cord*



Guarantee

 


Quick start guide

Note


- * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.


Overview of the phone

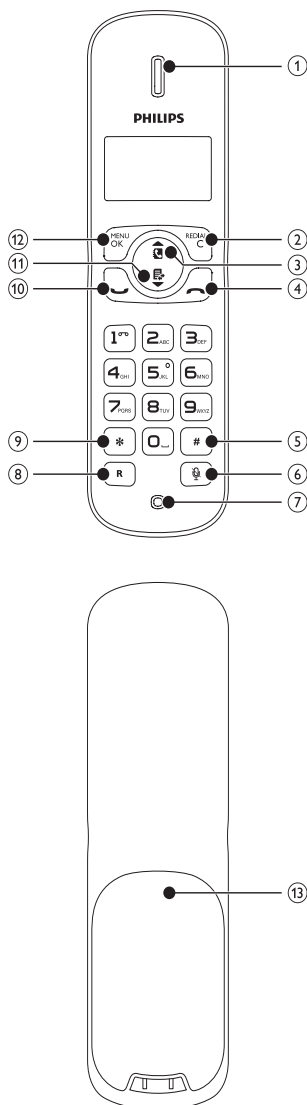

1	Earpiece	
2	REDIAL/C	<ul style="list-style-type: none"> - Delete text or digits. - Cancel operation. - Enter the redial list.
3		<ul style="list-style-type: none"> - Scroll up on the menu. - Increase the earpiece volume. - Enter the phonebook.
4		<ul style="list-style-type: none"> - End the call. - Exit the menu/operation. - Press and hold to turn the handset on/off.
5	#	<ul style="list-style-type: none"> - Make a predial call. - Press and hold to enter a pause.
6		<ul style="list-style-type: none"> - Mute/unmute the microphone.
7	Microphone	
8	R	<ul style="list-style-type: none"> - Recall key (This function is network dependent.)
9	*	<ul style="list-style-type: none"> - Set the dial mode (pulse mode or temporary tone mode).
10		<ul style="list-style-type: none"> - Make and receive calls.
11		<ul style="list-style-type: none"> - Scroll down on the menu. - Decrease the earpiece volume. - Enter the call log.
12	MENU/OK	<ul style="list-style-type: none"> - Access the main menu. - Confirm the selection. - Enter the options menu.
13	Battery door	



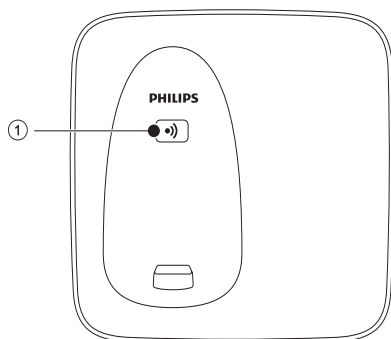 









Overview of the base station



- | | |
|---|---|
| 1 |  <ul style="list-style-type: none"> - Find handsets. - Press and hold to register additional handsets. |
|---|---|

Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
	When the handset is on the base station/charger, the bars keep scrolling until charging completes.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It displays the link status between the handset and base station. The more bars are shown, the better the connection is.
	It indicates a received call in the call log.
	It indicates an outgoing call in the redial list.
	It flashes when there is a new missed call. It is steadily on when browsing the missed calls in call log.
	It flashes when receiving an incoming call. It remains steadily on when you hang up the phone.
	The ringer is off.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. It is off when there is no voice message.
	It displays when you scroll up/down a list/increase and decrease the volume.
	There is more digits on the right.

3 Get started



Caution

- Ensure you have read the safety instructions in the "Important" section before you connect and install your handset.

Connect the base station



Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.

 


Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket.. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.
- 3 Connect each end of the power adapter to (for multi handset version only):
 - the DC input jack at the bottom of the extra handset charger.

- the power socket on the wall.

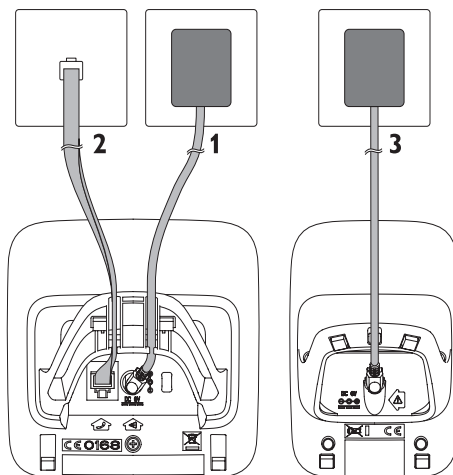

Install the handset



Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.



Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

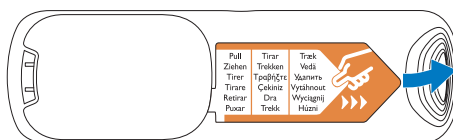

Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **MENU/OK**.

Set the country/language

Select your country/language if prompted, then press **MENU/OK** to confirm.

↳ The country/language setting is saved.

Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

Set the date and time

Tip

- To set the date and time later, press **REDIAL/C** to skip this setting.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [DATE/TIME]**, then press **MENU/OK** to confirm.
- 3 Press the numeric buttons to enter the date, then press **MENU/OK** to confirm.

↳ The time setting menu is displayed on the handset.
- 4 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press **⌚ / ⌚** to select **[AM]** or **[PM]**.
- 5 Press **MENU/OK** to confirm.

Set the date and time format

- 1 Press **MENU/OK**.

- 2 Select **[PHONE SETUP] > [DATE/TIME]**, then press **MENU/OK** to confirm.
- 3 Select the setting. Select **[DD/MM]** or **[MM/DD]** as the date display and **[12 HOURS]** or **[24 HOURS]** as the time display. Then press **MENU/OK** to confirm.

↳ The setting is saved.

Note

- The date and time format setting is country dependent.

Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

 
↳ The handset starts charging.

Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

Your phone is now ready to use.

Check the battery level

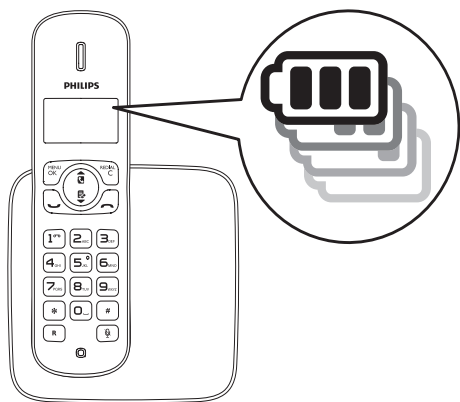

The battery icon displays the current battery level.

	When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
	When the handset is on the base station/charger, the bars flash until charging completes.
	The empty battery icon flashes. The battery is low and needs recharging.

The handset turns off if the batteries are empty. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name and number/date and time, signal icon, and battery icon.

Check the signal strength

	It displays the link status between the handset and base station. The more bars are shown, the better the connection is.

- Ensure the handset is linked to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Switch your handset On/Off

- Press and hold to switch off the handset. The handset's screen turns off.



Note

- When the handset is switched off, no call can be received.
- Press and hold to switch on the handset. It takes a few seconds for the handset to power up.

4 Calls



Note

- When the power fails, the phone cannot access emergency services.



Tip


- Check the signal strength before you make a call or when you are in a call. For more information, see "Check the signal strength" in the Get started section.

Make a call


You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

Quick call

- 1 Press .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.


Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **REDIAL/C**.
 - To enter a pause, press and hold **#**.
- 2 Press  to dial out the call.

Redial the most recent number

- 1 Press **REDIAL/C**.

- ↳ The redial list is displayed and the most recent number is highlighted.

- 2 Press .
 - ↳ The most recent number is then dialed out.

Call from the redial list

You can make a call from the redial list.



Tip

- For more information, see "Redial a call" in the Redial list section.

Call from the phonebook

You can make a call from the phonebook list.



Tip

- For more information, see "Call from the phonebook" in the Phonebook section.

Call from the call log

You can return a call from the received or missed call log.



Tip

- For more information, see "Return a call" in the Call log section.



Note

- The call timer displays the talk time of your current call.




Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press , or
- Place the handset to the base station or charging cradle.

Answer a call

When the phone rings, press .



Warning

- When the handset rings, keep the handset away from your ear to avoid ear damage.



Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.



Tip

- When there is a missed call, the handset displays a notification message.

Turn off the ringer for all incoming calls


When the phone rings, press .

Adjust the earpiece volume


Press  /  to adjust the volume during a call.

- ↳ The earpiece volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press  during a call.
 - ↳ The handset displays [MUTE ON].

- ↳ The caller cannot hear you, but you can still hear his voice.

- 2 Press  again to unmute the microphone.
 - ↳ You can now communicate with the caller.

Make a second call



Note

- This service is network dependent.

- 1 Press **R** during a call.
 - ↳ The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call



Note

- This is a country dependent setting.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **R** and **2_{sec}** to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **R** and **1^{sec}** to end the current call and answer the first call.

Toggle between two calls

- 1 Press **R** and **2_{sec}**.
 - ↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call with the external callers



Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, press **R**, then **3_{DEF}**.

- ↳ The two calls are combined and a conference call is established.

5 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **REDIAL/C** to delete the character. Press **←** / **→** to move the cursor left and right.

key	Characters (for English/ Latin/Norwegian/ Danish/Polish)
0	space 0 Ø
1	- 1
2	A B C 2 Æ
3	D E F 3
4	G H I 4
5	J K L 5 Ł
6	M N O 6
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
*	* ? / \ ()
#	# ' , - &

Key	Characters (for Greek)
0	space 0
1	- 1
2	A B 2 Γ
3	Δ E Z 3
4	H Θ 4
5	K Λ M 5
6	N Ξ O 6
7	Π P Σ 7
8	T Υ Φ 8
9	X Ψ Ω 9

6 Phonebook

This phone has a phonebook that stores up to 50 records. You can access the phonebook from the handset. Each record can have a name up to 12 characters long and a number up to 24 digits long.

View the phonebook



Note

- You can view the phonebook on one handset only each time.

- 1 Press **Ⓜ** or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Select a contact and view the available information.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

- 1 Press **Ⓜ** or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Press **Ⓜ** and **Ⓛ** to scroll through the phonebook list.

Enter the first character of a contact

- 1 Press **Ⓜ** or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.

- 2 Press the alphanumerical key that corresponds to the character.
↳ The first record that starts with this character is displayed.

Call from the phonebook

- 1 Press **Ⓜ** or press **MENU/OK** > **[PHONEBOOK]** > **[VIEW]** to access the phonebook list.
- 2 Select a contact in the phonebook list.
- 3 Press **☎** to make the call.

Access the phonebook during a call

- 1 Press **MENU/OK**, select **[PHONEBOOK]** then press **MENU/OK** again to confirm.
- 2 Select the contact, then press **MENU/OK** to confirm.
↳ The number can be viewed.

Add a record



Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK]** > **[ADD NEW]**, then press **MENU/OK** to confirm.
- 3 Enter the name, then press **MENU/OK** to confirm.
- 4 Enter the number, then press **MENU/OK** to confirm
↳ Your new record is saved.



Tip

- Press and hold **#** to insert a pause.



Note

- The phonebook only saves new number entry.



Tip

- For more information on how to edit the numbers and name, see the section on Text and numbers.

Edit a record

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK] > [EDIT]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.
- 4 Edit the name, then press **MENU/OK** to confirm.
- 5 Edit the number, then press **MENU/OK** to confirm.
 - ↳ The record is saved.

Delete a record

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK] > [DELETE]**, then press **MENU/OK** to confirm.
- 3 Select a contact, then press **MENU/OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 4 Press **MENU/OK** to confirm.
 - ↳ The record is deleted.

Delete all records

- 1 Press **MENU/OK**.
- 2 Select **[PHONEBOOK] > [DELETE ALL]**, press **MENU/OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **MENU/OK** to confirm.
 - ↳ All records (except the 2 direct access memory records) are deleted.

Direct access memory

You have 2 direct access memories (Keys 1 and 2). To dial the saved phone number automatically, press and hold on the keys in standby mode.

Depending on your country, Keys 1 and 2 are preset to **[1_VOICEMAIL]** (voice mail number) and **[2_INFO SVC]** (information service number) of your network operator respectively.

7 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Your phone can store up to 20 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.



Note

- Ensure the number in the call list is valid before you can call back directly from the call list.

View the call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** and select **[VIEW]** for more available information.

Save a call record to the phonebook

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[SAVE NUMBER]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.

- 5 Enter and edit the number, then press **MENU/OK** to confirm.
↳ The record is saved.

Delete a call record

- 1 Press .
↳ The incoming call log is displayed.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation requests.
- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

Delete all call records

- 1 Press .
↳ The incoming call log is displayed.
- 2 Press **MENU/OK** to enter the options menu.
- 3 Select **[DELETE ALL]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation requests.
- 4 Press **MENU/OK** to confirm.
↳ All records are deleted.

Return a call

- 1 Press .
- 2 Select a record on the list.
- 3 Press to make the call.


8 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 10 redial records.

View the redial records

Press **REDIAL/C**.

Redial a call

- 1 Press **REDIAL/C**.
- 2 Select a record, then press .
↳ The number is dialed out.

Save a call record to the phonebook

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[SAVE NUMBER]**, then press **MENU/OK** to confirm.
- 4 Enter and edit the name, then press **MENU/OK** to confirm.
- 5 Enter and edit the number, then press **MENU/OK** to confirm.
↳ The record is saved.

Delete a redial record

- 1 Press **REDIAL/C** to enter the list of dialed calls.

- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

Delete all redial records

- 1 Press **REDIAL/C** to enter the list of dialed calls.
- 2 Select a record, then press **MENU/OK** to confirm.
- 3 Select **[DELETE ALL]**, then press **MENU/OK** to confirm.
↳ The handset displays a confirmation request.
- 4 Press **MENU/OK** to confirm.
↳ The record is deleted.

9 Phone settings

You can customize the settings to make it your own phone.

Sound settings

Set the handset's ringtone volume

You can select among 5 ringtone volume levels or **[OFF]**.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [RING VOLUME]**, then press **MENU/OK** to confirm.
- 3 Select a volume level, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the handset's ringtone

You can select from 5 ringtones.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [RING TONES]**, then press **MENU/OK** to confirm.
- 3 Select a ringtone, then press **MENU/OK** to confirm.
↳ The setting is saved.

Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [SOUNDS] > [KEY TONE]**, then press **MENU/OK** to confirm.
- 3 Select **[ON]/[OFF]**, then press **MENU/OK** to confirm.
↳ The setting is saved.

Name the handset

The name of the handset can be up to 10 characters. It is displayed on the handset screen in standby mode.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [PHONE NAME]**, then press **MENU/OK** to confirm.
- 3 Enter or edit the name. To erase a character, press **REDIAL/C**.
- 4 Press **MENU/OK** to confirm.
↳ The setting is saved.

Set the date and time

For more information, see "Set the date and time" and "Set the date and time format" in the Get started section.

Set the display language



Note


- This feature only applies to models with multiple-language support.
- Languages available for selection vary with different countries.

- 1 Press **MENU/OK**.
- 2 Select **[PHONE SETUP] > [LANGUAGE]**, then press **MENU/OK** to confirm.
- 3 Select a language, then press **MENU/OK** to confirm.
↳ The setting is saved.

10 Services

The phone supports a number of features that help you handle and manage the calls.

Auto conference

To join an external call with another handset, press .

Activate/Deactivate auto conference

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [CONFERENCE]**, then press **MENU/OK** to confirm.
- 3 Select **[AUTO]/[OFF]**, then press **MENU/OK** to confirm.
↳ The setting is saved.

Network type

Note

- This feature only applies to models with network type support.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [NETWORK TYPE]**, then press **MENU/OK**.
- 3 Select a network type, then press **MENU/OK**.
↳ The setting is saved.

Select the recall duration

Ensure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[SHORT]**, **[MEDIUM]** and **[LONG]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [RECALL TIME]**, then press **MENU/OK** to confirm.
- 3 Select an option, then press **MENU/OK** to confirm.
↳ The setting is saved.

Dial mode

Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

Set the dial mode

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [DIAL MODE]**, then press **MENU/OK** to confirm.
- 3 Select a dial mode, then press **MENU/OK** to confirm.
↳ The setting is saved.

Note

- If your phone is in pulse dial mode, press * during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

Register the handsets

You can register additional handsets to the base station. The base station can register up to 4 handsets.

- 1 Press **MENU/OK** on the handset.
- 2 Select **[SERVICES] > [REGISTER]**, then press **MENU/OK** to confirm.
- 3 Press and hold **⏻** on the base station for 5 seconds.
- 4 Enter the system PIN. Press **REDIAL/C** to make corrections.
- 5 Press **MENU/OK** to confirm the PIN.
 - ↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.



Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.



Note

- The preset PIN is 0000. No change can be made on it.

↳ The handset is unregistered.



Tip

- The handset number displays beside the handset name in standby mode.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU/OK**.
- 2 Select **[SERVICES] > [RESET]**, then press **MENU/OK** to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press **MENU/OK** to confirm.
 - ↳ All settings are reset.
 - ↳ The welcome screen displays.



Tip

- For more information about the default settings, see the section on Default settings.

Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Press **MENU/OK**.
- 3 Select **[SERVICES] > [UNREGISTER]**, then press **MENU/OK** to confirm.
- 4 Enter the system PIN. (The preset PIN is 0000). Press **REDIAL/C** to remove the number.
- 5 Select the handset number to be unregistered.
- 6 Press **MENU/OK** to confirm.

11 Default settings

Language*	Country dependent
Handset name	PHILIPS
Date	01/01/11
Date format*	Country dependent
Time	00:00am
Time format*	Country dependent
Phonebook list	Unchanged
Recall time*	Country dependent
Dial mode*	Country dependent
Area code*	Country dependent
Carrier code*	Country dependent
Receiver volume	[VOLUME 3]
Handset ring volume	[VOLUME 3]
Handset key tone	[ON]
PIN code	0000



Note

- *Country dependent features

12 Technical data

Display

- Amber LCD backlight

General telephone features

- Caller name & number identification
- Conference call and voicemails
- Maximum talk time: 12 hours

Phonebook list, Redial list and Call log

- Phonebook list with 50 entries
- Redial list with 10 entries
- Call log with 20 entries

Battery

- CORUN: 2 x AAA NiMH 1.2V 500mAh rechargeable batteries
- SANIK: 2 x AAA NiMH 1.2V 500mAh rechargeable batteries

Power adapter

Base and charger:

- Philips: SSW-1920UK-2, Input: 100-240V 50/60Hz 0.2A; Output: 6V 500mA

Power consumption

- Power consumption in standby mode: 0.6 W

Weight and dimensions

- Handset: 113.5 grams
- 46.1 x 164.5 x 27.5 mm (W x H x D)
- Base: 97 grams
- 108.4 x 79.5 x 102.0 mm (W x H x D)
- Charger: 50 grams
- 73.5 x 78.5 x 89.5 mm (W x H x D)

Temperature range

- Operation: 0°C to +35°C (32°F to 95°F)
- Storage: -20°C to +45°C (-4°F to 113°F)

Relative humidity

- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C

13 Frequently asked questions

No signal bar displays on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[UNREGISTERED]**, register your handset.



Tip

- For more information, see "Register the handsets" on the Services section.

If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge.

- Ensure the batteries are inserted correctly.
- Ensure the handset is placed properly on the charger. The battery icon animates when charging.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

No display

- Ensure the batteries are charged.
- Ensure there are power and phone connections.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

The handset does not ring.

Ensure the handset ringtone is turned on.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

14 Notice

Declaration of conformity

Hereby Philips Consumer Lifestyle, P&A, declares that the CD180 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

This product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC. Following this directive, this product can be brought into service in the following countries:

CE 0168 R&TTE Directive 1999/5/EC			
AT ✓	BE ✓	BG ✓	CY ✓
CZ ✓	DK ✓	EE ✓	FI ✓
FR ✓	DE ✓	GR ✓	HU ✓
IS ✓	IE ✓	IT ✓	LV ✓
LI ✓	LT ✓	LU ✓	MT ✓
NL ✓	NO ✓	PL ✓	PT ✓
RO ✓	SK ✓	SI ✓	ES ✓
SE ✓	CH ✓	UK ✓	

Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station,

put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product

is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted.

We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

