

# Quick Start Guide






**Step A** *Connect*

**Step B** *Setup*




**Step C** *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

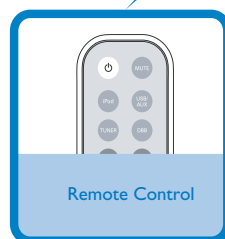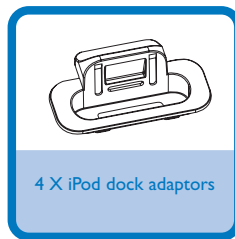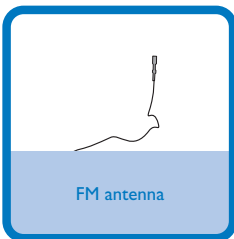

 Pull out the plastic protective sheet before use.

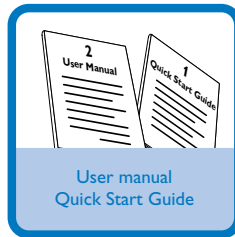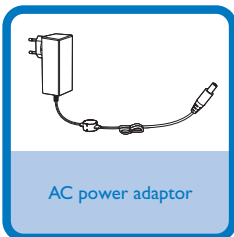

## Step A **Connect**


- 1 Connect the FM antenna.
- 2 Connect the AC power adaptor of the system.
- 3 Connect the speakers.

### Tip

See the User Manual for how to connect other equipment to this system.

### Note:


— Position the FM antenna away from the speaker wires to avoid electrical interference.

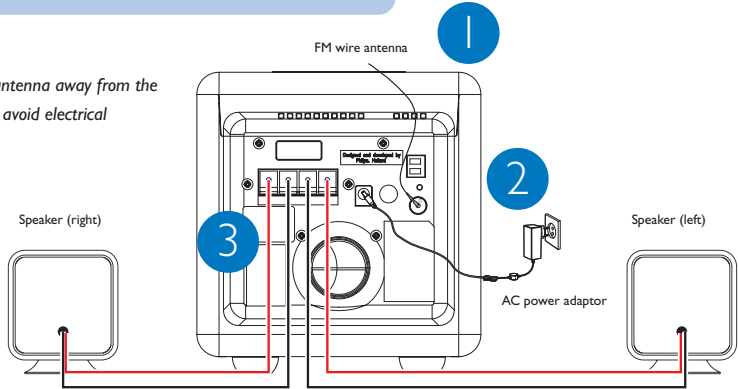

## Step B **Setup**


### Setting the clock


- 1 In standby mode, press **PROG/CLOCK** for more than two seconds.  
→ The clock digits flash.
- 2 Press **ALBUM/PRESET** ▲/▼ to set the minutes.
- 3 Press ◀/▶ to set the hours.
- 4 Press **PROG/CLOCK** to confirm the time.

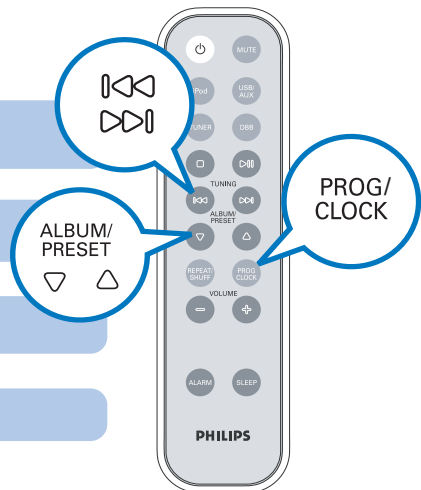

## Playing a USB mass storage device


With the system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **USB/AUX** once or more to select **USB**.
- 3 Play the USB's audio files.

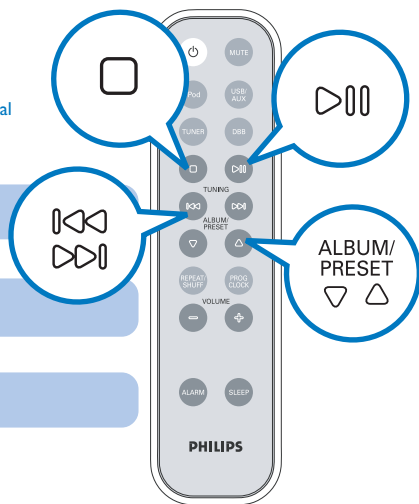

## Programming and tuning to radio stations

- 1 Press **TUNER** to select the tuner source.
- 2 Press **PROG/CLOCK** for more than 3 seconds to program all available stations.
- 3 Press **ALBUM/PRESET** ▲ / ▼ until the desired preset station is displayed.

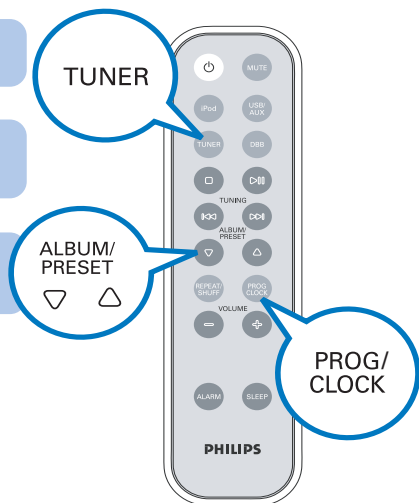

## Playing Apple iPod using DC199/DC199B

1

Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.

2

Correctly place the compatible iPod player into the dock.

3

Press **iPod** to select the iPod source.

4

Power on your iPod player.

5

Select and play your favourite songs stored in the iPod player.

### Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example **USB/AUX**).
- Then select the desired function (for example **▶ ||, |◀◀, ▶▶▶ |** ).

### Tip

Detailed playback features and additional functions are described in the User Manual.

