Always there to help you

Register your product and get support at www.philips.com/support



AJ4300



User manual



Contents

1	Important Safety	2 2
2	Your clock radio Introduction What's in the box	3 3 3 4
	Overview of the clock radio	4
3	Get started Install battery Connect power	5 5 5 5
	Set clock	5
4	Listen to FM radio Tune to FM radio stations Store FM radio stations automatically	6 6 6
	Store FM radio stations automatically Store FM radio stations manually Select a preset radio station Adjust volume	6 6
5	Set alarm timer Set alarm Activate/deactivate alarm timer Snooze the alarm	7 7 7 7
6	Other features Set sleep timer Charge your device Adjust display brightness	8 8 8 8
7	Product information Specifications	9
8	Troubleshooting	10
9	Notice	11

1 Important

Safety



Warning

- · Never remove the casing of this clock radio.
- · Never lubricate any part of this clock radio.
- Never place this clock radio on other electrical equipment.
- Keep this clock radio away from direct sunlight, naked flames or heat.
- Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.
- Read and follow these instructions.
- Make sure that there is enough free space around the product for ventilation.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Refer all servicing to qualified service personnel. Servicing is required when the clock radio has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the clock radio, the clock radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the clock radio:
 - Install the batteries correctly, + and as marked on the clock radio.

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove the batteries when the clock radio is not used for a long time.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- The clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Note

 The type plate is located on the bottom of the apparatus.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction

With this clock radio, you can:


- listen to FM radio;
- set two alarms, and
- wake up to buzzer or radio.

What's in the box


Check and identify the contents of your package:

- Clock radio
- Short User Manual
- Safety & notice leaflet

Overview of the clock radio

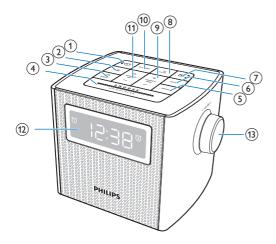

- (1) To
 - Set Alarm 1.
 - · View alarm settings.
 - · Activate or deactivate alarm timer.
- 2 zZ
 - Set sleep timer.
- ③ O/RADIO
 - Turn the radio on or off
- 4 SNOOZE/BRIGHTNESS
 - Snooze the alarm.
 - · Adjust display brightness.
- (5) PROG
 - Program the sequence of the radio stations.
- 6 SCAN
 - Scan and store FM radio stations automatically.
- (7) ¹2
 - Set Alarm 2.
 - · View alarm settings.
 - Activate or deactivate alarm timer.
- 8 12/24 HR
 - Set 12 or 24 time format.

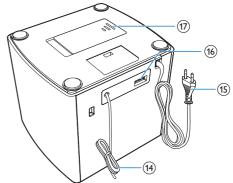

- 9 + PRESET/ MIN -
 - · Adjust minute.
 - · Select preset radio stations.
- (10) SET TIME
 - Set time.
- (11) + TUNING/ HR -
 - · Adjust hour.
 - Tune to FM radio stations.
- 12 Display panel
- (13) VOL knob
 - Adjust volume.
- 14) FM ANT
 - Improve FM reception.
- 15 Power plug
 - Connect AC power.
- (16) USB socket
 - Charge your mobile devices.
- (17) Battery compartment

3 Get started

Always follow the instructions in this chapter in sequence.

Install battery

 


Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- The batteries contain chemical substances, so they should be disposed of properly.

You can only use AC power as power supply. The battery can only back up clock and alarm settings.

 Install two AA batteries (not supplied) as illustrated below:




Connect power



Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC plug, always pull the plug from the socket. Never pull the cord.

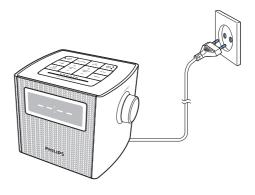

Set clock

- 1 Press **SET TIME** to activate clock setting mode.
 - → The hour and minute digits blink.
- 2 Press + TUNING/ HR to set hour.
- 3 Press + PRESET/ MIN to set minute.
- 4 Press **SET TIME** to confirm.
- 5 Press 12/24 HR to select 12/24 hour format.

4 Listen to FM radio

Tune to FM radio stations



Tip

- Position the antenna as far as possible from any electrical appliances.
- For better reception, fully extend and adjust the position of the antenna.
- 1 Press ₺ /RADIO to turn on FM radio.⇒ ② is displayed.
- 2 Press and hold + TUNING/ HR for two seconds.
 - → The clock radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more radio stations.

To tune to a station manually:

 In tuner mode, press + TUNING/ HR repeatedly to select a frequency.



Tip

• To turn the radio off, press \circlearrowleft /RADIO again.

Store FM radio stations automatically

- In FM tuner mode, press SCAN.
 - The clock radio stores all the available FM radio stations, and then broadcasts the first available station automatically.

Store FM radio stations manually



Note

- · You can store a maximum of 20 FM radio stations.
- 1 In FM tuner mode, tune to an FM radio station.
- 2 Press PROG.
 - → The preset number begins to blink,
- 3 Press + PRESET/ MIN repeatedly to select a number.
- 4 Press PROG again to confirm.
- 5 Repeat steps 1 to 4 to store other stations.



Note

• To remove a pre-stored station, store another station in its place.

Select a preset radio station

 In FM tuner mode, press + PRESET/ MIN repeatedly to select a preset radio station.

Adjust volume

 Rotate the VOL knob to increase or decrease the volume level.

5 Set alarm timer

Set alarm

You can set two alarms to ring at different time.



Note

- · Make sure that the clock is set correctly.
- Press and hold of or of for two seconds to activate alarm setting mode.
 - → The hour and minute digits and the alarm icon (or or) begin to blink.
- 2 Press + TUNING/ HR to set hour.
- 3 Press + PRESET/ MIN to set minute.
- 4 Press of or to confirm.
 - → [buz] (buzzer) or your last listened frequency blinks.
- 5 Press + TUNING/ HR or + PRESET/ MIN - to select an alarm source: buzzer or your last listened channel.
- 6 Press of or of to confirm.



Гір

When alarm sounds, volume increases gradually. You cannot adjust the alarm volume manually.

Activate/deactivate alarm timer

- Press of or of repeatedly to activate or deactivate the alarm timer.
 - → ⑦ or ② appears if the alarm timer is on and disappears if it is off.
 - To stop the alarm, press the corresponding of or of.
 - → The alarm repeats ringing for the next day.

Snooze the alarm

- When alarm sounds, press SNOOZE.
 - → The alarm snoozes and repeats ringing nine minutes later.

6 Other features

Adjust display brightness

 Press BRIGHTNESS repeatedly to select different brightness levels.

Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

• Press **ZZ** repeatedly to select the sleep timer period (in minutes).

$$15 \rightarrow 30 \rightarrow 60 \rightarrow 90 \rightarrow 120$$

To deactivate the sleep timer:

In sleep timer setting mode, press **ZZ** repeatedly until **[OFF]** (off) appears.

Charge your device

With this clock radio, you can charge your external devices, such as your cell phone, MP3 player or other mobile devices.



- Use a USB cable (not supplied) to connect your device with the clock radio.
 - → Once the device is recognized, the charging starts.



Note

- The maximum current for USB charging is 1A.
- · Charging all devices with this product is not guaranteed.

7 Product information



Product information is subject to change without prior notice

Specifications

Amplifier	
Rated Output Power	0.5 W RMS

Tuner

Tuning Range (FM)	87.5 - 108 MHz
Tuning Grid	50 KHz
Search Selectivity	<28 dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>55 dB

USB Charging Support 5 V, 1 A

General information

AC Power	100-240V ~, 50/60 Hz	
Battery	Two AA batteries	
Operation Power	<10 W	
Consumption		
Standby Power	<1 W	
Consumption		
Dimensions - Main	129 × 104 × 105 mm	
Unit $(W \times H \times D)$		
Weight - Main Unit	0.5 kg	

8 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the clock radio is connected properly.
- Make sure that there is power at the AC outlet.

No response from the clock radio

 Disconnect and reconnect the AC power plug, then turn on the clock radio again.

Poor radio reception

- Keep the clock radio away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the FM antenna.

Alarm does not work

Set the clock/alarm correctly.

9 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment. Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Copyright © 2015 Gibson Innovations Limited. Revised Edition © 2017 This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

