

user manual / utilisation manual / manual del usuario / Manual do usuário



PHILIPS

Batteries (not included), Battery indication, Inserting batteries, Be responsible Respect copyrights

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Printed in China WK8063

English CONTROLS / POWER SUPPLY

- 1 PH... switches the player on, starts or pauses CD playback
2 DISPLAY... display
3 STOP... stops CD play, clears a program or switches the player off
4 DBB... switches the bass enhancement on and off
5 PROG... programs tracks and reviews the program
6 MODE/ESP... selects the different playing possibilities
7 VOLUME +/-... adjust the volume
8 CVLINE OUT... 3.5 mm headphone socket
9 OPEN... opens the CD lid
10 HOLD... locks all buttons
11 RESUME... stores the last position of a CD track played
12 4.5V DC... socket for external power supply

POWER SUPPLY / GENERAL INFORMATION

Mains adapter (not included)
Use only the AY 3162 adapter (4.5 V / 450 mA direct current, positive pole to the center pin)
Environment information
All redundant packing material has been omitted.

GENERAL INFORMATION / CD PLAY

In-car use (not included)
Only use the AY 2545 (4822 219 10033) or AY 3548 (3140 118 17898) car voltage converter
Put the set on a horizontal, vibration-free and stable surface.

CD PLAY / FEATURES

Playback information
If a CD-Recordable (CD-R) or a CD-ReWritable (CD-RW) is not recorded properly
When playing a CD-Recordable (CD-RW), please note that it takes 3-15 seconds after pressing PH for sound reproduction to start.

FEATURES

Programming track numbers
You can store up to 30 tracks to play in a program.
While playback is stopped, select a track with 1-4 or 0-9.

FEATURES / TROUBLESHOOTING

RESUME and HOLD
You can interrupt playback and continue (even after an extended period) from the position where playback stopped (RESUME) and you can lock all buttons of the set so that no other will be executed (HOLD).
HOLD - locking all buttons
You can lock the buttons of the set by switching the slider to HOLD.

Batteries (not included)

You can use the following batteries with this CD player:
normal batteries type LR6, UM3 or AA (preferably Philips), or alkaline batteries type LR6, UM3 or AA (preferably Philips).

CD player and CD handling

Do not touch the lens (A) of the CD player.
Do not expose the unit, batteries or CDs to humidity, rain, sand or excessive heat (used by heating equipment or direct sunlight).

Playing a CD

This CD-player can play all kinds of Audio Discs such as CD-Recordables and CD-ReWritable.
1 Push the OPEN button to slide open the player.
2 Insert an audio CD, printed side up, by pressing the CD onto the hub.

Selecting a track and searching

Selecting a track during playback
Briefly press 1-4 or 0-9 once or several times to skip to the current, previous or next track.
Selecting a track when playback is stopped
Briefly press 1-4 or 0-9 once or several times to select the track number you wish to play.

Selecting different playing possibilities-MODE

It is possible to play tracks in random order, to repeat a single track or the entire CD, and to play the first few seconds of each track.
1 Press MODE during playback as often as required in order to activate one of the following modes:
SHUFFLE: All tracks of the CD are played in random order until all of them have been played once.

Troubleshooting

WARNING: Under no circumstances should you try to repair the set yourself as this will invalidate the warranty.
The CD player has no power, or playback does not start
Check that your batteries are not dead or empty, that they are inserted correctly, that the contact pins are clean.

FRANÇAIS COMMANDES / ALIMENTATION ELECTRIQUE

COMMANDES (voir figures 1 à 12)

- 1 PH... allume le lecteur, démarre ou interrompt la lecture CD
2 AFFICHAGE... affiche le titre de lecture CD, efface la programmation du CD ou éteint le lecteur
3 RECHERCHE... recule d'une piste sur le CD ou effectue une recherche vers l'arrière
4 DBB... active/désactive l'amplification des basses.

ALIMENTATION ELECTRIQUE / INFORMATIONS GENERALES

N'utilisez que le bloc d'alimentation AY 3162 (4.5 V / 450 mA, courant continu, tension positive sur la borne centrale).
Bloc d'alimentation (non fournis)
1 Assurez-vous que la tension du réseau correspond à celle du bloc d'alimentation.

INFORMATIONS GENERALES / LECTURE CD

N'utilisez que le convertisseur de tension pour autoradio AY 2545 (4822 219 10033) ou AY 3548 (3140 118 17898) (4.5 V courant continu, pôle positif sur la broche centrale) et la cassette-adaptatrice pour autoradio AY 3501.
1 Placez l'appareil sur une surface horizontale, exempte de vibrations et stable.

LECTURE CD / CARACTERISTIQUES

Informations relatives à la lecture
Si un CD enregistrable (CD-R) ou réenregistrable (CD-RW) n'est pas enregistré correctement, l'indication 'F d'ISC' est affichée.
Si vous souhaitez lire un CD réenregistrable (CD-RW), il faut entre 3-15 secondes pour que la lecture démarre après avoir appuyé sur PH.

CARACTERISTIQUES

Programation des numéros de pistes
Vous pouvez enregistrer jusqu'à 30 pistes dans un programme.
1 Lorsque la lecture est arrêtée, sélectionnez une piste à l'aide de 1-4 ou 0-9.

CARACTERISTIQUES / PANNEES ET REMEDES

RESUME et HOLD
Vous pouvez interrompre la lecture et la reprendre (même après une longue pause) à l'endroit où elle a été arrêtée (RESUME) et vous pouvez bloquer tous les boutons de l'appareil afin d'empêcher toute action (HOLD).
RESUME - reprend à partir d'ENDROIT où vous avez arrêté
1 Pendant la lecture, faites glisser le commutateur en position RESUME pour activer la fonction RESUME.

QUICK START MISE EN SERVICE RAPIDE

- 1 OPEN... ouvre le couvercle du lecteur
2 PH... allume le lecteur, démarre ou interrompt la lecture CD
3 RECHERCHE... recule d'une piste sur le CD ou effectue une recherche vers l'arrière
4 DBB... active/désactive l'amplification des basses.

Lecteur de CD et manipulation des CD

Ne touchez jamais la lentille (A) du lecteur de CD.
N'exposez jamais l'appareil, les piles ou les CD à l'humidité, à la pluie ou à une chaleur excessive.

Lecture d'un CD

Ce lecteur CD peut lire tous les types de disques audio comme le CD enregistrables ou réenregistrables.
1 Appuyez sur le glissière OPEN pour ouvrir le lecteur.

Sélection d'une piste et recherche

Sélection d'une piste en cours de lecture
Appuyez brièvement une ou plusieurs fois sur 1-4 ou 0-9 pour aller au début de la piste en cours ou à la piste précédente ou suivante.
Sélection des différentes possibilités de lecture - MODE
Il est possible de jouer les morceaux dans un ordre aléatoire, de répéter une piste ou d'écouter les premières secondes de chaque piste.

ESP

Les lecteurs de CD portables classiques sautent souvent des parties du CD quand ils sont soumis à des chocs ou à des vibrations.
Le mode shuffle, shuffle repeat all or repeat mode (see MODE chapter), or while playing a program, searching is only possible within the particular track.

Pannes et remèdes

AVERTISSEMENT: N'essayez en aucun cas de réparer l'appareil vous-même, sous peine d'invalidité de la garantie.
Si vous avez des problèmes de lecture, vérifiez d'abord si les piles sont correctement insérées et si les contacts de la cassette adaptatrice sont propres.

Piles (non fournies)

Avec ce lecteur, vous pouvez utiliser:
des piles normales du type LR6, UM3 ou AA (de préférence Philips), ou des piles alcalines du type LR6, UM3 ou AA (de préférence Philips).

Importants

Securité d'écoute - Ne réglez pas vos écouteurs à un volume trop élevé, évitez une utilisation continue à un volume élevé pendant de longues périodes.

Remarque

Le programme s'efface également si l'alimentation est coupée, si le couvercle du CD est ouvert ou quand l'appareil s'éteint automatiquement.

Remarque

Le programme s'efface également si l'alimentation est coupée, si le couvercle du CD est ouvert ou quand l'appareil s'éteint automatiquement.

Remarque

Le programme s'efface également si l'alimentation est coupée, si le couvercle du CD est ouvert ou quand l'appareil s'éteint automatiquement.

Remarque

Le programme s'efface également si l'alimentation est coupée, si le couvercle du CD est ouvert ou quand l'appareil s'éteint automatiquement.

AUSTRALIA-Philips 3 years Manufacturers Warranty for Australia only

This warranty conditions are valid for the following consumer electronics products: Colour Televisions, Video Cassette Recorders, CD Players and Recorders, DVD Players and Recorders, Audio Systems and Portable Audio.
Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.
3 YEARS free Repair Service
Colour Televisions, CD Players and Recorders, DVD Players and Recorders and Audio Systems.

NEW ZEALAND-Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.
Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months.
The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.

PHILIPS


PHILIPS MEXICANA, S.A. DE C.V.
CALLE DE LA INDUSTRIA 1000, P.O. BOX 1000, SAN JUAN DE LOS RIOS, MEXICO.
TEL: 52 55 56 91 70 00

PHILIPS POLIZA DE GARANTIA PERIODOS DE GARANTIA 36 MESES, 12 MESES, 6 MESES, 3 MESES


PHILIPS MEXICANA, S.A. DE C.V.

Table with columns: Modelo, Categoría, Nº de Modelo, Nº de Serie, Año, DÍA, MES, AÑO, Nº de Servicio, Centro de Servicio, Dirección, Teléfono, Fax, E-mail, Web

NOTA: Los datos de contacto de los centros de servicio pueden variar sin previo aviso.

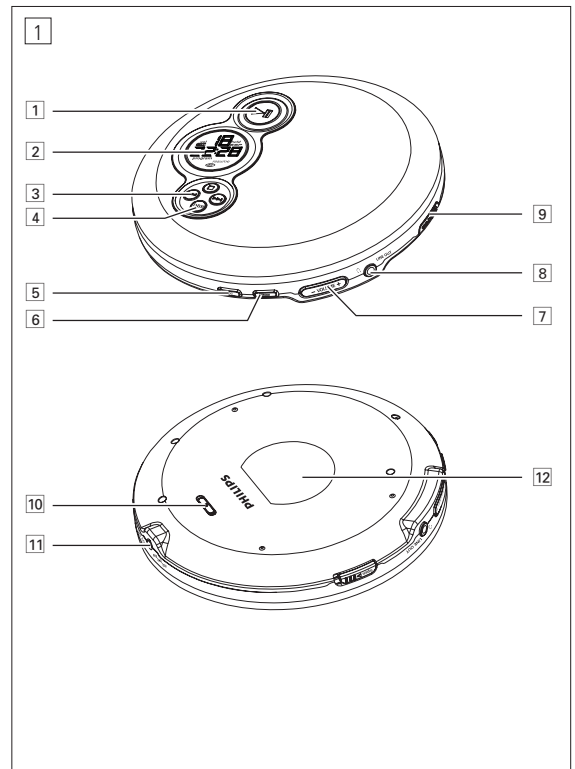

ENCENDIDO RAPIDO GUIA RAPIDO

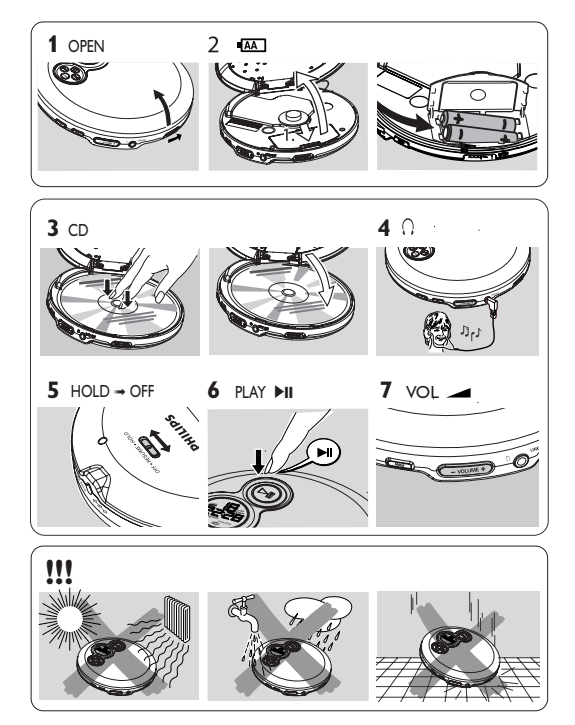

COPYRIGHT INFORMATION

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence.

DISPOSAL OF YOUR OLD PRODUCT

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

INFORMATION SUR LE DROIT D'AUTEUR

Toute copie d'une oeuvre protégée par un droit d'auteur, ce incluant les programmes informatiques, les enregistrements d'images et de sons, peut être une contrefaçon d'un droit d'auteur et constituer un délit.

MISE AU REBUT DE VOTRE ANCIEN PRODUIT

Le symbole de poubelle barrée sur un produit indique que ce dernier est conforme à la directive européenne 2002/96/CE. Veuillez vous renseigner sur les systèmes locaux de collecte des produits électriques ou électroniques.

Spanish section: Spanish title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

Portuguese section: Portuguese title, controls, and detailed instructions for using the device, including volume and power settings.

México section: Mexican title, controls, and detailed instructions for using the device, including volume and power settings.

México section: Mexican title, controls, and detailed instructions for using the device, including volume and power settings.

México section: Mexican title, controls, and detailed instructions for using the device, including volume and power settings.

México section: Mexican title, controls, and detailed instructions for using the device, including volume and power settings.

AVISO IMPORTANTE section: Important notice regarding safety and product use, including warnings about fire and electrical hazards.

INFORMAÇÃO SOBRE OS DIREITOS DE AUTOR section: Information regarding copyright and unauthorized reproduction.

ELIMINAÇÃO DO SEU ANTIGO PRODUTO section: Instructions for the proper disposal of the old product.

INFORMAÇÃO DE COPYRIGHT section: Copyright information for the user manual.

DESECHO DEL PRODUCTO ANTIGUO section: Instructions for the proper disposal of the old product.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.

Certificado de garantia para o Brasil section: Warranty certificate for Brazil, detailing terms and conditions.