

Always there to help you

Register your product and get support at
www.philips.com/support

CRD150



User manual

PHILIPS

Contents

1	Important safety instructions	2
2	Your phone	2
	What is in the box	2
	Overview of the phone	3
3	Get started	4
	Connect the base station	4
	Insert the supplied batteries	5
	Set the date and time	5
	What is standby mode?	5
4	Display icons	6
5	Calls	6
	Make a call	6
	Answer a call	7
	Adjust the speaker volume	7
	Turn the speaker on or off	7
	Transfer a call	7
6	Settings	7
	Set the contrast of the screen	7
	Temporary time setting	7
7	Technical data	8
8	Notice	8
	Disposal of your old product and batteries	8
9	Frequently asked questions	9

1 Important safety instructions

Warning

- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.

To avoid damage or malfunction

Caution

- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures

 
- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

2 Your phone


Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What is in the box

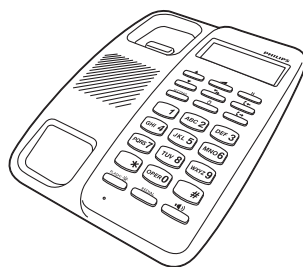


Base station

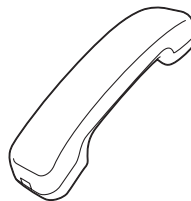 


Handset



 Line cord*



Coil cord

 

2 x AAA batteries



Guarantee




User manual

**Note**

 - * In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Overview of the phone

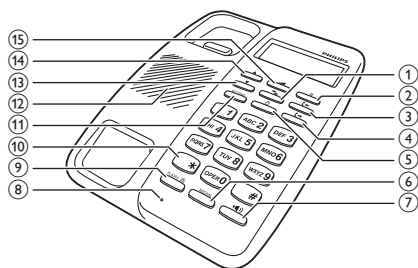

Call transfer



Enter a pause when making a predial call.



It shows the incoming call log.



It shows the outgoing call log.



- Delete the digit during editing.
- Exit the menu.



Redial key



- Turn the speaker phone on/off.
- Make and receive calls through the speaker.



Microphone



 
- Recall key (this feature is network dependent).
- Set the contrast level on the LCD screen in standby mode.



Press and hold for 3 seconds to set the temporary tone mode during pulse mode.



Access the setting menu.



Loudspeaker



- Scroll down on the menu.
- Move to the right.



- Scroll up the menu.
- Move to the left.



Adjust the speaker volume during a call.

3 Get started

! Caution

 
- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your phone.

Connect the base station


≡ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.


- 1 Connect each end of the line cord to:
 - the telephone socket at the back of the unit;
 - the telephone socket on the wall.

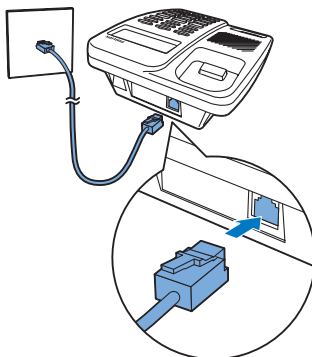

 - 2 Connect the coil cord to the base and handset.

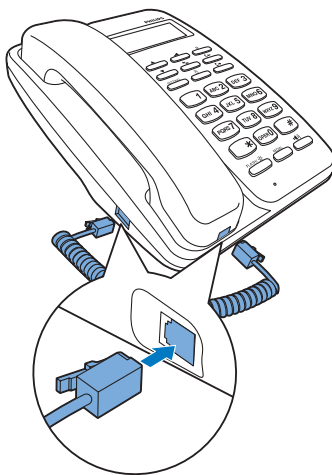

Insert the supplied batteries

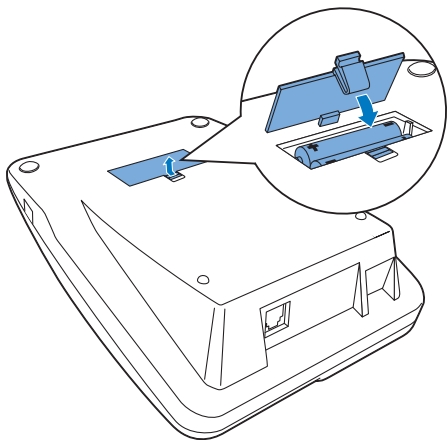 

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

! Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

≡ Note

- When the line cord is disconnected and batteries are removed, all settings are reset within 20 seconds.

Set the date and time

 
- 1 Press **SETTING**.
↳ **SET DATE** is displayed.
- 2 Press **SETTING** again to confirm.
- 3 Press **▲ / ▼** to set the year, press **SETTING** to confirm.
- 4 Press **SETTING** again to date and time.
- 5 Pick up the handset to confirm the setting.
↳ The corresponding week of the day is also displayed.

Your phone is now ready to use.

What is standby mode?

Your phone is in standby mode when it is idle. The year, date, time and incoming counter are displayed on the standby screen.

4 Display icons

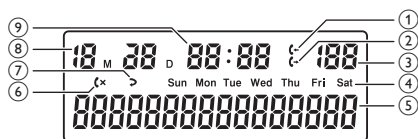

In standby mode, the icons shown on the screen tell you what features are available on your phone.

- ① It remains steadily on when browsing answered incoming calls in the call log.
- ② It indicates an outgoing call in the call list.
- ③ **Call counter**
- ④ **Week of the day display**
- ⑤ **Phone display**
- ⑥ There is a missed call.
- ⑦ It indicates repeated missed calls from the same number.
- ⑧ **Date display**
- ⑨ **Time display**

5 Calls

Make a call

You can make a call in these ways:

- Normal call
- Call from the call log
- Call from the redial list

Normal call

- 1 Pick up the handset or press .
- 2 Dial the phone number:
↳ The number is dialed out.



Tip

- To erase a digit, press .
- To enter a pause, press .

Call from the call log

The call log stores the call history of all incoming or outgoing calls. The incoming call history includes the number of the caller, call time and date. This feature is available if you have registered to the caller ID service with your service provider.

Incoming call

- 1 Press in standby mode.
- 2 Press / to select a record on the list.
- 3 Press **REDIAL** or to make the call.

Outgoing call

- 1 Press in standby mode.
- 2 Press again to view the number and time of the most recent outgoing call.
- 3 Press **REDIAL** or to make the call.

Redial a call

- 1 Pick up the handset.
- 2 Press **REDIAL**.
↳ The most recent outgoing call is dialed.

Answer a call

When the phone rings, you can select from the following options to answer the call:

- pick up the handset;
- press **📞**.



Note

- If you have subscribed for a caller ID service with the service provider, you will see the caller number displayed on the screen.

Adjust the speaker volume

Press **▲** in standby mode to select the low or high volume.

Turn the speaker on or off

Press **📞**.

Transfer a call



Note

- This service is network dependent. Check with the service provider for additional charges.

- 1 Make a first call.
- 2 Press **↔** during a call.
- 3 Make a second call.
- 4 Hang up the handset when the other side answers the call.
 - ↳ The first call is transferred to the second call.

6 Settings

Set the contrast of the screen

You can set the contrast of the phone screen to 5 different levels.

- 1 Press **FLASH/ ✱** in standby mode.
- 2 Pick up the handset to confirm the setting.

Temporary time setting



Note

- You can ignore **SET 2 CODE** and **SET 3 PCODE** which are country dependent codes.

- 1 Press **SETTING** to enter the setting mode.
- 2 Press **▲ / ▼** to select **SET 4 FLASH**.
- 3 Press **SETTING** again to enter the temporary time setting menu.
 - ↳ **FLASH 600** is displayed.
- 4 Press **▲ / ▼** to set the time.
- 5 Pick up the handset to confirm the setting.

7 Technical data

General specification and features

- Speaker phone
- Redial
- Caller identification standard support: FSK, DTMF

Battery

- LVLIANG: 2 x AAA batteries

Weight and dimensions

- Base station and handset: 465.0 grams
80.0 x 151.0 x 208.0 mm (H x W x D)

8 Notice

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see section 'Install the supplied batteries'.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

9 Frequently asked questions

No dialing tone

Make sure your phone is properly connected to the line cord.

The phone does not ring.

Make sure the phone is properly connected to the line cord.

No display or unclear display

- Battery level is too low.
- Check the contrast level of the screen.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.



Note

- If the above solutions do not help, disconnect the line cord and remove the battery. Reinstall the line cord and the battery after 1 minute and try again.



2015 © Gibson Innovations Limited. All rights reserved.
This product has been manufactured by, and is sold under
the responsibility of Gibson Innovations Ltd., and Gibson
Innovations Ltd. is the warrantor in relation to this product.
Philips and the Philips Shield Emblem are registered
trademarks of Koninklijke Philips N.V. and are used under
license from Koninklijke Philips N.V.

UM_CRD150_90_EN_V3.0
WK15384

