




User manual

Register your product and get support at www.philips.com/welcome

Buttons & LED lights

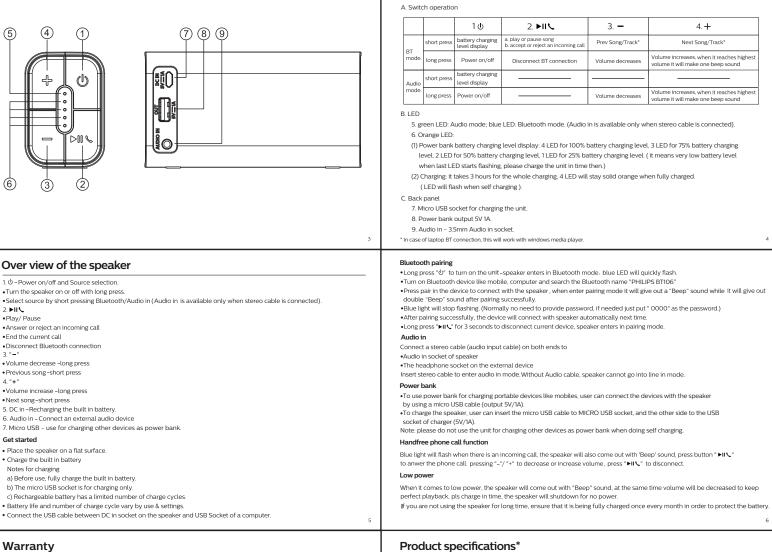

This Philips 2.0 multimedia speakers system is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the period of warranty, **Glison Innovations India Private Limited** undertake to repair the apparatus FREE OF CHARGE through the dealer from whom it has been purchased or at any of the Philips Authorised Service Centres. The warranty is not valid in case :

Proof of purchase is not accompanied with this warranty card. The warranty card is not completed immediately after purchase. The apparatus is not used according to this manual.

The apparatus is not used according to this manual. Defects are caused by improper or reckless use. Any nepairs are done by persons other than Philips Authorised service centre. Any modifications or alteration of any nature are made in the apparatus. The serial number is tampered with. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence. 8 Defe

All consumables and parts susceptible to normal wear and tear are not covered under warranty. Week/S.No.: Bill No. Date of purchase ____ Dealer's name: Dealers stamp: _ Customer's name and address: Model No.:

General information

Warnings

- Only use attachments or accessories specified by manufacturer
- The battery shall not be exposed to excessive heat such as sunshine, fire etc. Only for indoor use.

Care and safety information Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- · Do not place any source of danger on the speaker (e.g. liquid filled objects lighted candles) • Do not install near heat sources.
- Do not block any ventilation opening
- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.

Care of the cabinet

• Use a soft cloth slightly moistened to clean the cabinet. • Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories

Item	3.5mm to stereo cable	User manual	USB cable
Quantity	1	1	1

Buttons & LED lights

		10	2. ►II 📞	3. –	4.+
OT	short press	battery charging level display	a. play or pause song b. accept or reject an incoming call	Prev Song/Track*	Next Song/Track*
BT mode.	long press	Power on/off	Disconnect BT connection	Volume decreases	Volume increases, when it reaches highest volume it will make one beep sound
Audio	short press	battery charging level display			
mode.	long press	Power on/off		Volume decreases	Volume increases, when it reaches highest volume it will make one beep sound
(1) F li (2) ((C. Back 7. M 8. F	evel, 2 LED vhen last LE Charging: it (LED will fla c panel Aicro USB sc Power bank	battery charging for 50% battery of ED starts flashing takes 3 hours for ash when self char ocket for charging output 5V 1A.	charging level, 1 LED for 25% ba , please charge the unit in time , the whole charging, 4 LED will arging).	attery charging level. (then.)	, 3 LED for 75% battery charging it means very low battery level en fully charged.
' In case			rcket. I work with windows media player.		
In case Bluetor I can g p Trun o Press y Auto i Auto i Connec Audio i Connec Audio i The he Insert si Power I To use y usi To cha socket	of laptop BT - oth pairing oth pairing oth pairing of "be of "Beep" so ght will stop ght will stop ght will stop init it a stereo ca in socket of in socket of in socket of bank power ban g a micro L urge the spe of charger 1 of charger 1	connection, this will be turn on the unit. I device like mobilevice to connect und after pairing of lashing. (Norma essfully, the devic for 3 seconds to able (audio input i speaker ocket on the extet to enter audio in ak for charging po JSB cable (output vaker, user can in; (SV/IA).	Lwork with windows media player. -speaker enters in Bluetooth m lie, computer and search the Bl with the speaker, when enter p successfully. ally no need to provide passwoi ce will connect with speaker aut disconnect current device, spea- t cable) on both ends to ernal device mode. Without Audio cable, sp ortable devices like mobiles, use t SV/IA). sert the micro USB cable to MIC	luetooth name "PHILII pairing mode it will giv rd. If needed just put ' tomatically next time. aker enters in pairing i peaker cannot go into er can connect the de CRO USB socket, and	PS BTIOG" e out a "Beep" sound while it will give " 0000" as the password.) mode. line in mode. vices with the speaker the other side to the USB
In case Bluetor Long p Press p double Blue li, After p Long p Audio i Connec Audio o The he Insert si Power I To cha socket Note: pl	of laptop BT - oth pairing oth pairing oth pairing of by the set of the oth pair in the d = "Beep" so ght will stop and in stop the in to t a stereo calle bank tereo cable bank power ban ng a micro L of charger : of charger : of charger : lease do no	connection, this will be turn on the unit. I device like mobilevice to connect und after pairing of lashing. (Norma essfully, the devic for 3 seconds to able (audio input i speaker ocket on the extet to enter audio in ak for charging po JSB cable (output vaker, user can in; (SV/IA).	I work with windows media player. -speaker enters in Bluetooth mille, computer and search the Bl with the speaker, when enter p successfully. ally no need to provide passwoi ce will connect ourrent device, spea- t cable) on both ends to arrial device i mode. Without Audio cable, sp ordable devices like mobiles, use t SV/IA).	luetooth name "PHILII pairing mode it will giv rd. If needed just put ' tomatically next time. aker enters in pairing i peaker cannot go into er can connect the de CRO USB socket, and	PS BTIO6" e out a "Beep" sound while it will give " 0000" as the password.) mode. line in mode. vices with the speaker the other side to the USB

Product specifications*

Amplifier		General Introduction		
Rated output power	5W RMS	Power supply	5V 1A	
Signal to Noise Ratio	>50dB	Built in battery	Li-polymer battery	
Audio input	600MV	Dimension main unit(LxWxH)	122x45x65.5mm	
Frequency Response	70Hz~20KHz	Weight	195g	
Speaker				
Speaker Impedance	4 ohm	Power bank capacity	2200 mAh	
Speaker Driver	1.5 inch/40mm	Cornectivity	Audio in, Bluetooth	
Sensitivity	80 dBm			
Bluetooth				
Bluetooth version	V4.1			
Bluetooth profile	V2.1+EDR			
Bluetooth freg	2.4GHz~2.48GHz			
Bluetooth range	Upto 10M (freespace)			
		*Specification subject to cha Measured under specific co	0	

The Philips trademark and Philips shield emblem are registered trademarks of koninklijke Philips N.V. used under license. This product has been manufactured by and sold under the responsibility of Gloson innovation india Private Ltd. and Gloson innovations india private Ltd. Is the warrantor in relation to this product.



Question? Contact Division Contact at: 186

8

Gibson Innovations India Private Limited 4th Floor, Block-1, Vatika Business Park, Sector 49, Sohna Road, Gurgaon-122018, Haryana, India

Dealer's signature: