




# User manual

## Playing the speakers

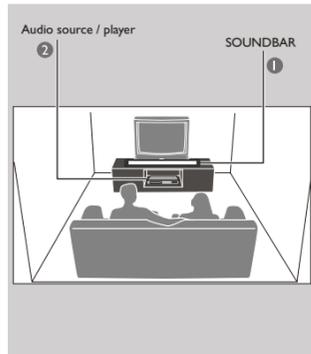

### System positioning :

The soundbar is recommended to be put on the flat desktop to get a better acoustic effect.

### Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

## General information

### Safety instructions

Please read carefully the safety mark on the back side

**Warning:** This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**Warning:** This mark is intended to alert the user for important operating and servicing instruction.

### Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

### Care and safety information

- **Avoid high temperatures, moisture, water and dust**
- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

### Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

### Care of the cabinet


- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

## Accessories

Item	Audio-2RCA cable	Remote control	User manual	Optical cable	Wall mount	Adaptor
Quantity	1	1	1	1	2	1

Remark: please unscrew the plastic wall mount and use metal one, if the soundbar need to be hung on the wall. 2

## Connections

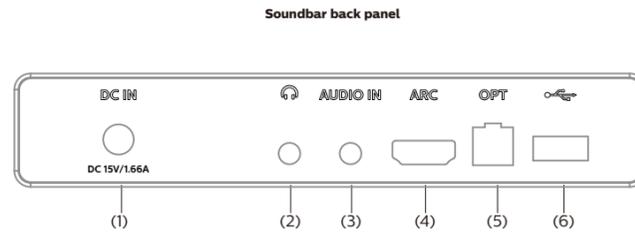

1. DC 15V/1.66A Input.
2. Headphone output.
3. Input Connect to sound sources such as computer, CD player, MP3, etc.
4. HDMI ARC Input.
5. Optical Input.
6. USB\* slot.

**USB** \*\*\*Do NOT use USB for charging devices which can cause damage to your external devices,thank you. 3

## Over view of the speaker

### USB

Switch to USB mode after inserting USB, press [POWER] key to switch to USB\* mode, USB mode indicator will on, supporting MP3 format music playback.

### AUDIO IN

Switch to audio mode after inserting the audio cable, press [POWER] to switch to audio mode, and the audio mode indicator will on.


### HDMI ARC

Switch to HDMI ARC mode after inserting HDMI cable, press [POWER] to switch to HDMI ARC mode, and the indicator will on.

### OPTICAL

After inserting the optical, press the [POWER] key to switch to the Optical mode, and the Optical mode indicator will on.

## Top panel operation

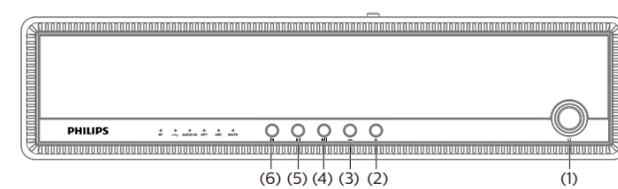

1.  $\phi$  : long press: turn on/off; short press after turn on: mode selection.
2. + : short press: volume increase; long press: Continuous increase.
3. - : short press: volume decrease; long press: Continuous decrease.
4.  $\blacktriangleright$  : BT mode short press: play/ pause; long press: BT Pair.
5.  $\blacktriangleleft$  : USB\* mode: short press: nest song; long press: fast forward.
6.  $\blacktriangleleft$  : USB\* mode: short press: previous song; long press: fast backward.

### Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be off, if there is no operation after 90 seconds of stand by mode. 4

\* AVAILABLE IF CONNECTED


## Troubleshooting

### Warning -

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy the problem by following hints mentioned in below table.

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. BT not working.	Reduce the distance or device is not paired.

## Remote controls

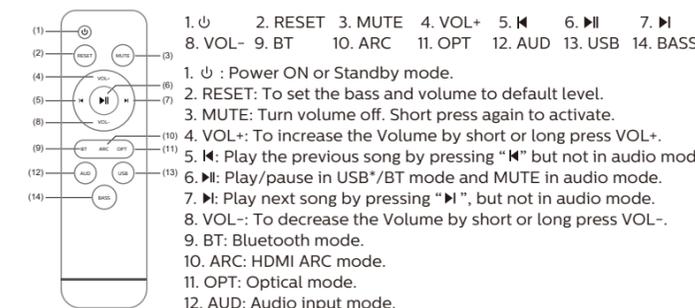

1.  $\phi$  2. RESET 3. MUTE 4. VOL+ 5.  $\blacktriangleleft$  6.  $\blacktriangleright$  7.  $\blacktriangleright$
  8. VOL- 9. BT 10. ARC 11. OPT 12. AUD 13. USB 14. BASS
1.  $\phi$  : Power ON or Standby mode.
  2. RESET: To set the bass and volume to default level.
  3. MUTE: Turn volume off. Short press again to activate.
  4. VOL+: To increase the Volume by short or long press VOL+.
  5.  $\blacktriangleleft$ : Play the previous song by pressing " $\blacktriangleleft$ " but not in audio mode.
  6.  $\blacktriangleright$ : Play/pause in USB\*/BT mode and MUTE in audio mode.
  7.  $\blacktriangleright$ : Play next song by pressing " $\blacktriangleright$ ", but not in audio mode.
  8. VOL-: To decrease the Volume by short or long press VOL-.
  9. BT: Bluetooth mode.
  10. ARC: HDMI ARC mode.
  11. OPT: Optical mode.
  12. AUD: Audio input mode.
  13. USB: USB\* mode.
  14. BASS: bass increase/ bass back to normal.

### Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be off, if there is no operation after 90 seconds of stand by mode. 5

\* AVAILABLE IF CONNECTED

## Warranty

This Philips soundbar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty, **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited, undertake to repair the apparatus FREE OF CHARGE at any of its authorized service center in India.

### The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by persons other than Philips authorized service centre.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. For detailed Terms and Conditions applicable, please refer [www.philips.com/support](http://www.philips.com/support).

Model No. \_\_\_\_\_ Product Sl. No. \_\_\_\_\_

Invoice Number \_\_\_\_\_ Date of Purchase: \_\_\_/\_\_\_/\_\_\_\_\_

Customer's Name and address: \_\_\_\_\_

PIN: [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]

**Always there to help you!**  
Visit us at [www.support.philips.com](http://www.support.philips.com)  
**Helpline:** 1800 425 6396  
Email: [india.callcentre@tpv-tech.com](mailto:india.callcentre@tpv-tech.com)  
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:



## Product specifications\*

Total system power	40W RMS	BT version	V5.0
Separation	≥40db	BT range	Up to 10 meters
SNR	≥55db	USB max capacity	Up to 32GB
Audio input socket	Audio- 2RCA cable	playability	MP3 track
Power consumption	10.8 W		
Soundbar	3 Way		
Speaker size	4070 * 2 + 2.75 inches * 2		
Impedance	8 Ohm + 8 Ohm		
Frequency range	45Hz - 20KHz		
Dimension (mm) W x H x D	420 x 73 x 100		
Weight	1.97kg		

\*Specification subject to change without prior notice. Measured under specific conditions.

总尺寸: 660x173mm  
工艺: 风琴折 105g铜版纸双面印刷  
成品尺寸: 110x86.5mm  
30408L000309-002

成品正面:



成品背面:



Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

