



Troubleshooting

Problem

I don't see the user interface of the PhotoViewer on the TV.

Tip

- Set the TV to the correct programme number (for example, EXT, 0, AV). See the documentation that came with your TV.

There is no sound signal from the TV or audio system.

- Check if the audio cables are connected correctly.
- Check if the volume of your TV or audio system is turned on.
- Make sure that the file format of your audio files is MP3 and that the files do not have copy protection.

The PhotoViewer does not react when I press a button on the remote control.

- When you press a button on the remote control, point the remote control in the direction of the power switch of the PhotoViewer.
- Replace the battery of the remote control.

The picture seems to be transformed.

- Change the resolution with the resolution button on the remote control.
- Change the settings of the connected TV. See the documentation that came with your TV.

The connected printer does not react.

- Make sure that the printer is switched on.
- Make sure that the printer is connected to the USB port at the back of the PhotoViewer.
- Change the settings of the connected printer. See the documentation that came with your printer.
- Make sure that the printer supports the ESC/P-R protocol.

See the website www.philips.com/support for more questions and answers.

Welcome to Philips!

Register your product and get support at www.philips.com/welcome



PhotoViewer

SPV3000



What's in the box



Stand



Power adapter



Component video cable
Audio & composite video cable



Product sticker (1x)




Stand stickers (2x)



Remote control

PHILIPS

What you also need

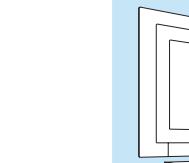


TV (LCD or other)

© 2007 Koninklijke Philips Electronics N.V.
All rights reserved.


Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.



1 Connect

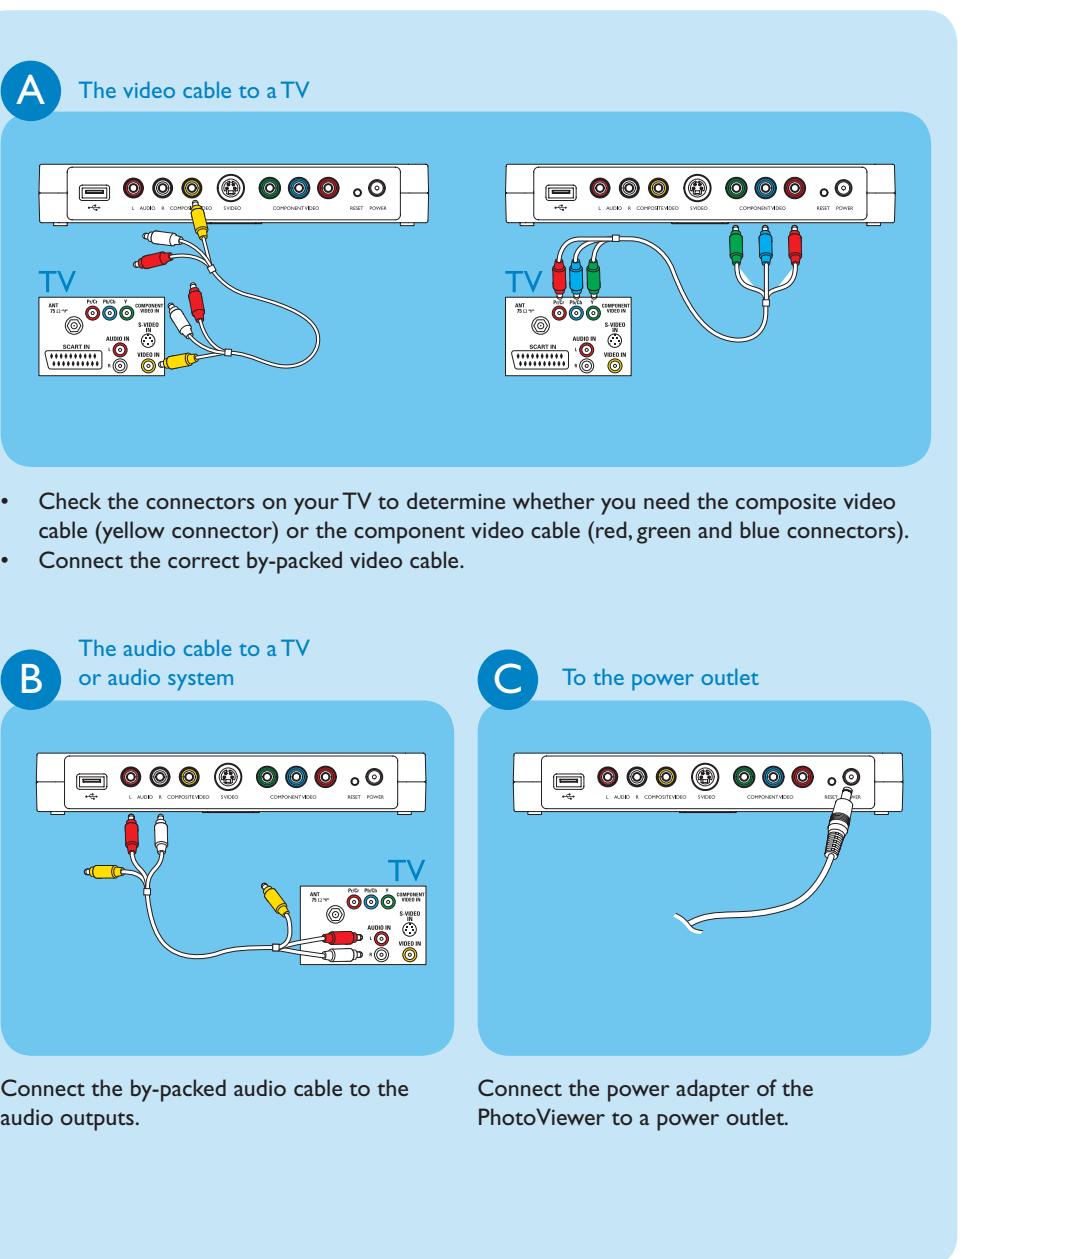

2 Install

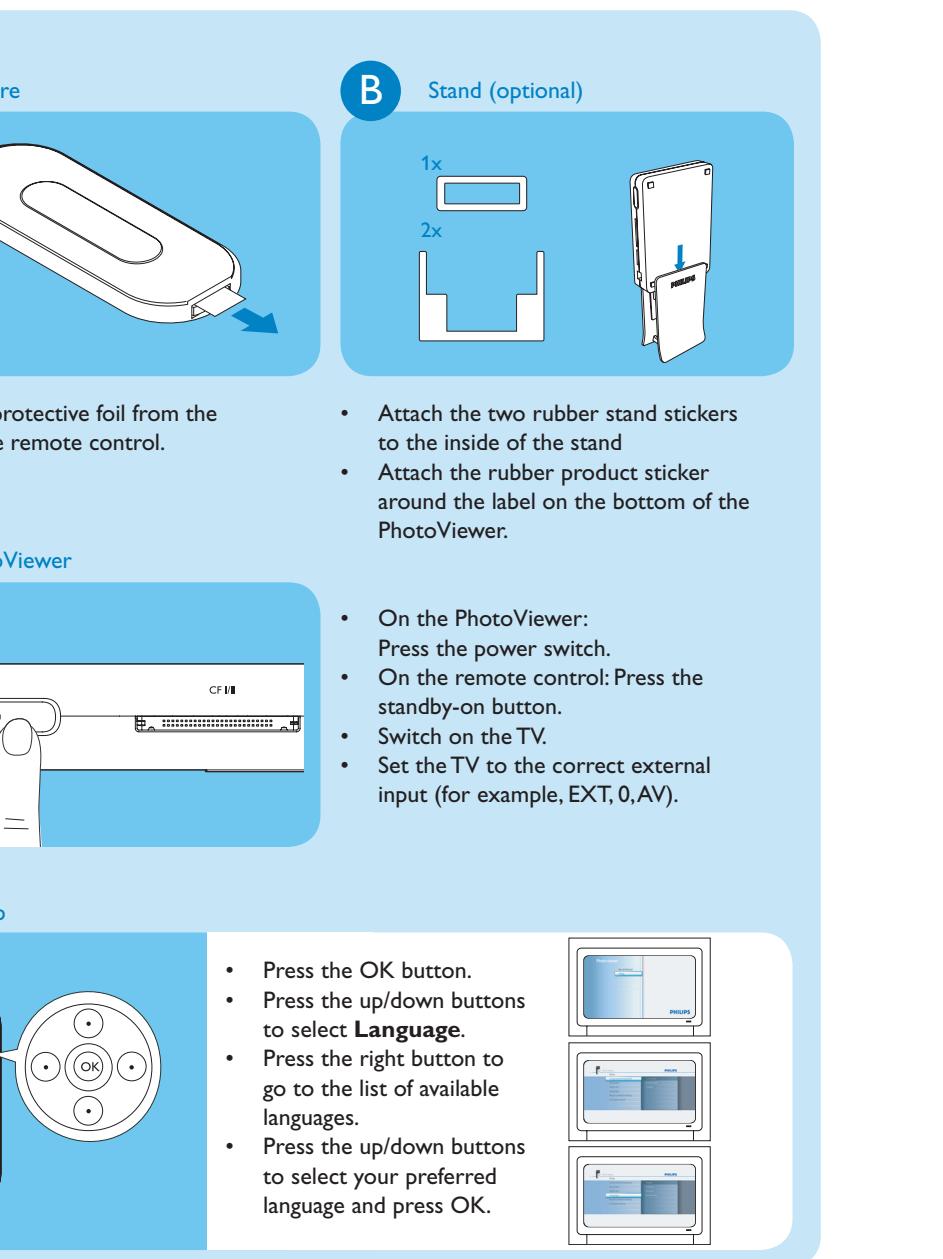

3 Enjoy

You need an adapter to insert these memory cards: MS Duo, MMC, RS-MMC, Mini SD.

