

Register your product
and get support at
www.philips.com/welcome

SRP5107WM/17



EN User Manual

PHILIPS

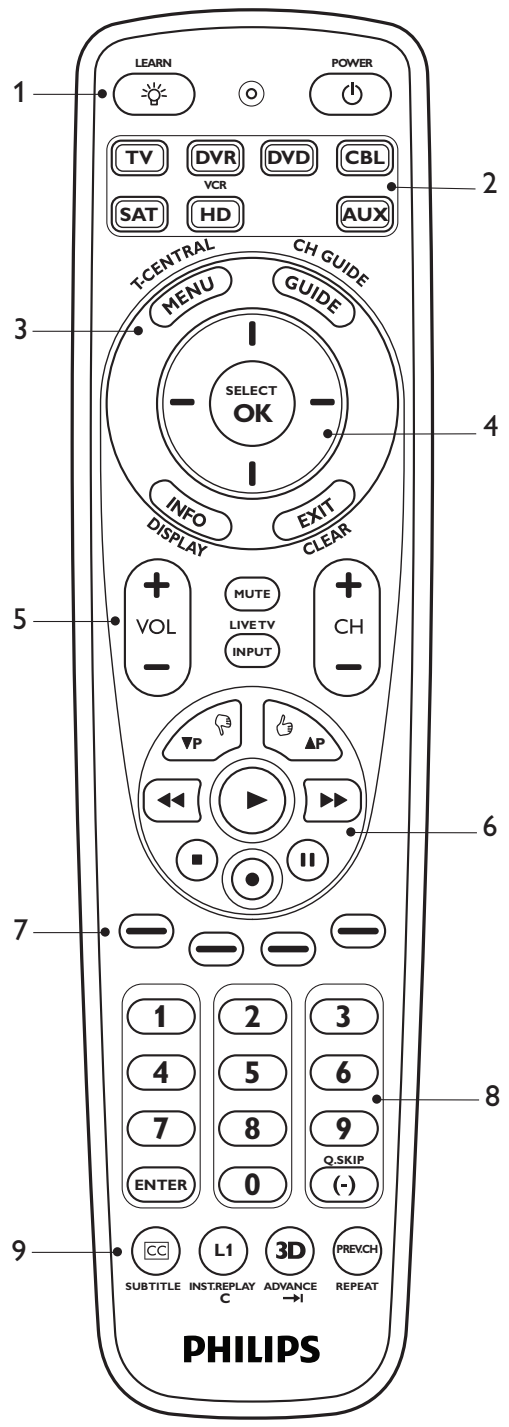


Table of contents

1	Your SRP5107WM.....	3-4
2	Getting started	4-9
	2.1 Inserting the batteries.....	4
	2.2 Testing the universal remote control	4-5
	2.3 Setting up the universal remote control	5-9
3	Using the universal remote control.....	9-15
	3.1 Buttons and functions.....	9-12
	3.2 Controlling combo devices.....	12-13
	3.3 Learning button functions.....	13-14
	3.4 Resetting a button to its original function	14
	3.5 Resetting the original functions of the remote control (Factory Reset).....	15
4	Service and support	15-18
	4.1 Frequently asked questions.....	15-17
	4.2 Need help?	17
	FCC Compliancy.....	18
	Notice for Canada.....	18
	Helpline.....	19
	Brand list.....	20-31

1 Your SRP5107WM

Congratulations on your purchase of the Philips SRP5107WM universal remote control. After setting up the remote control you can operate up to 7 different devices with it.

Simple Setup

The universal remote control comes with the innovative Simple Setup technology. After setup, the SRP5107WM can operate TV, DVD player/recorder (including Blu-ray player), VCR, DVR, HD, auxiliary equipment and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

Simply follow the instructions in chapter 2.3 to set up the remote control for your devices.

We focused on making this remote control consumer friendly. We have highlighted the DVR (TiVo/Replay) buttons in blue for easy referencing on the keypad.


The remote control is equipped with the most common functions for operating your devices. However, if you miss certain functions, this remote control can 'learn' these functions from the original remote control.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AA type batteries, noting the + and - configuration in the battery compartment.

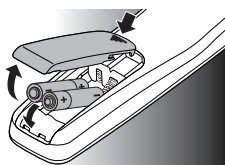




Note

When replacing the batteries, all user settings will be retained in the remote control memory for an unlimited period of time.

2.2 Testing the universal remote control


It is advised to test whether your device(s) already respond(s) to the SRP5107WM before setting it up (see chapter 2.3). The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate using the SRP5107WM.

Example: testing the universal remote control on your TV:

- Switch ON** your TV manually or use the original remote control for this. Tune to channel 1.
- Press the  device selection button to select TV.
 - The red Setup light  blinks. If the Setup light  did not blink, check whether the batteries are properly inserted (see chapter 2.1).



- Check whether the buttons that you need for operating your TV are working. For an overview of the buttons and their functions see chapter 3.1.

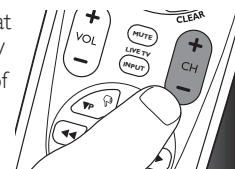

- If the TV responds as it should to all of the button commands, the SRP5107WM is ready for use.
If the device does not respond at all or not to all of the button commands, follow the instructions in chapter 2.3.

2.3 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate, using the universal remote control.



The remote control can be set up to operate any 7 of the following devices:

Device name	Description
TV	Traditional TV, LCD/Plasma TV, flat panel TV, projection TV and 3D TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos
DVR	Digital/Personal Video Recorder (DVR/PVR), TiVo, DVR part of DVR/SAT, DVR/Cable and DVR/DVD combos
DVD	DVD player/recorder (DVDR/DVD-RW), DVD/Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD, DVR/DVD and VCR/DVD combos
CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV), TiVo, SAT/Digital TV (DTV)/WebTV, DTV/Advanced Television Systems (ATSC) - Digital To Analog Converter; CBL part of DVR/Cable combos and SAT part of DVR/SAT combos
VCR	Video cassette player/recorder; VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos


AUX	Auxiliary equipment: CD, Audio System, Laser Disc, Digital Picture Frame, Media Center PC, Home Automation, Home Theater in a Box (HTIB)
HD	Any of the above listed devices

Example: setting up the universal remote control to operate your TV:


1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

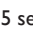2 **Press and hold** the  device selection button **for 5 seconds** until the red Setup light  blinks.


- The remote control is now in setup mode.

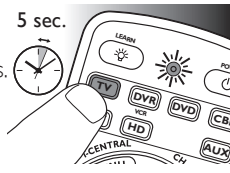


3 Look up the 4-digit code for your brand in the brand list at the back of this user manual. A 4-digit code is shown for each brand.

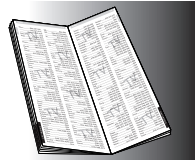


Use the digit buttons to enter the code for your brand (e.g. Philips, **2 1 9 5**).

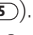- If the red Setup light  turns off, an invalid code was entered. In this case, try again.




4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.


- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

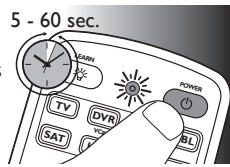


5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.3.3.

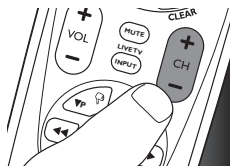


- 6 Press the  device selection button **twice** to finish setup.
- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

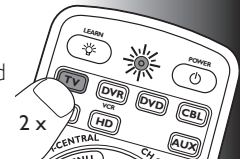





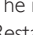

! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*
- Alternatively you can set up the universal remote control with the learn feature as described in chapter 3.3.*



2.3.1 Setting up the remote control for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment)

- Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.
- Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button:      or .

2.3.2 Setting up the remote control for combo devices

In most cases you will have to set up the remote control for each part of the combo device.

Only in some cases a single code-set will operate all parts of the combo.

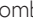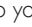For example: for a TV/DVD combo you will first have to set up the remote control for TV (with the  button) and then for DVD (with the  button or any other device selection button) in order to operate both parts of the combo. For this refer to chapter 2.3.

2.3.3 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.


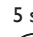


Note


Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').


During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.


After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD). Press the  device selection button to select DVD.
- 3 Keep buttons  and  pressed **simultaneously for 5 seconds**.
 - The red Setup light  lights up. The remote control is now in setup mode.
- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

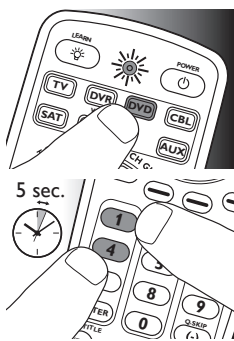

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

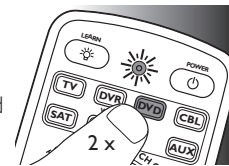



3 Using the universal remote control

3.1 Buttons and functions


The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP5107WM (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP5107WM.




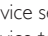
- 1   

LEARNused to setup learning functions.


BACKLIGHT turns the backlighting on/off.

SETUP light.....lights up when a remote control command is being sent, when you select a device and when the remote control is in setup or learn mode.


POWER switches the selected device on/off.

- 2    device selection buttons. Select the device to be operated.


  

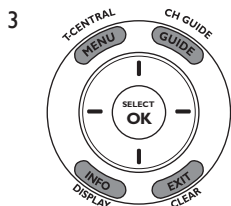


- 3
- MENU** menu on/off.
 - GUIDE** electronic program guide.
 - INFO** on-screen channel information.
 - EXIT** exits/clears on-screen menu displays.

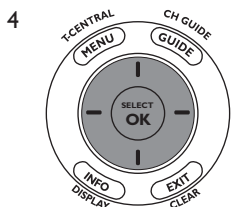

 - 4
- SELECT** selects menu items for the device you are controlling.
 - OK** confirms your selection.
 - (I) UP/DOWN,**
 - (-) LEFT/RIGHT** cursor up, down, left, right in a menu.



- 5
- + VOL -** increases/decreases the volume level of the device, normally TV.
 - MUTE** turns the sound of the device (normally TV) off/on while the picture remains.
 - INPUT** selects available source inputs (Antenna, Cable, etc.).
 - + CH -** next / previous channel.

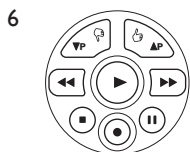


- 6
- ▼P ▲P** previous (▼P) / next (▲P) page/track in various modes.
 - ◀** rewind.
 - ▶** play.
 - ▶▶** fast forward.
 - stop.

- record.
 - ||** pause.
- 7 **⊖ ⊖ ⊖ ⊖** context sensitive buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.



- 8
- Digit buttons** for direct channel / track selection.
 - ENTER** used after direct channel selection. Some devices require **ENTER** to be pressed after channel selection.
 - (-)** selects between one and two-figure channel numbers.

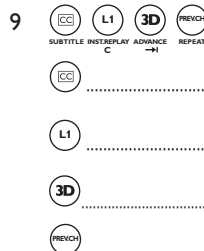

- 9
- ECG** TV Closed Caption (if your TV has this feature).
 - L1** stores learned button commands.
 - 3D** changes TV / DVD mode to 3D.
 - PREVCH** returns to the previously selected channel.

Note

For some TV brands/types, the **POWER** button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

3.1.1 Dedicated DVR functions - labeled in blue (*TiVo/Replay)

When you select DVR mode by pressing the **DVR** button, all blue DVR function buttons will become active.

- 3 **T.CENTRAL** TiVo button for TiVo Central.
- CH GUIDE** TiVo Live Guide - the TiVo Program Guide.
- DISPLAY** brings up the Channel Banner.
- CLEAR** exits/clears on-screen menu displays.
- 5 **LIVETV INPUT** goes to Live TV broadcast.

- 6 thumbs Up/Down. Set your Thumbs ratings.
- P ▼ and P ▲ select previous (▼)/next (▲) page in Replay TV guides and menus.
- 8 skips 30 seconds of a recorded or delayed show.
- 9 turns the subtitles on/off.
- replays the last 7 seconds (Replay) or 8 seconds (TiVo) of a program.
- catches you up to the live broadcast.
- repeats current chapter/track.

* TiVo and Replay are registered trade marks of their respective owners.

3.2 Controlling combo devices

Some combo devices (e.g. TV/DVR, TV/DVD, DVD/DVR, etc.) have separate buttons on the original remote control to select the part of the combo device to be controlled. For example, if your combo device is a DVD/DVR then its original remote control might have separate DVD and DVR buttons for selection of the combo part you wish to operate. The equivalent button functions can be found on your Philips remote control by using the device selection buttons.

Example for a DVD/DVR combo:

- 1 Set up the remote control for each part of the combo as described in chapters 2.3 and 2.3.2. In this example for both DVD and DVR.
- 2 Press the device selection button **twice** to select the DVD part of the combo.



Press the device selection button **twice** to select the DVR part of the combo.



Notes

- This method can be applied similarly to all combo devices (TV/DVR, TV/VCR, TV/DVD, etc.) and is available for all device modes.
- Note that this feature is not supported by all codes.


3.3 Learning button functions

If you miss certain functions from your original remote control on the SRP5107WM, the SRP5107WM can learn these functions. You can store a function under any of the available buttons, except under the button. Any function already stored under a button will be deleted. The SRP5107WM is equipped with one dedicated button for learning additional functions: .

- 1 Make sure that you have the original remote control at hand.
- 2 Select the desired device (e.g. DVD). Press the device selection button to select DVD.




- 3 Place both remote controls on a flat surface (like a table) and aim them head-to-head with about 5 - 10 cm in between.

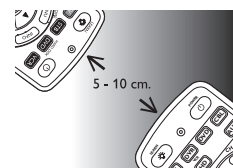

- 4 Keep the button and the button you wish to learn on the SRP5107WM (e.g. the button) **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
 - The remote control is now in learn mode.
- 5 Press **and hold** the button that you wish to learn on the original remote control until the red Setup light blinks **twice** and then goes out **to confirm that learning was successful**.
 - The remote control has now learned the new function.







Note


- It may occur that learning a button function fails the first time. The red Setup light  will then give **4 short blinks** and go out. In this case, please try again.
- If you keep having trouble learning button functions, check the batteries in both SRP5107WM and original remote control and replace if necessary.
- It may also be that the remote control learn memory is full (a total of about 60 buttons can be learned). In this case you can reset one or more buttons to their original functions in order to create memory space. For this, see chapter 3.4.

3.4 Resetting a button to its original function

If an improved button (see chapter 2.3.3) still does not function as expected, you can always reset the button to its original function.

When resetting a button to its original function, any learned function stored under the button will be deleted.

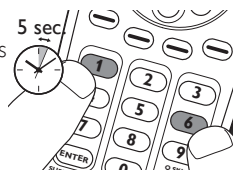


- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **9** and **6**, in that order.
 - After each button press the red Setup light  blinks once.
- 3 Press the button that you wish to reset **twice**. E.g. the **▶▶** button.
 - After each button press the red Setup light  blinks once.
 - The red Setup light  will blink one more time to confirm that the button was successfully reset to its original function.
 - The button can now also learn a new function, if desired.




3.5 Resetting the original functions of the remote control (Factory Reset)

In some cases it may be useful to reset the original functions of the remote control.

E.g. if the remote control memory is full while you wish to set it up for a specific device or learn an extra function to it. The remote control will then be reset to the default factory settings and all user settings will be deleted.

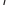- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **8** and **1**, in that order.
 - After each button press the red Setup light  blinks once.
 - The red Setup light  will blink one more time to confirm that the original functions of the remote control were successfully reset. Any extra functions have been deleted.

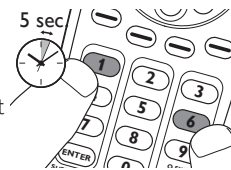

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

Setup

I cannot enter setup mode.

- Battery level too low or battery lifetime came to an end.
- Replace the batteries. See chapter 2.1.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common brands of TV, DVR, DVD player/recorder, Cable/Satellite box, DTV/VCR, HD and auxiliary equipment.

- You will find a complete brand list on page 20-31 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.3.3) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.3.3.

How do I set up the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The device I want to operate does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.3.3.
- Try learning button functions from the original remote control. See chapter 3.3.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory during battery replacement.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP5107WM, you can always contact us.

When calling our helpline, make sure to have the SRP5107WM at hand when you call, so that our operators can help you determine whether the SRP5107WM is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP5107WM/17.

Date of purchase:

...../...../.....
(day/month/year)

For **online support** go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

FCC Compliancy

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

Helpline

Country

United States of America / Canada

Phone number

001-888-744-5477

A	Amtron.....0141	Basic Line.....0325 (DB2)0467 (DB1)
A mark.....4544 (DB1)	AMW.....0143	Bastide.....0327 (DB2)	CALIX.....0468 (DB1)
A.R. Systems.....0012 (DB2)	ANABA.....0145 (DB1)	Baur.....0331 (DB2)	Candle.....0480
ABC.....0013	Anam.....0146	Bazin.....0335 (DB2)	CANON.....0481 (DB1)
Abex.....0014	Anam National.....0147	BEAUMARK.....0340 (DB1)	Capehart.....0484
ABS.....0016	Anglo.....0151 (DB2)	Beko.....0346 (DB2)	CAPETRONIC.....0485
Accele Vision.....4194 (DB1)	Anitech.....0154 (DB2)	Belcor.....0348	Carad.....0488 (DB2)
ACCESS HD.....3554	Ansonic.....0156 (DB2)	BELL.....4376	Carena.....0489 (DB2)
Acer.....0028	ANTRONIX.....0159	Bell & Howell.....0350	Carnivale.....0491
ACESONIC.....4370	AOC.....0165	BELL EXPRESSVU.....0352	Carrefour.....0492 (DB2)
Acura.....0036 (DB2)	Aomni.....3555	BELL SOUTH.....0353	Carver.....0494
ADC.....0040 (DB2)	Apex.....3691	BenQ.....0359	Cascade.....0496 (DB2)
ADCOM.....0041	Apex Digital.....0170	Beon.....0361 (DB2)	Casio.....0499
ADELPHIA.....4195	Apple.....0172	Best.....0364 (DB2)	Catha.....4094 (DB2)
Admiral.....0046	Arcam.....0179 (DB2)	Bestar.....0368 (DB2)	Cathay.....0501 (DB2)
ADTH.....4371	Archer.....0180	BGH.....3507	CAVS.....0503
Advent.....0054	Ardem.....0184 (DB2)	Binatone.....0378 (DB2)	CCE.....0504
Adventura.....0055	Aristona.....0192 (DB2)	BLAUPUNKT.....0390	Celebrity.....0509
Adyson.....0058 (DB2)	Armstrong.....0195 (DB1)	BLUE RIDGE	Celera.....0510
Afreedy.....0062	Arris.....4931 (DB1)	COMMUNICATIONS	Centrios.....0517
Agashi.....0063 (DB2)	ARTEC.....40164982 (DB1)	Centurion.....0520
Aiko.....0069	Asberg.....0205 (DB2)	Blue Sky.....0395	CENTURY.....0521
Aim.....0070 (DB2)	ASHA.....0209 (DB1)	BLU-RAY.....4377	Cetronic.....4380
Aiwa.....0072	Aspect.....4374	Bodysonic.....4378	Changhong.....0530
Akai.....0074	ASPIRE.....4233	Boots.....0405 (DB2)	CHANNEL
Akiba.....0078 (DB2)	Astar.....0218	Bose.....0407	MASTER.....0531
Akito.....0082 (DB2)	Asuka.....0227 (DB2)	BOSS.....4197	Chaparral.....0533 (DB1)
Akura.....0083 (DB2)	AT&T.....3453	BOSTON ACOUSTICS	CHARTER.....4239
Alaron.....0085	Atlantic.....0233 (DB2)0411 (DB1)	CHEYENNE.....4381
Alba.....0086 (DB2)	Atori.....0237 (DB2)	BPL.....0413 (DB2)	Cimline.....0552 (DB2)
Albatron.....0087	A-TREND.....0011	Bradford.....0414	Cineral.....0559
Alco.....0092 (DB2)	Audio Authority.....0245	BRIGHT HOUSE.....4236 (DB1)	CINEVISION.....0562
Alienware.....0099	AUDIO DYNAMICS	Brilliant.....0422	CITECH.....4382
ALLEGRO.....01030248	Brinkmann.....0423 (DB2)	Citizen.....0567
Allorgan.....0105 (DB2)	AUDIO TECHNICA	Brionvega.....0424 (DB2)	City.....0569 (DB2)
Allstar.....0108 (DB2)4780	Britannia.....0425 (DB1)	Clairtone.....0573
ALPHA DIGITAL...4014	Audiosonic.....0264 (DB2)	Brockwood.....0430	Clarion.....0575
AMC.....0121 (DB2)	Audioton.....0266 (DB2)	Broksonic.....0432	Clarivox.....0576 (DB2)
America Action.....0123	Audiotronic.....0267 (DB2)	Buffalo.....0442	Classic.....0580
AMERICAN HIGH0125 (DB1)	Audiovox.....0268 (DB2)	Bush.....0445	Clatronic.....0581 (DB2)
AMERICAST.....0127	Autovox.....0280	Byd:sign.....0448	CLEARMAX.....0584
AMES.....4372	Aventura.....0287		Clp.....4383
Amphion Media Works	Awa.....0296 (DB2)		Clp Classic.....4383
.....0135 (DB2)	Axion.....0299		CMS.....0590 (DB2)
AMPLICA.....0136		C	CMS Hightec.....0591 (DB2)
Amplivision.....0138 (DB2)	B	CABLE ONE.....4237 (DB1)	Coby.....0597
Ampro.....0139	B & K.....0304	CABLETENNA.....0456	COGECO.....4385
Amstrad.....0140 (DB2)	Baird.....0311 (DB2)	CABLEVIEW.....0458	Colortyme.....0601
AMTC.....4015	Bang & Olufsen.....0314	CADENCE.....4379	ColourVoice.....0602 (DB1)
		California Audio Labs	

COLT.....0603 (DB1)	Diamond.....0747 (DB2)	Elbe.....0880 (DB2)	Frontech.....1042 (DB2)
COMCAST.....3456	Diamond Vision.....0748	Electroband.....0888	FUJI.....1047 (DB1)
Commercial Solutions0615	Digatron.....0751 (DB2)	Electrograph.....0889	Fujitsu.....1052
COMTRONICS.....0623	Digiline.....0759 (DB2)	Electrohome.....0890	Fujitsu General.....1053 (DB2)
CONCEPT.....0624	Digimate.....3807	ELECTROPHONIC0893 (DB1)	Funai.....1056
Concerto.....0625	Digistar.....0767	Elektra.....0896	Futuretech.....1064
Concierge.....4386	DIGITAL DÉCOR...4389	Element.....3477	
Concorde.....0626 (DB2)	Digital Lifestyles.....3567	ELG.....0900 (DB2)	G
Condor.....0627 (DB2)	DIGITAL LIVING ...4390	Elin.....0902 (DB2)	G Vision.....4400
Conia.....0628	DIGITAL MUSIC	Elite.....0903 (DB2)	Galaxi.....1068 (DB2)
Contec.....0635	EXPRESS.....4391	Elite Video.....4398	Galaxis.....1069 (DB2)
CONTEL.....0636	Digital Stream.....3809 (DB1)	Elta.....0910	GARRARD.....1075
COOLSAT.....0643	Digitrex.....0782	Emerson.....0917	Gateway.....1076
Cornea.....4387	Digiwave.....0784 (DB1)	Emprex.....0922	GBC.....1078 (DB2)
COSHIP.....0646	Digix.....3520	EMTEC.....4363	GC ELECTRONICS1080
Cosmel.....0647 (DB2)	Dimensia.....3569	Envision.....0933	GE.....1081
COX.....4200	DIRECTOR.....0793	Epson.....0937	GE HOMEMINDER4401
Craig.....0650	DirecTV.....0794	Erres.....0942 (DB2)	GEC.....1083 (DB2)
CRITERION.....0654	DISH NETWORK SYSTEMS.....3966 (DB1)	ESA.....0943	Geloso.....1087 (DB2)
Crosley.....0655	DISHPRO.....0800	ESC.....0945 (DB2)	GEMINI.....1089
Crown.....0658	Disney.....0803	ESCIENT.....0946	GENERAL COMMUNICATIONS4983 (DB1)
CS Electronics.....0663 (DB2)	Dixi.....0807 (DB2)	Etron.....0949 (DB2)	GENERAL
CTX.....0665	DRAKE.....0825	Eurofeel.....0954 (DB2)	INSTRUMENT.....1093 (DB1)
Curtis.....0666	DREAMBOX.....4392	Euroman.....0956 (DB2)	General Technic.....1095 (DB2)
Curtis Mathes.....0667	Drean.....0832 (DB2)	Europa.....0957 (DB2)	Genexxa.....1097
CXC.....0670	DRIVE.....4393	Europhon.....0959 (DB2)	GFM.....3820
CyberHome.....0672	DSE.....0833 (DB2)	EVERQUEST.....0971	Giant.....1113 (DB2)
CYBERNEX.....0673 (DB1)	DTS.....0837 (DB2)	EXPRESSVU.....0977	Gibraltar.....1114
CyberPower.....0674	Dual.....0838	Exquisit.....0978 (DB2)	GLOBECAST.....4402
Cybervision.....4388	Dukane.....4394		Go Video.....1126
Cytron.....0680	Dumont.....0840	F	GoldHand.....1136 (DB2)
	DURABRAND.....0842	Fagor Life.....4102 (DB2)	Goldline.....1138 (DB2)
D	Dux.....0843 (DB2)	FARENHEIT.....0986 (DB1)	GoldStar.....1140
Danichi.....3914 (DB2)	DVD2000.....0844 (DB1)	Fenmenti.....4103 (DB2)	Goodmans.....1142 (DB2)
Dansai.....0699 (DB2)	D-Vision.....0684 (DB2)	Fenner.....0994 (DB2)	GPM.....1149 (DB2)
Dawa.....0707 (DB2)	Dwin.....0848	Ferguson.....0996 (DB2)	GPX.....1150
Daytron.....0710	DX ANTENNA.....0849	Fidelity.....0998 (DB2)	Gradiente.....1151
DBX.....0712 (DB1)	Dynasty.....4395	Filsai.....1000 (DB2)	Graetz.....1152 (DB2)
Decca.....0718 (DB2)	DYNATECH.....0854 (DB1)	Finlux.....1004 (DB2)	Granada.....1154 (DB2)
Deitron.....0722 (DB2)	Dynatron.....0855 (DB2)	Firstline.....1008 (DB2)	Grandin.....1156 (DB2)
Dell.....0725	Dynex.....3476	Fisher.....1009	GREENHILL.....1157
DELPHI.....0726		Flint.....1014 (DB2)	GRIDLINK.....3824
Denon.....0731	E	Fluid.....4399	Gronic.....1160 (DB2)
Denver.....0733 (DB2)	EASTERN.....0859	Formenti.....1023 (DB2)	Grundig.....1162
DENZEL.....0734	ECHOSPHERE.....4396	Formenti-Phoenix..1024 (DB2)	Grundig.....1162
DESAY.....0737	ECHOSTAR.....0866	FORTEC STAR.....1026	Grundy.....1163
Desmet.....0738 (DB2)	Eclipse.....0867 (DB2)	Fraba.....1030 (DB2)	
Diamant.....0746 (DB2)	EIGERVISION.....4397	Friac.....1040 (DB2)	

Grunpy.....	1165	Hyper.....	1309 (DB2)	JCL.....	4209	Leyco.....	1627 (DB2)
Guestvision.....	4403	Hypson.....	1312 (DB2)	Jensen.....	1429	LG.....	1628
H		Hyundai.....	1315	JERROLD.....	1431	Liesenk & Tter.....	1630 (DB2)
HAAZ.....	1172	I		JVC.....	1464	Liesenkotter.....	1631 (DB2)
Haier.....	1175	Iberia.....	1320 (DB2)	jWin.....	1465	Lifetec.....	1633
Halifax.....	1179 (DB2)	iBUYPOWER.....	1322	K			
Hallmark.....	1180	ICE.....	1324 (DB2)	Kaisui.....	1471 (DB2)	Linksys.....	1640
HAMLIN.....	1182	ICeS.....	1325 (DB2)	Kamp.....	1475 (DB2)	LINN.....	1641
Hampton.....	1183 (DB2)	iHome.....	3480 (DB2)	Karcher.....	1484 (DB2)	Liquid Video.....	1644
Hanns.G.....	3478	I-Inc.....	3462	Kawasaki.....	1488	LITEON.....	1645
Hannspree.....	1189	iLive.....	1339 (DB2)	Kawasho.....	1489	Lloyd's.....	1648
Hanseatic.....	1190 (DB2)	ILLICO.....	4206	Kaypani.....	1490	Lodgenet.....	1658
Hantarex.....	1192 (DB2)	iLo.....	1341	KDS.....	1494	Loewe.....	1660
Hantor.....	1193 (DB2)	Ima.....	1342	KEC.....	1496	Loewe Opta.....	3540 (DB2)
Harley Davidson.....	1197	Imperial.....	1346 (DB2)	Kendo.....	1500 (DB2)	Luce.....	1672
Harman/Kardon.....	1198	Indiana.....	1350 (DB2)	Kenwood.....	1507	Luma.....	1674 (DB2)
Harvard.....	1202	Infinity.....	1352	KIC.....	1512 (DB2)	Lumatron.....	1676 (DB2)
Harwood.....	1204	InFocus.....	1353	KINGBOX.....	4406	LUTRON.....	1679
Hauppauge.....	1206	Ingersol.....	1355 (DB2)	Kingsley.....	1520 (DB2)	Lux May.....	1680 (DB2)
Havermy.....	1208	Initial.....	1356	KISS.....	1524	Luxman.....	1682
HCM.....	1210 (DB2)	INKEL.....	1357	Kiton.....	1525 (DB2)	Luxor.....	1683 (DB2)
HD-DVD.....	4404	Inno Hit.....	1358 (DB2)	KLH.....	1529	LXI.....	1686
HEADQUARTER... 1214		Insight.....	1367 (DB1)	Kloss.....	1532	M	
Helios.....	1219	Insignia.....	1368	Kloss Novabeam....	4210	MACOM.....	1693
Hello Kitty.....	1221	INSTANT REPLAY		Kneissel.....	1535 (DB2)	Madison.....	1698 (DB2)
Hema.....	1222 (DB2)		3580	KNOLOGY.....	4326 (DB1)	MAG.....	1701
Hewlett Packard....	1229	Integra.....	1370	KODA.....	1539	Magnafoon.....	1703 (DB2)
Higashi.....	1234 (DB2)	Inteq.....	1373	KODAK.....	1540	Magnasonic.....	1704
Highline.....	1236 (DB2)	Interbuy.....	1376 (DB2)	Kogi.....	4407	Magnavox.....	1706
Hikona.....	1237	Interfunk.....	1377 (DB2)	Kolster.....	1543 (DB2)	Magnin.....	1708
HiLine.....	3533 (DB2)	Internal.....	1379 (DB2)	Konka.....	1548	Magnum.....	1709 (DB2)
Hinari.....	1243 (DB2)	International.....	1380 (DB2)	Korpel.....	1552 (DB2)	Majestic.....	1713
HI-Q.....	1231	Intervision.....	1386 (DB2)	Kosmos.....	1557 (DB2)	Manesth.....	1718 (DB2)
Hisense.....	1249	iPOD.....	4405	KOSS.....	1558	Manhattan.....	1719 (DB2)
Hitachi.....	1251	IR.....	4110 (DB2)	KRELL.....	1569	Marantz.....	1724
Hiteker.....	1255	Irradio.....	1396 (DB2)	KTV.....	1572	Mark.....	1731 (DB2)
Hitsu.....	1257 (DB2)	Isukai.....	1402 (DB2)	Kurazai.....	4408	MARTA.....	1735
Hornophon.....	1277 (DB2)	iSymphony.....	3755 (DB2)	KXD.....	1581	Masuda.....	1744 (DB2)
Howard Computers		ITC.....	1404 (DB2)	Kyoto.....	1585 (DB2)	Matsui.....	1750 (DB2)
.....	1281	ITS.....	1405 (DB2)				
HP.....	1283	ITV.....	1408 (DB2)				
Huanu.....	1292 (DB2)	J		L			
HUGHES.....	4205	Janeil.....	1414	Lasonic.....	1600	Maxent.....	1757
HUGHES NETWORK		JASCO.....	1415	Layco.....	4117 (DB2)	MCE.....	1766
SYSTEMS.....	1296 (DB1)	JBL.....	1420	Lecson.....	1606 (DB2)	McIntosh.....	1767 (DB2)
Humax.....	1298	JC Penney.....	4208	Legend.....	1609	MCS.....	1770
Hush.....	1304	JCB.....	1421	Lenco.....	1615 (DB2)	Media Center PC... 1777	
Hygashi.....	1308 (DB2)			Lenoir.....	1617 (DB2)	MEDIACOM.....	1780 (DB1)
				Lenoxx.....	1618	Mediator.....	1784 (DB2)
						Medion.....	1787

Medison..... 1788 (DB2) **N**
 Megapower..... 1791 NAD..... 1926
 Megatron..... 1795 Naiko..... 1930 (DB2)
 MEI..... 1796 NAKAMICHI..... 1932
 Melectronic..... 3654 (DB2) Nakimura..... 1933 (DB2)
 Memorex..... 1800 National Panasonic
 Memphis..... 1802 (DB2) 4661 (DB2)
 Mercury..... 1804 (DB2) NEC..... 1950
 MERIDIAN..... 1805 Neckermann..... 1951 (DB2)
 METROCAST..... 4984 (DB1) NEI..... 1952 (DB2)
 Metz..... 1810 (DB2) NELSON..... 4414 (DB2)
 MGA..... 1811 NEO..... 3947
 MGN TECHNOLOGY
 1812 NEOSAT..... 4415
 NESAS..... 1959
 MICROGEM..... 4024 (DB1) NET..... 1961
 Micromaxx..... 1822 (DB2) Netgear..... 1964
 Micromega..... 1824 (DB2) Netsat..... 1966 (DB2)
 Microsoft..... 1826 NetTV..... 1967 (DB1)
 MICROVISION..... 4409 Neufunk..... 1970 (DB2)
 Microyal..... 4410 (DB1) New Tech..... 1979 (DB2)
 Midcontinent..... 4596 (DB1) Nexus Electronics... 3948
 Midland..... 1831 NEXXTECH..... 1990
 Minato..... 1835 (DB2) Nicamagic..... 1994 (DB2)
 Mind..... 1837 Nikkai..... 1998 (DB2)
 Minoka..... 1840 (DB2) Nikkei..... 1999 (DB1)
 MINOLTA..... 1841 Nikko..... 2000
 Mintek..... 1845 Niko..... 2002
 Minutz..... 1847 Niles..... 2004 (DB2)
 Misakai..... 4411 Niveus Media..... 2012
 MISSION..... 1852 Noblex..... 2013
 Mitsubishi..... 1855 Nobliko..... 2014 (DB2)
 Mivar..... 1857 (DB2) Norcent..... 2020
 Monivision..... 1872 Nordic..... 2021 (DB2)
 Montgomery Ward
 4212 Nordmende..... 2022 (DB2)
 Morgans..... 3970 (DB2) Normerel..... 2024 (DB2)
 Moteva..... 4412 Norsat..... 2025 (DB1)
 Motorola..... 1878 Northgate..... 2027
 MOVIE TIME..... 1880 Norwood Micro..... 2029
 MOXI..... 4581 (DB1) NOVAPLEX..... 2034
 MTC..... 1889 Novatronic..... 2035 (DB2)
 Multitec..... 1906 (DB2) Now TV..... 2039 (DB1)
 Multitech..... 1907 NSC..... 2042
 MultiVision..... 1909 (DB1) NSM..... 2043
 Murphy..... 1911 (DB2) NTC..... 2045
 MUSTEK..... 1916 NuVision..... 2053
 Myron & Davis..... 4413 Nyko..... 3759
 Myryad..... 1922 (DB2)

O
 OAK..... 2059
 Okana..... 4122 (DB2)
 Okano..... 2065 (DB2)
 Olevia..... 2067
 On Command..... 2077
 Onking..... 2084
 ONKYO..... 2085
 Onwa..... 2087
 Opera..... 2090 (DB2)
 Oppo..... 2092
 Optimus..... 2095
 Optoma..... 2097
 Optonica..... 2099
 Orbit..... 2103 (DB2)
 Orion..... 2111
 ORITRON..... 2112
 Online..... 2113 (DB2)
 Osaki..... 2118 (DB2)
 Osio..... 2121 (DB2)
 Osume..... 2123 (DB2)
 Otic..... 2125
 Otto Versand..... 2126 (DB2)

P
 PACE..... 2134
 Pacific..... 2135
 Pael..... 2140 (DB2)
 Palladium..... 2145 (DB2)
 Palsonic..... 2147 (DB2)
 Panama..... 2149 (DB2)
 Panasonic..... 2153
 Panavision..... 2154 (DB2)
 PANDIGITAL..... 3868
 PANSAT..... 2158
 PARAGON..... 2161
 PARK..... 3951
 Pathe Cinema..... 2168 (DB2)
 Pausa..... 2171 (DB2)
 Penney..... 2182
 PENTAX..... 2183
 Perdio..... 2185 (DB2)
 Perfekt..... 2186 (DB2)
 Petters..... 2189
 Philco..... 2192
 Philharmonic..... 2194 (DB2)
 Philips..... 2195
 PHILIPS MAGNAVOX
 3715 (DB1)

Phoenix..... 2199 (DB2)
 Phonola..... 2201 (DB2)
 Phonotrend..... 2202 (DB2)
 PHOTOSHARE..... 4416
 Pilot..... 2207
 Pinnacle Systems..... 2210 (DB1)
 Pioneer..... 2212
 Pionier..... 2213 (DB2)
 Piva..... 4417
 Planar..... 2217
 Plantron..... 2219 (DB2)
 Playsonic..... 2224 (DB2)
 Polaroid..... 2230
 POLK AUDIO..... 2232
 Poppy..... 2236 (DB2)
 Portland..... 2238
 POWER ACOUSTIK
 4418
 Powerpoint..... 2241 (DB2)
 Precision..... 2244
 Priceclub..... 2252 (DB1)
 Prima..... 2253
 PRIMESTAR..... 2257
 Princeton..... 2258
 Prism..... 2261
 Profekt..... 4126 (DB2)
 Profex..... 2269 (DB2)
 Profitronic..... 2273 (DB2)
 Proline..... 2274
 PROSAT..... 2278
 Proscan..... 2279
 Prosonic..... 2282
 PROTEC..... 2283
 Protech..... 2284 (DB2)
 Proton..... 2288
 Prottron..... 2289
 Proview..... 2290
 ProVision..... 2291 (DB2)
 Pulsar..... 2296
 Pye..... 2302 (DB2)
 PYLE..... 2303
 Pymi..... 2304 (DB2)

Q
 QUARTER..... 2318
 QUARTZ..... 2319
 Quasar..... 2320
 Quelle..... 2322 (DB2)

R	Samtron.....2450	Silva.....2591 (DB2)	SUDDENLINK.....4241 (DB1)
Radiava.....2329 (DB2)	Sandra.....2454 (DB2)	Silva Schneider.....2592 (DB2)	SunBrite.....2759
Radio Shack.....3547	Sangean.....3490 (DB2)	Silver.....2594 (DB2)	Sunfire.....2760 (DB2)
Radiola.....2330 (DB2)	SANKY.....2456	Simpson.....2598	Sungale.....2761
Radiomarelli.....2331 (DB2)	SANSONIC.....3881	Sindyne.....4510 (DB2)	Sunkai.....2762 (DB2)
RadioShack.....2333 (DB2)	Sansui.....2458	Singer.....2599	SUNKEY.....4426
Radiotone.....2334 (DB2)	Santeca.....4420	SIRIUS.....2602	Sunstar.....2768 (DB2)
RADIX.....2335	Sanyo.....2462	SKARDIN.....2607	Sunwood.....2772 (DB2)
RANDEX.....2343	SBR.....2492 (DB2)	SKY.....2610 (DB2)	Superguide.....2780 (DB1)
RCA.....2351	Sceptre.....2498	SKY NETWORK.....4422	Superla.....2782 (DB2)
RCN.....4419	Schneider.....2501 (DB2)	SKYFI.....4423 (DB2)	Superscan.....2786
Realistic.....2354	SCIENTIFIC ATLANTA	Skyworth.....2631	Supersonic.....2787
Recor.....2359 (DB2)2503	SL MARX.....2633	SuperTech.....2789 (DB2)
Rectiligne.....2362 (DB2)	Scimitsu.....2505	SMARTPARTS.....4424	Supra.....2792
Redstar.....2366 (DB2)	Scotch.....2506	Solavox.....2654 (DB2)	Supre-Macy.....2794
Reflex.....2368 (DB2)	Scott.....2508	Sole.....2655	Supreme.....2795
REGAL.....2370 (DB1)	Sears.....2514	Sonic.....2666	Sutron.....2798 (DB2)
REGENCY.....2371	SEG.....2522	SONIC BLUE.....2667	SV2000.....2799
REGENT.....2372	SEI.....2524 (DB2)	Soniko.....2669 (DB2)	SVA.....2800
REMBRANDT.....2375	Sei-Sinudyne.....2525 (DB2)	Sonitron.....2671 (DB2)	Sydney.....2808 (DB2)
REOC.....2379	Selectron.....4421	Sonneclair.....2673 (DB2)	Sylvania.....2809
REPLAYTV.....2380	Semp.....2530	Sonoko.....2675 (DB2)	Symphonic.....2810
RevolutionHD.....3503	Sencora.....2531 (DB2)	Sontec.....2677 (DB2)	Syntax.....2814
Revox.....2383 (DB2)	SENSORY SCIENCE	Sony.....2679	Sysline.....2815 (DB2)
RFT.....2386 (DB2)2533	Soundesign.....2684	Systemax.....2817
Rhapsody.....2387	Sentra.....2534 (DB2)	SOUNDSTORM.....4425	Sytong.....2820 (DB2)
Ricavision.....2388	Serino.....2539 (DB2)	Soundwave.....2689 (DB2)	
RICOH.....2390	SERVICE ELECTRIC	Sova.....2690	T
RIO.....23934583 (DB1)	Soyo.....2693	Tagar Systems.....2831
RJTech.....2395 (DB1)	Sharp.....2550	Spectra.....2697	TANDY.....2843
R-Line.....2327 (DB2)	SHAW.....4327	SpectraVision.....2699 (DB1)	TAO.....4427
Roadstar.....2398 (DB2)	Sheng Chia.....2554	Spectroniq.....2701	Tascam.....2848
ROGERS.....4215	Sherwood.....2557	SPRUCER.....2702	Tashiko.....2850 (DB1)
Roku.....2407	Sherwood Newcastle	Squareview.....2703	Tatung.....2852
ROSEN.....24133766	Srypton.....4138 (DB2)	TCL.....2856
Rotel.....2414	SHINCO.....2560	SSS.....2708	Teac.....2860
Rowa.....2416 (DB2)	SHINSONIC.....2562	Stack 9.....2710	Tec.....2861 (DB2)
Royal.....2419 (DB1)	SHINTOM.....2563	Standard.....2713	Tech Line.....2863 (DB2)
Runco.....2423	Shintoshi.....2564 (DB2)	Star Choice.....2716 (DB1)	Technics.....2869
	Shivaki.....2567 (DB2)	STAR TRAK.....2720	Technika.....2870
S	Shogun.....2568	STARCOM.....2722	Technol Ace.....2875
SABA.....2429 (DB1)	SHURE.....2571	STARGATE.....2723	Techview.....2883
SAE.....2433	Siam.....2572 (DB2)	Starlite.....2728	Techwood.....2884
Saisho.....2437 (DB2)	Siarem.....2573 (DB2)	Starsight.....2734 (DB1)	Tedex.....2889 (DB2)
Saivod.....2439 (DB2)	Siemens.....2574 (DB2)	Stereophonics.....2740 (DB2)	Teknika.....2895
Sampo.....2446	Siera.....2576 (DB2)	Strato.....2745 (DB2)	Telecor.....2910 (DB2)
Samsonic.....2447	Sierra.....3549 (DB1)	STS.....2749	Telefunken.....2914
Samsung.....2448	SIGNAL.....2581	Studio Experience.....2750	Telefusion.....2915 (DB2)
Samsux.....2449	Signature.....2582	Stylandia.....2752 (DB2)	Telegazi.....2917 (DB2)

Telemeister.....	2924 (DB2)	U	
Telerent.....	2927	Uher.....	3089 (DB2)
Telesonic.....	2930 (DB2)	UltimateTV.....	3091 (DB1)
Telestar.....	2931 (DB2)	Ultra.....	3093
Teletech.....	2934 (DB2)	Ultravox.....	3095 (DB2)
Teleton.....	2935 (DB2)	Unic Line.....	3100 (DB2)
Televideon.....	2938 (DB2)	UNIDEN.....	3101
Televue.....	2939	UNIKA.....	3102
TELSAT.....	4428	UNITECH.....	3105
Tennessee.....	2952 (DB2)	United.....	3106
Tensai.....	2954 (DB2)	UNITED CABLE.....	3108
Tera.....	2957	Universal.....	3113
TERAPIN.....	2958	Universum.....	3115 (DB2)
Tevion.....	2962	Univox.....	3116 (DB2)
Textet.....	2963 (DB2)	US Logic.....	3124
TEXSCAN.....	2965		
Theta Digital.....	2970	V	
Thomas.....	2971	Vector Research.....	3137
Thomson.....	2972	VENTURER.....	3143
Thorens.....	2973 (DB2)	VEOS.....	3144
Thorn.....	2974 (DB2)	VERIZON.....	3146
TIME WARNER.....	3518	Vestel.....	3148 (DB2)
TIVAX.....	3956	Vexa.....	3149 (DB2)
TiVo.....	2991	Victor.....	3155
TMK.....	2994	Video Cipher II Plus	
TNCi.....	2996	3156 (DB1)
TOCOM.....	3000	VIDEO CONCEPTS	
Tokai.....	3001 (DB2)	3157
Tokyo.....	3004 (DB2)	VIDEO TECH.....	4429
Toshiba.....	3021	Videocon.....	3163
Totevision.....	3024	Videologic.....	3165 (DB2)
Touch.....	3025	Videologique.....	3166 (DB2)
Towada.....	3028 (DB2)	VIDEOSONIC.....	3171
Trakton.....	3036 (DB2)	VideoSystem.....	3172 (DB2)
Trans Continen.....	3037 (DB2)	Videotechnic.....	3173 (DB2)
Transfec.....	4143 (DB2)	VIDEOTRON.....	3175
Transonic.....	3041 (DB2)	VIDEOWAY.....	3176
Transtec.....	3042 (DB2)	Vidikron.....	3178
TREDEX.....	3045	Vidtech.....	3179
Trident.....	3054 (DB2)	VIEWSAT.....	3185
Triumph.....	3058 (DB2)	Viewsonic.....	3186
TruTech.....	3467	VIEWSTAR.....	3187
TV86.....	3076	Viking.....	3188
TVA.....	4225	Viore.....	3192
TVS.....	3081	Visiola.....	3197 (DB2)
		Vision.....	3198 (DB2)
		VISIONETICS.....	3199
		VISIONTEC.....	4052
		VISTA.....	4430

Vizio.....	3211	X	
Voodoo.....	3215	X10 HOME	
Vortec.....	3217 (DB2)	AUTOMATION.....	4433
Voxson.....	3220 (DB2)	xbox.....	3295 (DB1)
V-TECH.....	3728	XENIUS.....	3297
		XM.....	3311 (DB1)
		XR-1000.....	3316
		Xrypton.....	3317 (DB2)
W			
Waltham.....	3230 (DB2)		
Wards.....	3231		
Watson.....	3233 (DB2)	Y	
Watt Radio.....	3234 (DB2)	YAMAHA.....	3326
Waycon.....	3237	YAMAKAWA.....	3327
WEBTV.....	4431	Yamishi.....	3328 (DB2)
Wega.....	3238 (DB2)	Yokan.....	3335 (DB2)
Wegavox.....	3239 (DB2)	Yoko.....	3336 (DB2)
Weltblick.....	3245 (DB2)		
Western Digital.....	4260	Z	
Westinghouse.....	3249	Zanussi.....	3349 (DB2)
Wharfedale.....	3255	Zenith.....	3356
White Westinghouse		Zentech.....	4031 (DB1)
.....	3258	ZINWELL.....	3365
WideOpenWest.....	4555 (DB2)	ZT Group.....	3370
WINEGARD.....	3268		
WONDER.....	4432 (DB2)		
WoW!.....	4985 (DB1)		
Wyse.....	3288		

(DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

(DB2) Brands only available from version DB2 onwards.
You can find the DB version on the sticker inside the battery compartment.
DB2 products also include previous database (DB) updates (DB1).





© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5302 3

November 2011

www.philips.com

RTP/4811