

| | Philips CD Soundmachine |
|---|----------------------------|
| | USB |
| Ĩ | A71627 |

Enjoy music wherever you go

Want to enjoy the music collections stored at portable music player without using headphone? Plug the USB Direct socket to the Philips CD soundmachine and enjoy your favorite digital music through the powerful speakers - anytime, anywhere.

Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- MP3 Link for portable music playback
- Play MP3/WMA-CD, CD and CD-RW
- FM/MW tuner for radio enjoyment

Easy to use

• CD Shuffle/Repeat for personalized music enjoyment



Highlights

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

MP3 Link

 


The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size











| Issue | date | 201 | 5-0' | 1-22 |
|-------|------|-----|------|------|

Version: 1.0.3

12 NC: 8670 000 51099 EAN: 87 12581 47426 3


without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

CD Shuffle/Repeat

X 🗘 ALL PROG

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

FM/MW tuner

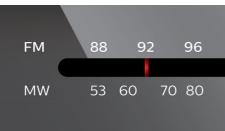

FM/MW (AM) stereo tuner

XZ1627/12

Specifications

Sound

- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

• No. of built-in speakers: 2

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/ previous album search, next/previous track search, repeat/shuffle/program

Tuner/Reception/Transmission

• Antenna: FM antenna • Tuner bands: FM stereo, MW

Connectivity

- MP3 Link: 3.5mm stereo line in
- USB: USB host

Convenience

- Display Digits: 3
- · Loader type: top
- Display type: LCD display

Accessories

- Cables/Connection: power cord
- User Manual: multi-languages
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 2.5 kg
- Packaging depth: 165 mm
- · Packaging height: 265 mm
- Packaging width: 378 mm
- Weight: 1.8 kg
- Main unit depth: 238 mm
- Main unit height: 127 mm • Main unit width: 348 mm

Power

- Battery type: C size (LR14)
- Power supply: 220 240 V
- Battery voltage: 1.5 V
- Number of batteries: 6

© 2015 Koninklijke Philips N.V. All Rights reserved. Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com