

Register your product and get support at
www.philips.com/welcome

PB9001



EN User manual 3

DA Brugervejledning 45

DE Benutzerhandbuch 89

ES Manual del usuario 131

FR Mode d'emploi 175

IT Manuale utente 219

NL Gebruiksaanwijzing 261

SV Användarhandbok 303

PHILIPS

ČESKA REPUBLIKA

Záruka: Pokud byste z jakéhokoli důvodu přístroj demontovali, vždy nejdříve vytáhněte síťovou zástrčku.

Přístroj chraňte před jakoukoli vlhkostí i před kapkami vody.

Advarsel: Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

Bemærk: Netafbryderen er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

ČESKA REPUBLIKA

Výstraha! Tento přístroj pracuje s laserovým paprskem. Při nesprávné manipulaci s přístrojem (v rozporu s tímto návodem) může dojít k nebezpečnému ozáření. Proto přístroj za chodu neotevírejte ani nesnímejte jeho kryty. Jakoukoli opravu vždy svěřte specializovanému servisu.

Nebezpečí! Při sejmutí krytů a odjištění bezpečnostních spínačů hrozí nebezpečí neviditelného laserového záření!

Chraňte se před přímým zásahem laserového paprsku.

Pokud byste z jakéhokoli důvodu přístroj demontovali, vždy nejdříve vytáhněte síťovou zástrčku.

Přístroj chraňte před jakoukoli vlhkostí i před kapkami vody.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

Luokan 1 laserlaite Varoitus!

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Oikeus muutoksiin varataan. Laite ei saa olla alttiina tippu- ja roiskevedelle. Huom. Toiminnanvalitsin on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkkoosa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

Huom. Toiminnanvalitsin on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

Contents

1	Important	5
	Important Safety Instructions	5
	Hearing safety	6
	Notice	7
	Trademark notice	9
2	Your portable Blu-ray disc player	12
	What's in the box	12
	Overview of the main unit	13
	Overview of remote control	15
3	Get started	17
	Prepare the remote control	17
	Charge the battery	17
	Connect a TV	19
4	Use your portable Blu-ray disc player	20
	Turn on	20
	Play a disc	22
	Play media files via USB	22
	Basic play control	23
	Video, audio and picture options	24
5	Use your portable Blu-ray disc player	27
	DivX videos	27
	BonusView on Blu-ray	28
	Set up a network	28
	BD-Live on Blu-ray	29
	Use Philips EasyLink	30

6	Change settings	32
	Picture	33
	Sound	33
	Network	34
	Preference	34
	Advanced options	36
	LCD screen	37
7	Update software	38
	Update software via the Internet	38
	Update software via USB	38
8	Specifications	39
9	Troubleshooting	41

1 Important

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑭ **Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:**
- Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

⑮ **Apparatus shall not be exposed to dripping or splashing.**

- ⑯ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Open source software

Philips Electronics Hong Kong Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open_source@philips.com. If you prefer not to use email or if you do not receive

confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter, please email to the email address above.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



 
Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Always bring your product to a professional to remove the built-in battery.

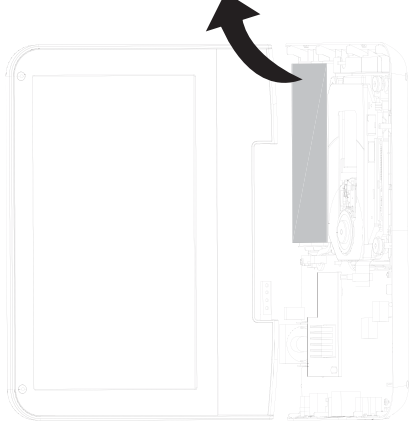

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

This apparatus includes this label:



Trademark notice



'Blu-ray Disc' and 'Blu-ray Disc' logo are trademarks.



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio, and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified®, DivX Plus™ HD and associated logos are registered trademarks of DivX, Inc. and are used under license.

DivX Certified® to play DivX® and DivX Plus™ HD (H.264/MKV) video up to 1080p HD including premium content.



BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.



'AVCHD' and 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.



'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation. Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Open source software

Philips Electronics Hong Kong Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open_source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter, please email to the email address above.

2 Your portable Blu-ray disc player

 
Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box

Check and identify the contents of your package:

- Portable Blu-ray disc player x 1
- AC power adaptor x 1
- Car adaptor x 1
- Remote control x 1
- AV adapter cable x 1
- Carry bag x 1
- User manual x 1
- Quick start guide x 1

Overview of the main unit

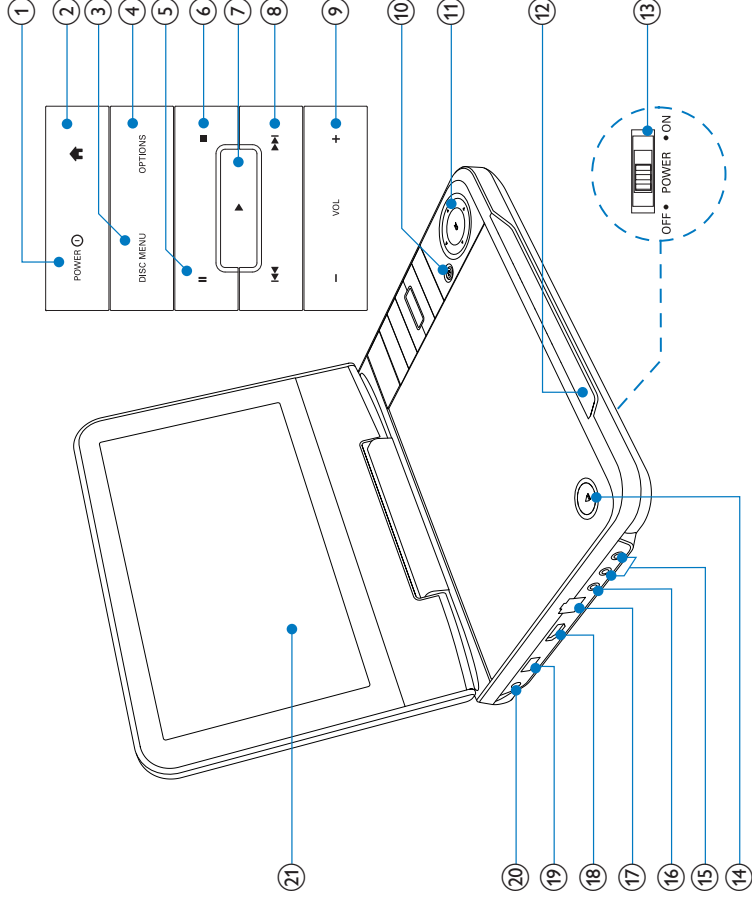

1 POWER

- Turn on this player or switch to standby mode.

2 Home button

- Access or exit the home menu.

3 DISC MENU

- **Blu-ray disc:** Access or exit the pop-up menu.
- **DVD:** Access or exit the disc menu.

4 OPTIONS

- Access options for the current activity or selection.

5 Play/Pause button

 
- Pause play.

6 Stop button

- Stop play.

- 7
 - Start or resume play.
- 8
 - Skip to the previous or next title, chapter, or track.
- 9
 - Increase or decrease volume.
- 10
 - Return to a previous menu.
- 11
 - Navigate through the menus.
 - **OK**
 - Confirm an entry or selection.
- 12
 - Power indicator/Charging indicator/Remote control sensor
- 13 **OFF•POWER•ON**
 - Power on/off this player.
- 14
 - Open the disc cover.
- 15
 - Headphone jack.
- 16 **AV OUT**
 - Audio/video output jack.
- 17 **LAN**
 - Ethernet port.
- 18 **HDMI**
 - HDMI output jack.
- 19
 - USB socket.
- 20 **DC IN**
 - Power supply socket.
- 21 **LCD screen**

Overview of remote control

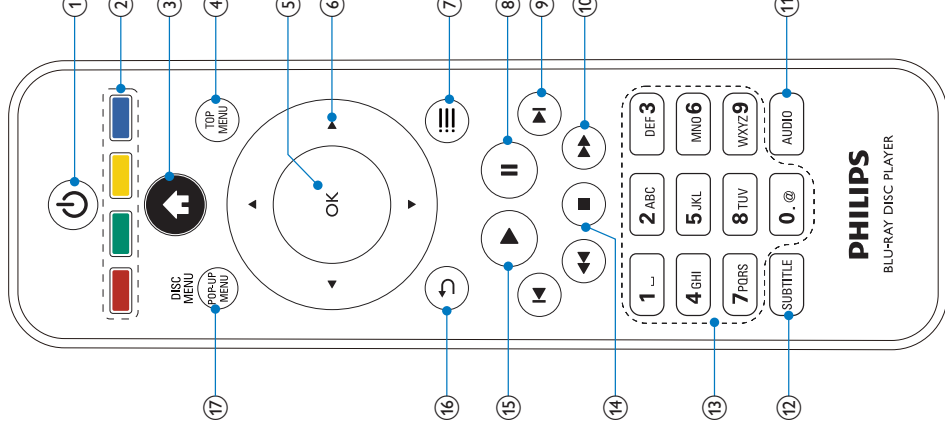

- 1
 - Switch this player to standby mode.
- 2 **Color buttons**
 - **Blu-ray disc:** Select tasks or options.
- 3
 - Access the home menu.

④ TOP MENU

- **Blu-ray disc:** Display the top menu.
- **DVD:** Display the title menu.

⑤ OK

- Confirm an entry or selection.

⑥ ▲▼◀▶

- Navigate the menus.

⑦ ≡

- Access options for the current activity or selection.

⑧ ||

- Pause play.

⑨ ⏮⏭

- Skip to the previous or next title, chapter, or track.

⑩ ⏮⏭⏮⏭

- Search backward or forward.

⑪ AUDIO

- Select an audio language on a disc.

⑫ SUBTITLE

- Select a subtitle language on a disc.

⑬ Alphanumeric buttons

- Select an item to play.
- Enter values.

⑭ ■

- Stop play.

⑮ ▶

- Start or resume play.

⑯ ↶

- Return to a previous menu.

 
⑰ DISC MENU / POP-UP MENU

- **Blu-ray disc:** Access or exit the pop-up menu.
- **DVD:** Access or exit the disc menu.

3 Get started

Prepare the remote control

- 1 Press and push the battery compartment to slide it open (see “1” in the illustration).
- 2 Insert two AAA batteries with correct polarity (+/-) as indicated.
- 3 Push and slide back the battery compartment (see “3” in the illustration).

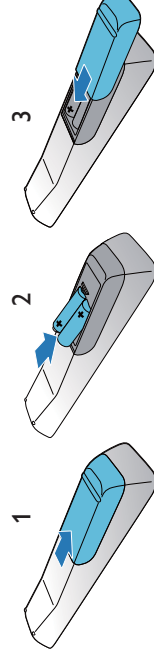

Note

- If you are not going to use the remote control for a long time, remove the batteries.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, so they should be disposed of properly.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Charge the battery

! Caution

- Risk of product damage. Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.

 


Note

- The type plate is located on the bottom of the player.


To fast charge the battery,

- Slide the **OFF•POWER•ON** switch to **OFF** position.

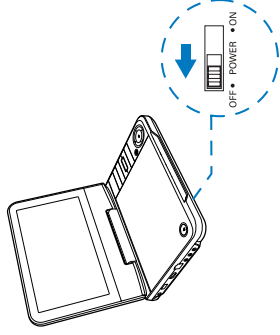

- Connect the supplied AC adaptor to:

 - DC IN** jack on the player.
- Power outlet.

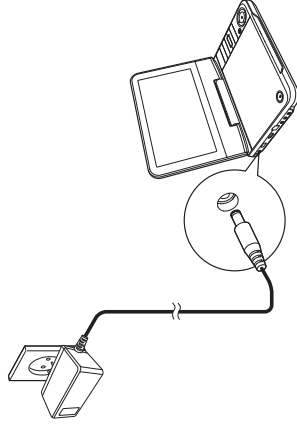

- The **CHR** indicator turns on (red).
- When the battery is fully charged, the **CHR** indicator turns off.

You can also charge the battery during play.

- To charge the battery, connect the supplied AC adaptor to:
 - DC IN** jack on the player.

- Power outlet.

 
Connect a TV

! Caution

- Turn off your player before connecting it to a TV.


You can connect the player to your TV to enjoy Blu-ray disc movies.

Use an AV cable

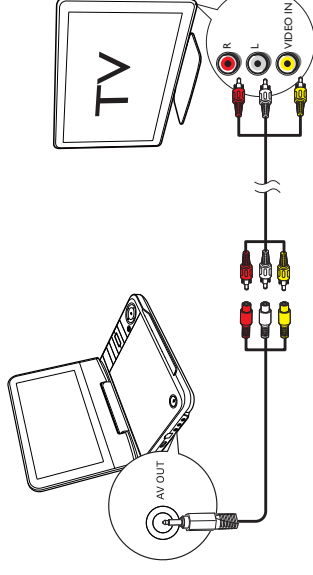

- Insert the supplied AV adaptor cable into the **AV OUT** jack of this player.
- Connect a AV cable (not supplied) to:
 - the audio/video jacks of your TV.
 - the audio/video terminals of the AV adaptor cable.
- Match the colors of the AV cable with the jacks;
 - the yellow cable is for the video jack
 - the red/white cable is for the audio jacks.
- Turn on the player and your TV.
- Find the AV input source on your TV (For details, refer to the user manual of your TV).

 Use an HDMI cable

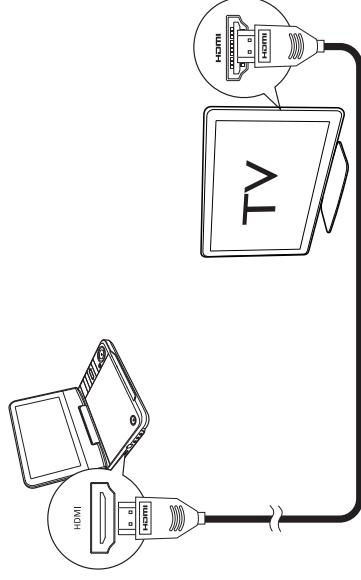


- 1 Connect the HDMI cable (not supplied) to:
 - the **HDMI** jack of this player.
 - the HDMI jack of your TV.
- 2 Turn on the player and your TV.
- 3 Find the HDMI input source on your TV (For details, refer to the user manual of your TV).

4 Use your portable Blu-ray disc player

Turn on


For first-time use:

 - 1 To turn on the battery switch, slide the **OFF•POWER•ON** switch to the **ON** position.

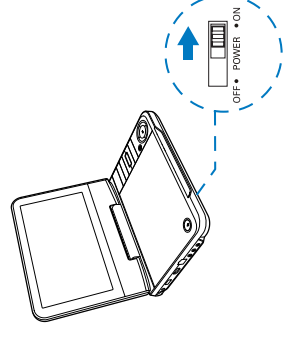

For normal use:

 - 1 To turn on the player, press **POWER** on the player:

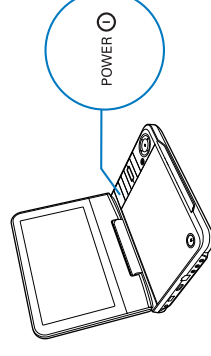

↳ The  indicator turns on (green).

To switch the player to standby, press **POWER** on the player.

- You can also press and hold  on the remote control for three seconds, and then release it.
- The  indicator turns off.

Note

- If you do not intend to use this player for a long time, slide the **OFF•POWER•ON** switch to the **OFF** position to protect the battery from exhaustion.

 
Play a disc



Caution

- Risk of damage to the player! During play, never move the unit.
- Never put any object other than a disc into the disc compartment.
- Never look at the laser beam inside the player.
- Never play discs with accessories such as disc stabilizer rings or disc treatment sheets.

- 1 Press the **▲** button on the player to open the disc cover.
- 2 Place a disc into the tray with the label side up.

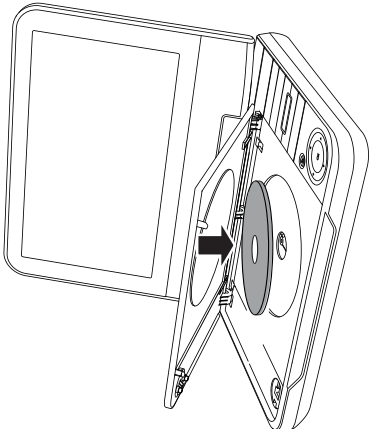


- 3 Close the disc cover:
 - ↳ The player starts playing automatically.


Play media files via USB

To play picture, music, and video files from a USB storage device,

 - 1 Connect the USB storage device to the **USB** jack.

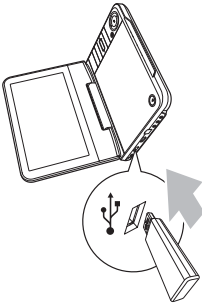

 - 2 Press **⬆**, and select **[browse USB]**.
 - ↳ The file browser is displayed.

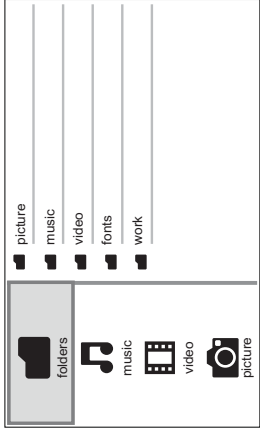

- ↳ To find music files, go to **[music]**.
 - ↳ To find video files, go to **[video]**.
 - ↳ To find picture files, go to **[pictures]**.
 - ↳ To browse media files in the folder structure mode, go to **[folders]**.
- 3 Press **▲▼◀▶** to select a media file and press **OK** to play.

Basic play control

Follow the instructions to control your play .


Button	Action
▶	Start or resume play.
⏸	Pause play. Press repeatedly to slow forward frame by frame.

	Stop play.
	Skip to the previous or next track, chapter or file.
	Fast backward or forward. Press repeatedly to change the search speed.
AUDIO	Select an audio language.
SUBTITLE	Select a subtitle language.
DISC MENU / POP-UP MENU	Access or exit the disc menu.
TOP MENU	Access the main menu of a video disc.
Color buttons	Select tasks or options for Blu-ray discs.
	Navigate the menus. Press  to rotate a picture clockwise or counter-clockwise during a slideshow.
OK	Confirm a selection or entry.
	Return to a previous menu.
	Access more options during play.

Video, audio and picture options

You can specify options for video or picture play from a disc or a USB storage device.

 Video options

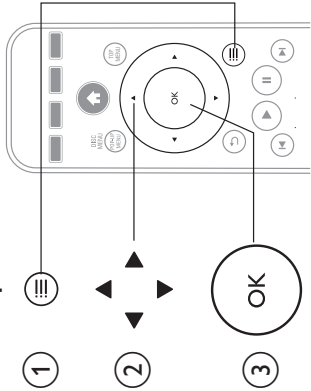


Access more options during video play.

- **[Audio Language]:** Select an audio language.
- **[Subtitle Language]:** Select a subtitle language.
- **[Subtitle Shift]:** Change the subtitle position on the screen. Press  to change the subtitle position.
- **[Info]:** Display play information.
- **[Character Set]:** Select a character set that supports the DivX video subtitle (only for DivX videos).
- **[Time Search]:** Skip to a specific time via the numeric buttons on the remote control.
- **[2nd Audio Language]:** Select the second audio language (only for Blu-ray discs that support BonusView).
- **[2nd Subtitle Language]:** Select the second subtitle language (only for Blu-ray discs that support BonusView).
- **[Titles]:** Select a title.
- **[Chapters]:** Select a chapter.
- **[Angle List]:** Select a camera angle.
- **[Menus]:** Display a disc menu.
- **[PIP Selection]:** Display a picture-in-picture window.
- **[Zoom]:** Zoom into a video picture. Press  to zoom in or zoom out.
- **[Repeat]:** Repeat a chapter or title.
- **[Repeat A-B]:** Repeat a specific section within a chapter for repeat play, or turn off repeat mode.
- **[Picture Settings]:** Select a predefined color setting.
- **[LCD Setup]:** Adjust the LCD screen settings.
- **[Setup]:** Access the setup menu.



 
- Available video options depend on the video source.

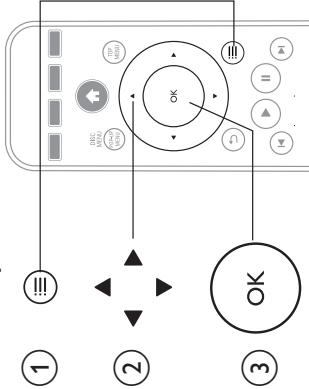

Access more options during a slideshow.

- **[Rotate +90]:** Rotate a picture 90 degrees clockwise.
- **[Rotate -90]:** Rotate a picture 90 degrees counter-clockwise.
- **[Zoom]:** Zoom into a picture. Press ◀▶ to zoom in or zoom out.
- **[Info]:** Display picture information.
- **[Duration per slide]:** Set a display interval for a slideshow.
- **[Slide Animation]:** Select a transition effect for a slideshow.
- **[Picture Settings]:** Select a predefined color setting.
- **[Repeat]:** Repeat a selected folder.
- **[LCD Setup]:** Adjust the LCD screen settings.
- **[Setup]:** Access the setup menu.

 Audio options

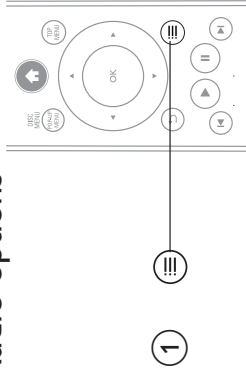

Press ≡ repeatedly to select an play option.

- Repeat the current track.
- Repeat all the tracks on the disc or folder.
- Play audio tracks in a random loop.
- Turn off a repeat mode.

5 Use your portable Blu-ray disc player

DivX videos

You can play DivX videos from a disc or a USB storage device.

VOD code for DivX

Before you purchase DivX videos and play them on this player, register this player on www.divx.com using the DivX VOD code.

- To display the DivX VOD code,
 - 1 press , and select **[Setup]**.
 - 2 Select **[Advanced]** > **[DivX® VOD Code]**.

DivX subtitles

Press **SUBTITLE** to select a language.

- If the DivX subtitle is incorrect, change the character set that supports the subtitle.
- To select a character set,
 - 1 Press , and select **[Character Set]**.

Character set	Languages
[Standard]	English, Irish, Danish, Estonian, Finnish, French, German, Italian, Portuguese, Luxembourgish, Norwegian (Bokmål and Nynorsk), Spanish, Swedish, Turkish
[Central Europe]	Polish, Czech, Slovak, Albanian, Hungarian, Slovene, Croatian, Serbian (Latin script), Romanian
[Cyrillic]	Belarusian, Bulgarian, Ukrainian, Macedonian, Russian, Serbian
[Greek]	Greek



Note

- To play DivX DRM protected files from a USB storage device, connect this player to a TV through HDMI.
- To use the subtitles, make sure that the subtitle file has the same name as the DivX video file name. For example, if the DivX video file is named "movie.avi", save the subtitle file as "movie.srt", or "movie.sub".
- This player can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, and .smi.

BonusView on Blu-ray

View special content (such as commentaries) in a small screen window.

This feature is only applicable to Blu-ray discs compatible with BonusView (also known as picture in picture).

- 1 During play, press **≡**.
 - ↳ The options menu is displayed.
- 2 Select **[PIP Selection] > [PIP]**, and press **OK**.
 - ↳ PIP options [1]/[2] depend on the video contents.
 - ↳ The secondary video window is displayed.
- 3 Select **[2nd Audio Language]** or **[2nd Subtitle Language]**, and press **OK**.

 
Set up a network

You can access the following services through the Internet:

- BD-Live: access online bonus features (applicable to Blu-ray discs that are BD-Live enabled)
- Update software: update the software of this player.

To set up a network,

- 1 Connect this player to
 - **LAN** port.
 - LAN port on a router with Internet connection.

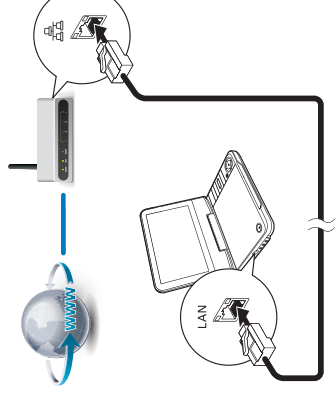

- 2 Perform the network installation.

- 1), Press **⬆**, and select **[Setup]**.
- 2), Select **[Network Setup] > [Network Installation]**.
- 3), Follow the on-screen instructions to complete the network setup.

Caution

- Before you connect to a network, familiarize yourself with the network router, media server software for DLNA, and networking principles. If necessary, read documentation accompanying network components. Philips is not responsible for lost, damaged or corrupt data.

BD-Live on Blu-ray

You can access exclusive online services, such as movie trailers, games, ringtones and other bonus contents.

- 1 Prepare the Internet connection and set up a network (see "Set up a network").
- 2 Connect a USB storage device to the **⚡** (USB) jack of this player.
 - A USB storage device is used to store the downloaded BD-Live content.
- 3 Play a disc that is BD-Live enabled.

- 4 On the disc menu, select the BD-Live icon, and press **OK**.
↳ BD-Live starts loading.
- 5 On the BD-Live interface, select an item to access.

Note

- This feature is only applicable to Blu-ray discs that are BD-Live enabled.
- BD-Live services vary from discs and countries.
- When you use BD-Live, data on the disc and this player are accessed by the content provider
- Use a USB storage device with at least 1GB of free space to store the download.

To delete the downloaded BD-Live content,

- 1 Press **↑**, and select **[Setup]**.
- 2 Select **[Advanced]** > **[Clear memory]**.

Use Philips EasyLink

This player supports Philips EasyLink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use a single remote control to control EasyLink compliant devices that are connected through HDMI.

- 1 Connect the HDMI CEC compliant devices through HDMI, and turn on the HDMI CEC operations on the TV and other connected devices (see the user manual of the TV or other devices for details).

- 2 Press **↑**.

- 3 Select **[Setup]** > **[EasyLink Setup]**.

- 4 Select **[On]** under the options:

- **[EasyLink]** > **[On]**
- **[One Touch Play]** > **[On]**
- **[One Touch Standby]** > **[On]**

Video Setup	EasyLink	• On
Audio Setup	One Touch Play	• On
Network Setup	One Touch Standby	• On
EasyLink Setup		
Preference		
Advanced		
LCD Setup		

- EasyLink function is turned on.

One Touch Play

When you play a disc with this player, the connected HDMI CEC TV automatically switches to the HDMI input channel.

One Touch Standby

 
When you switch a connected device (for example TV) to the standby mode with its own remote control, this player switches to the standby mode automatically.

Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

6 Change settings

You can change the settings of this player in the setup menu.

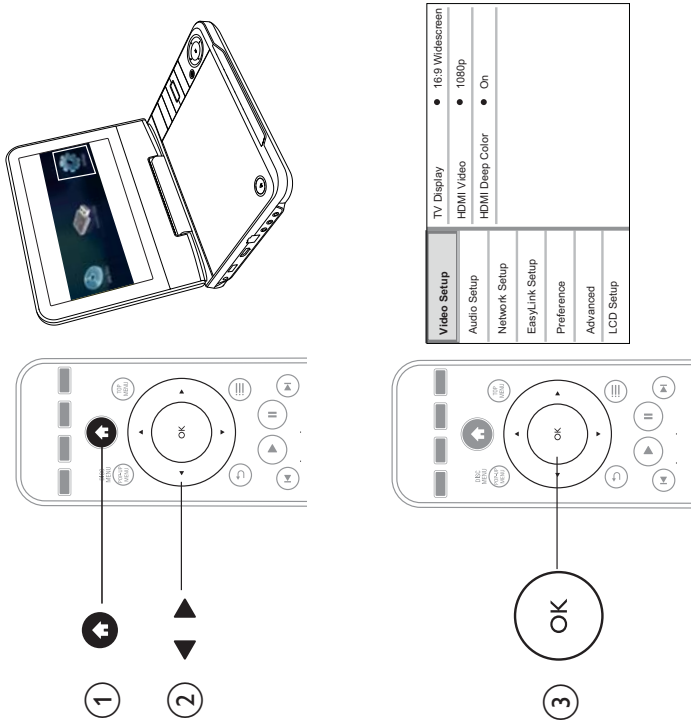

Picture

Video Setup	TV Display	• 16:9 Widescreen
Audio Setup	HDMI Video	• 1080p
Network Setup	HDMI Deep Color	• On
EasyLink Setup		
Preference		
Advanced		
LCD Setup		

[TV Display]: Select a picture display format to fit your TV screen.

[HDMI Video]: Select an HDMI video resolution.

[HDMI Deep Color]: Display colors with more shades and hues when the video content is recorded in Deep Color mode and the TV supports this feature.

Note

- For settings related to HDMI, you need to connect this player to your TV through HDMI.
- For the composite connection (via the AV OUT jack), select a video resolution of 480i/576i or 480p/576p under [HDMI Video] to enable video output.

Sound

Video Setup	Night Mode	• Auto
Audio Setup	Neo 6	• Off
Network Setup	HDMI Audio	• Auto
EasyLink Setup		
Preference		
Advanced		
LCD Setup		

[Night Mode]: Equalize loud sound and soft sound. Enable this feature to watch movies at a low volume at night.

Note

- You cannot change a menu option that is grayed out.
- To return to the previous menu, press ⏮.
- To exit the menu, press ⏻.

[Neo 6]: Enable or disable a surround sound effect which is converted from 2.0 channel audio.

[HDMI Audio]: Set an HDMI audio format when this player is connected through HDMI.

Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is only available for Dolby encoded DVD and Blu-ray discs.

Network

Video Setup	Network Installation
Audio Setup	View Network Settings
Network Setup	
EasyLink Setup	
Preference	
Advanced	
LCD Setup	

[Network Installation]: Start network installation to connect the player to the network.

[View Network Settings]: Display the current network status.

Preference

Video Setup	Menu Language English
Audio Setup	Audio English (ENG)
	Subtitle English (ENG)
Network Setup	Disc Menu Chinese (CH)
EasyLink Setup	Parental Control Off
Preference	Screen Saver On
Advanced	Change Password
LCD Setup	VCD PBC On

[Menu language]: Select a language for the onscreen menu .

[Audio]: Select an audio language for video.

[Subtitle]: Select a subtitle language for video.

[Disc Menu]: Select a menu language for a video disc.

[Parental Control]: Set the rating level to a disc. Restrict the play of a disc to children. These discs must be recorded with rating levels.

Note

- Input “0000” to access the restriction options. To play all discs without rating restrictions, select level “8” .

[Screen Saver]: Enable or disable the screen saver function. If enabled, the screen saver is activated after 10 minutes of inactivity (for example, in pause or stop mode).

[Change Password]: Set a password to play a restricted disc. Input “0000” if you do not have a password or if you forgot your password.

[VCD PBC]: Display or skip the content menu for VCD and SVCD.

[Sleep Timer]: Enable a countdown timer to switch this player to standby mode after a specific period of time.

Note

- If your preferred language is not available for disc language, audio or subtitle, you can select [Other] from the menu options and input 4-digit language code which can be found at the back of this user manual.
- If you select a language which is not available on a disc, this player uses the default language of the disc.

Advanced options

Video Setup	BD-Live Security	• Off
Audio Setup	Software Update	•
Network Setup	Clear memory	•
EasyLink Setup	DivX® VOD Code	•
Preference	Version Info.	•
Advanced	Restore default setting	•
LCD Setup		

[BD-Live Security]: Restrict or allow access to BD-Live (only for non-commercial, users-created Blu-Live discs).

[Software Update]: Select to update software from a network or from USB storage device.

[Clear memory]: Delete the downloaded BD-Live content on the USB storage device.

[DivX® VOD Code]: Display the DivX® registration code or the deregistration code for this player.

[Version Info.]: Display the software version of this player.

[Restore default settings]: Reset this player to the default settings made at the factory.



Note

- You cannot restrict Internet access on commercial Blu-ray discs.
- Before you purchase DivX videos and play them on this player, register this player on www.divx.com with the DivX VOD code.
- You cannot reset a parental control setting to the default value.

LCD screen

Video Setup	Brightness	20
Audio Setup	Contrast	• 15
Network Setup	Colour	• 17
EasyLink Setup	Hue	• 0
Preference	Screen	• Full Screen
Advanced		
LCD Setup		

[Brightness]: Set the brightness level of the LCD screen.

[Contrast]: Set the contrast level of the LCD screen.

[Colour]: Set the saturation level of the LCD screen.

[Hue]: Set the hue level of the LCD screen.

[Screen]: Set the aspect ratio of the LCD screen.

7 Update software

Before you update the software of this player, check the current software version:

- 1 Press , and select [Setup].
- 2 Select [Advanced] > [Version Info.] , and press OK.
↳ The software version information is displayed .

Update software via the Internet

- 1 Connect the player to the Internet (see “Set up a network”).
- 2 Press , and select [Setup].
- 3 Select [Advanced] > [Software Update] > [Network].
↳ If an upgrade media is detected, you are prompted to start the update.
- 4 Follow the instructions on the screen to update the software.

Update software via USB

- 1 Check the latest software version on www.philips.com/support.
 - Search for your model and click on “Software and drivers”.
- 2 Download the software into a USB storage device.
 - ① Unzip the download, and make sure that the unzipped folder is named “UPG_ALL”.
 - ② Put the “UPG_ALL” folder in the root directory.
- 3 Connect the USB storage device to the  (USB) jack on this player.
- 4 Press , and select [Setup].
- 5 Select [Advanced] > [Software Update] > [USB].
↳ If an upgrade media is detected, you are prompted to start the update.
- 6 Follow the instructions on the screen to update the software.
↳ When the update is complete, this player automatically restarts.



Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage this player.

8 Specifications



Note

- Specifications are subject to change without notice

Region code

This player can play discs with the following region codes.

DVD	Blu-ray	Countries
 		Europe, United Kingdom

Playable media

- BD-Video
- DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL (Dual Layer)
- VCD/SVCD
- Audio CD, CD-R/CD-RW, MP3 media, WMA media, JPEG files
- DivX Plus HD media, MKV media
- USB storage device

File format

- Video: .avi, .divx, .mp4, .mkv
- Audio: .mp3, .wma, .wav
- Picture: .jpg, .gif, .png

Video

- Signal system: PAL / NTSC
- Composite video output: 1 Vp-p (75 ohm)
- HDMI output 480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 1080p24

- HDMI output
 - Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
 - Constant bit rate:
 - MP3: 112 kbps - 320 kbps
 - WMA: 48 kbps - 192 kbps
- USB**
- Compatibility: Hi-Speed USB (2.0)
 - Class support: USB Mass Storage Class (UMS)
 - File system: FAT16, FAT32
 - Support HDD (a portable hard drive disc): an external power source may be needed.

Main unit

- Power supply rating: AC 100-240V~, 50 Hz
- Power consumption: 10 W
- Power consumption in standby mode: < 0.25 W
- Dimensions: 240 x 200 x 47.2 (mm)
- Net Weight: 1.35 kg

Laser Specification

- Laser Type (Diode): AlGaInN (BD), AlGaInP (DVD/CD)
- Wave length: 440-410nm (BD), 650-663nm (DVD), 770-800nm (CD)
- Output power: 20mW (BD), 7mW (DVD), 7mW (CD)

9 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the player yourself.

If you have problems using this player, check the following points before you request service. If you still have a problem, register your player and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are on the back of this player. Write the numbers here:

Model No. _____

Serial No. _____

Main unit

The buttons on this player do not work.

- Disconnect this player from the power supply for a few minutes, and then reconnect.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the car cigarette lighter or AC outlet.

The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.

Picture

No picture.

- Make sure that the TV is switched to the correct source input for this player.

No picture on HDMI connection.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace with a new HDMI cable.
- On the remote control, press  and then press “731” (numeric buttons) to recover picture display. Or wait for 10 seconds for auto recovery.
- If this player is connected to an unauthorized display device with an HDMI cable, the audio and video signals may not be output.

The disc does not play high-definition video.

- Make sure that the disc contains high-definition video.
- Make sure that the TV supports high-definition video.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Sound

No audio output from the TV.

- Make sure that the audio cables are connected to the audio input of the TV.
- Make sure that the TV is switched to the correct source input for this player.

No audio output from the loudspeakers of the external audio device (home theater or amplifier).

- Make sure that the audio cables are connected to the audio input of the audio device.
- Switch the external audio device to the correct audio source input.

No sound on HDMI connection.

- You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI-compatible.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the disc is correctly loaded.
- Make sure that this player supports the disc. See “Product specifications”.
- Make sure that this player supports the region code of the DVD or BD.
- For DVD±RW or DVD±R, make sure that the disc is finalized.

Cannot play DivX video files.

- Make sure that the DivX video file is complete.
- Make sure that the video file name extension is correct.
- To play DivX DRM protected files from a USB storage device, connect this player to a TV through HDMI.

DivX subtitles do not display correctly.

- Make sure that the subtitle file has the same name as the DivX video file.
- Make sure that the subtitle file has an extension name supported by this player (.srt, .sub, .txt, .ssa, or smi).

Cannot read the contents of a connected USB storage.

- Make sure that the format of the USB storage device is compatible with this player.
- Make sure that the file system on the USB storage device is supported by this player.
- For a portable hard drive disc (HDD), an external power source may be needed.

‘No entry’ or ‘x’ sign appears on the TV.

- The operation is not possible.

EasyLink feature does not work.


- Make sure that this player is connected to the Philips brand EasyLink TV, and the EasyLink option is turned on (see “Use your Blu-ray disc/ DVD player” > “Use Philips EasyLink”).

Cannot access BD-Live features.

- Make sure that this player is connected to the network (see “Use your Blu-ray disc/ DVD player” > “Set up a network”).
- Make sure that the network installation is made (see “Use your Blu-ray disc/ DVD player” > “Set up a network”).
- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage (see “Change settings” > “Advanced options (BD-Live security, clear memory...)”).

Language code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	Ivrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhajjani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja	7889	Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provençal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (International)	7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

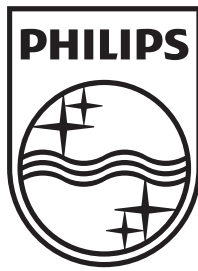 

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

PB9001_12_UM_Book 1_V3.2

