# Quick start guide



Step A Connect

Step B Setup


Step C Enjoy


#### What's in the Box?

You should find these items upon opening the box.






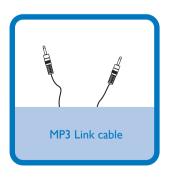

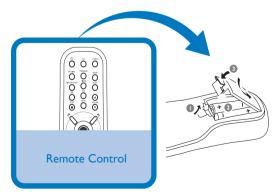




## Step A Connect

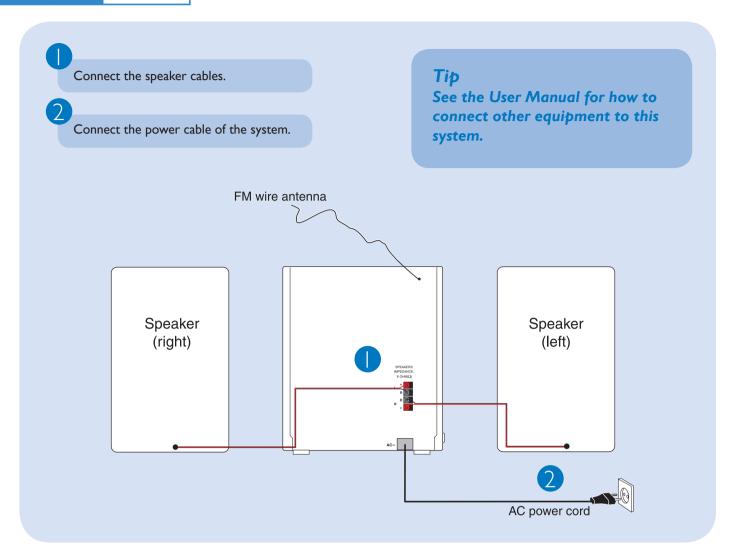

## Step B Setup

#### **Setting the clock**

- In standby mode, press and hold **DISPLAY/CLOCK**. The clock digits for the hours flash.
- Press PRESET +/- | | / | | on the remote) to set the hours.
- Press **DISPLAY/CLOCK** again. The clock digits for the minutes flash.
- Press PRESET +/- | | ( | | | on the remote) to set the minutes.
- Press **DISPLAY/CLOCK** to confirm the time.

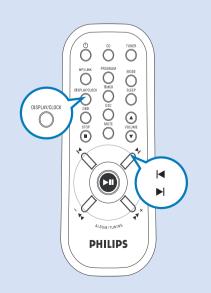

### Playing a disc


Press **SOURCE** once or more to select **CD**.

Press **OPEN/CLOSE** ▲ on the system to open the CD compartment.

Insert a disc with the printed side facing up and press **OPEN**/ **CLOSE \( \Delta\)** to close the CD door.

Press ► to start playback.

Press ■ to stop playback.

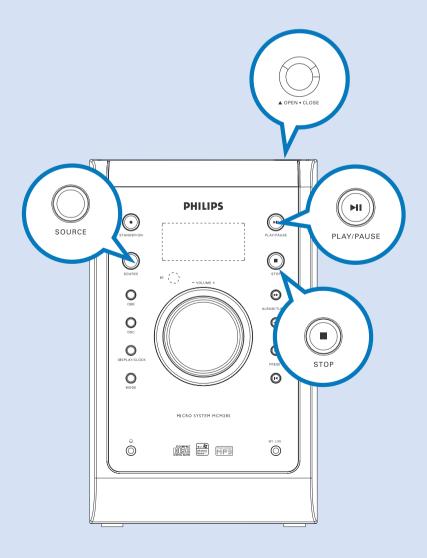



#### Programming and tuning to radio stations

- Press **SOURCE** or **TUNER** once or more to select the desired waveband : FM or AM (MW).
- Press **PROGRAM** on the remote control for more than two seconds to program all available stations.
- Press PRESET +/- | | | until the desired preset station is displayed.

#### Tip

Detailed playback features and additional functions are described in the user manual.



© Royal Philips Electronics N.V. 2009 All rights reserved.

http://www.philips.com

