



# Quick Start Guide



You should find these items upon opening the box.

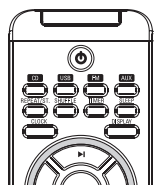


Remote Control

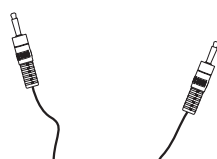

1 x MP3 link cable



Quick Start Guide

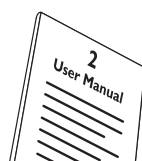

User Manual

## Connect

1


Connect the speaker cables.

2

Connect the AC power cable to the main unit and the wall socket.

### Tip

See the User Manual for how to connect other equipment to this system.

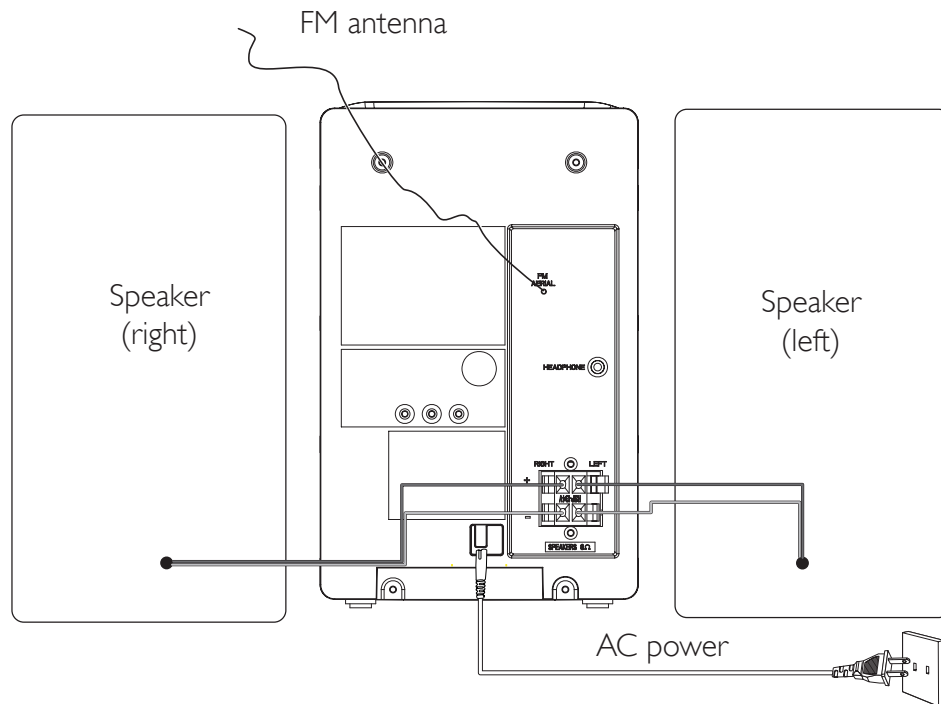

## Setup

### Set clock

1

Press and hold **CLOCK/DISPLAY** to activate the clock setting mode.  
→ The 12 hour or 24 hour format is displayed..

2

Press **PROG** repeatedly to select 12 hour or 24 hour format.

3

Press **CLOCK/DISPLAY** to confirm.  
→ The hour digits are displayed and begin to blink.

4

Press **◀▶** to set the hour.

5


Press **CLOCK/DISPLAY** to confirm.  
→ The minute digits are displayed and begin to blink.

6

Press **◀▶** to set the minute.


7

Press **CLOCK/DISPLAY** to confirm.

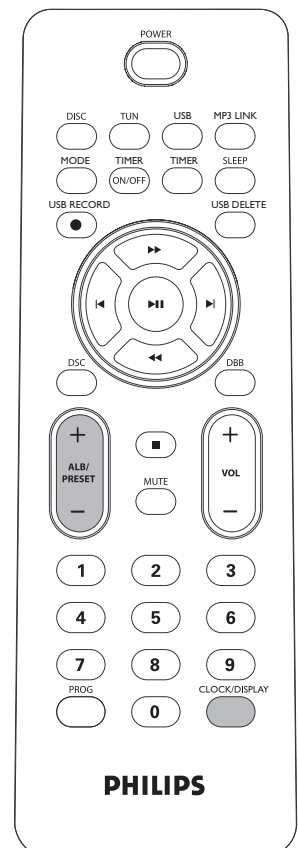


## Play disc

- 1 Press **SOURCE** (or **DISC** on the remote control) to select the disc source.
- 2 Lift the disc compartment door on the top panel to open the disc compartment.
- 3 Insert a disc with the printed side facing up, then close the disc compartment.
- 4 If the disc doesn't play, press **▶||**.
- 5 To stop play, press **■**.

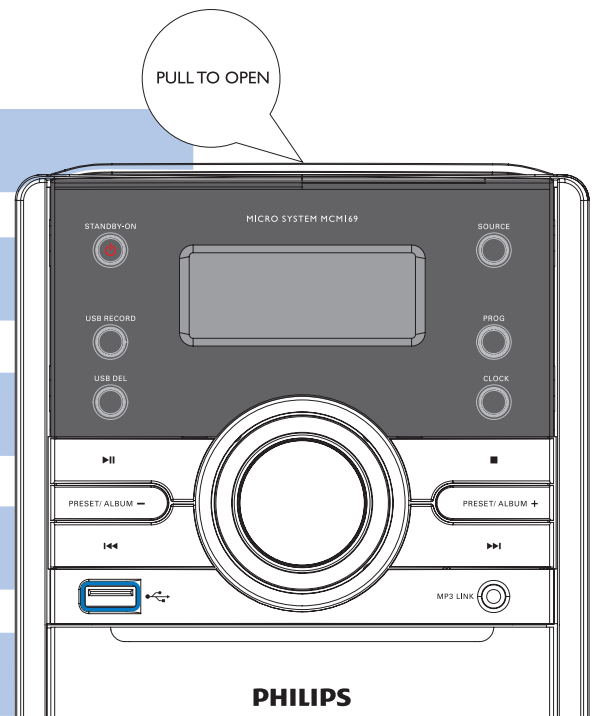


## Play from USB

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Plug the USB device into the socket  of this unit.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select the USB source.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

## Listen to radio

- 1 Press **SOURCE** (or **TUN** on the remote control) repeatedly to select FM or MW.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 In tuner mode, press **PRESET/ALBUM +/-** (or **ALB/PRESET +/-** on the remote control) to select a preset number.

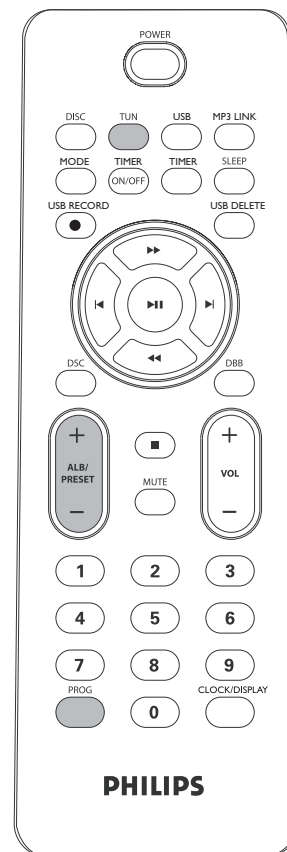

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

