




Quick start guide

EN

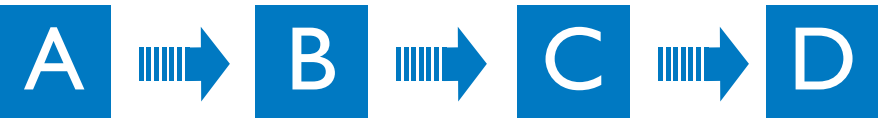

Please read and accept our Streamium terms & conditions as well as the Software End User License Agreement that are included in the User Manual on the supplied CD-ROM.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners
© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
www.philips.com




Printed in China
MC1730_05_QSG
_wik1012.3

PHILIPS

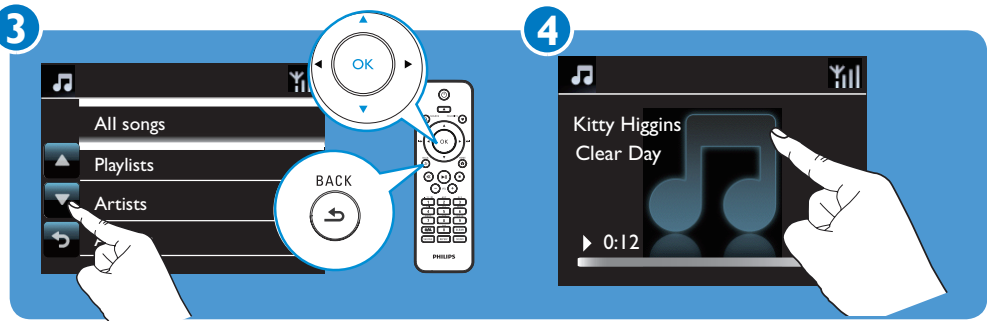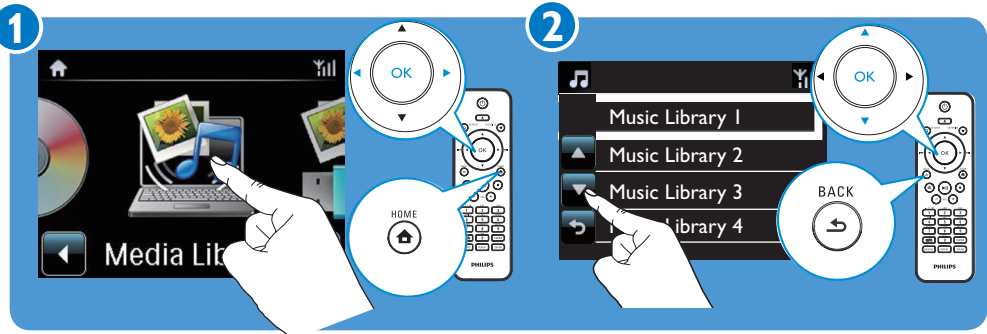


- If necessary, tap on the screen to show functional buttons; Tap on the buttons to select corresponding functions.

Play from a USB mass storage device

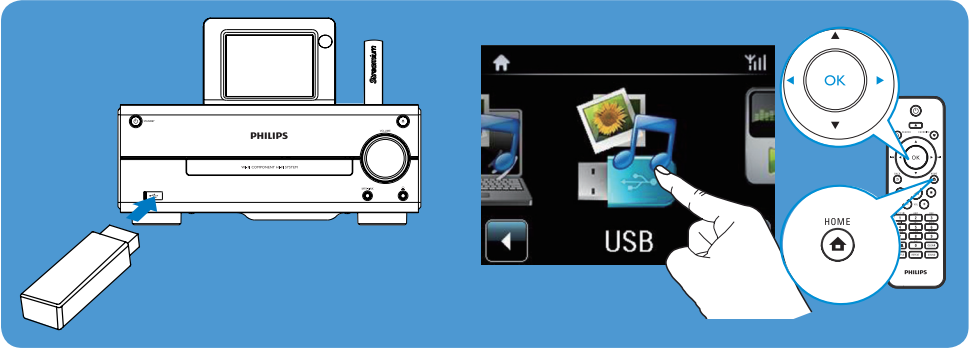

Play from a portable media player

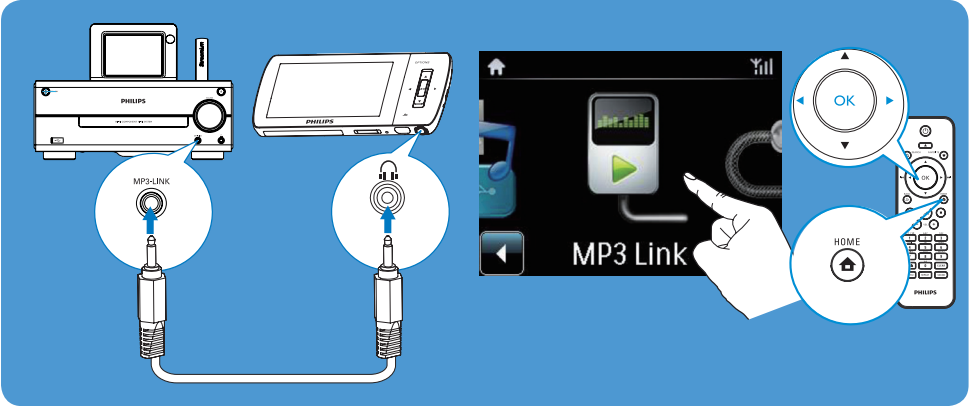


Play music CDs



Play FM radio


- The first time you tune to FM radio stations, select **[Auto store]** to search for and store available stations in **[Presets]**.
- Go to **[Presets]** to select a preset radio station.

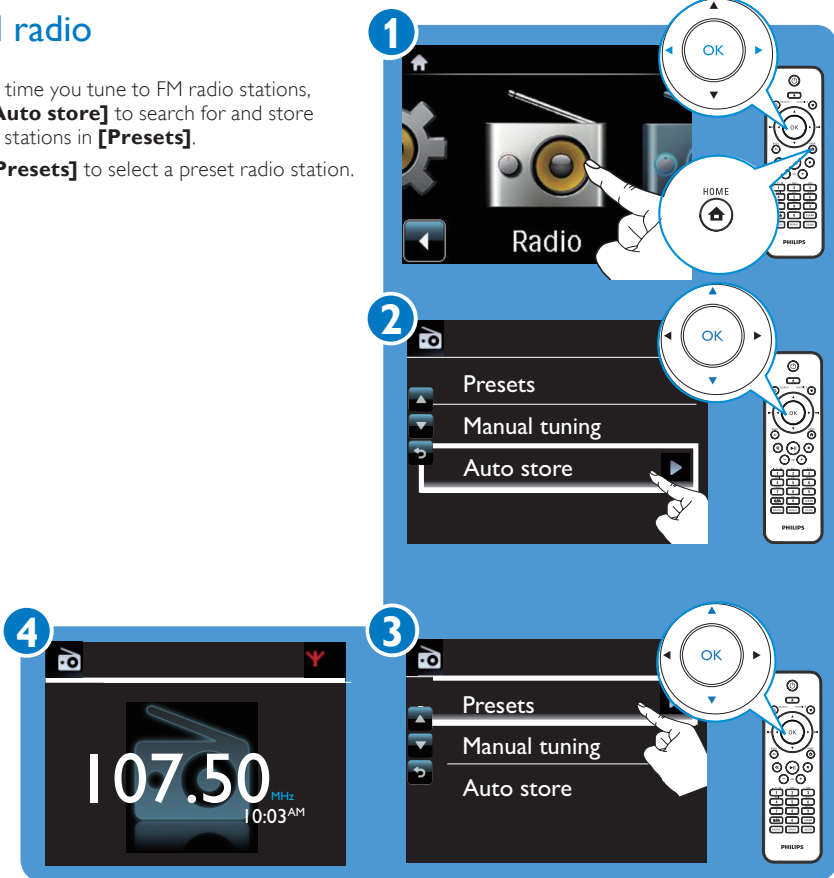

D Register

Register your MC1730 directly on www.philips.com/welcome. You can:

- Manage your own favorite radio stations;
- Receive Streamium newsletters.

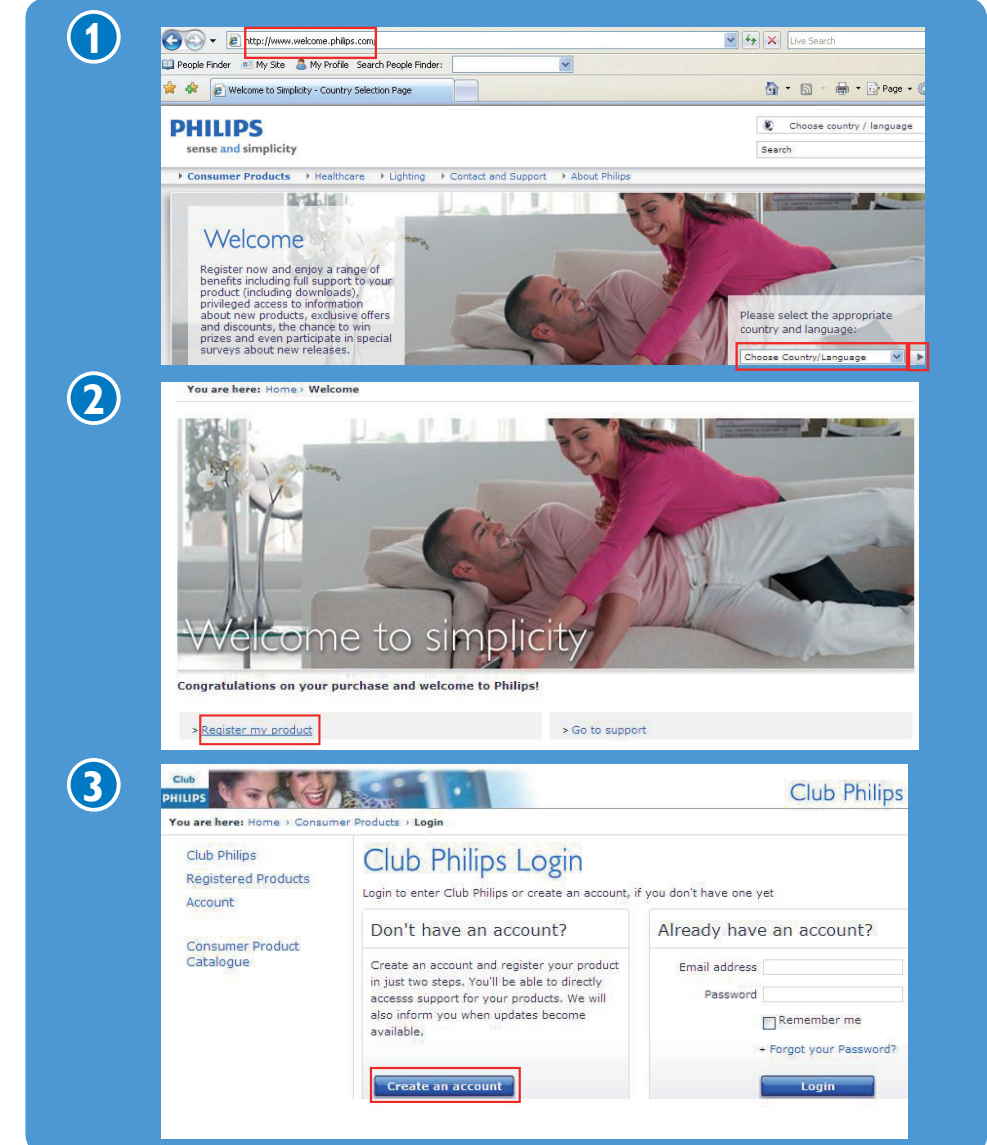


Get help

For more information, look at the user manual and others on the supplied CD-ROM. Also, you can look at www.philips.com/support for frequently asked questions (FAQ).

Get updates about Streamium

Visit www.streamiumtheblog.com.


What's in the Box

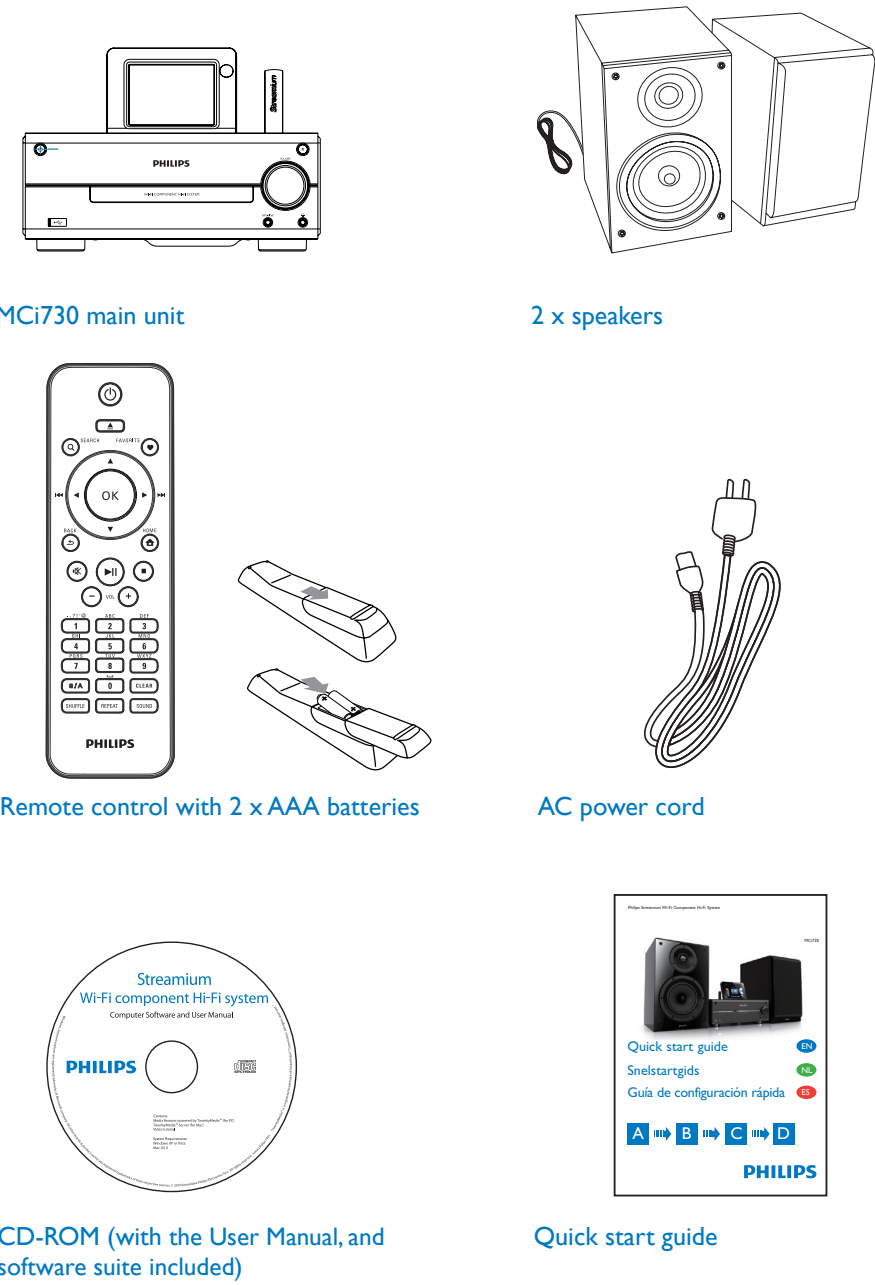


Start

A Prepare

Place and connect the speakers

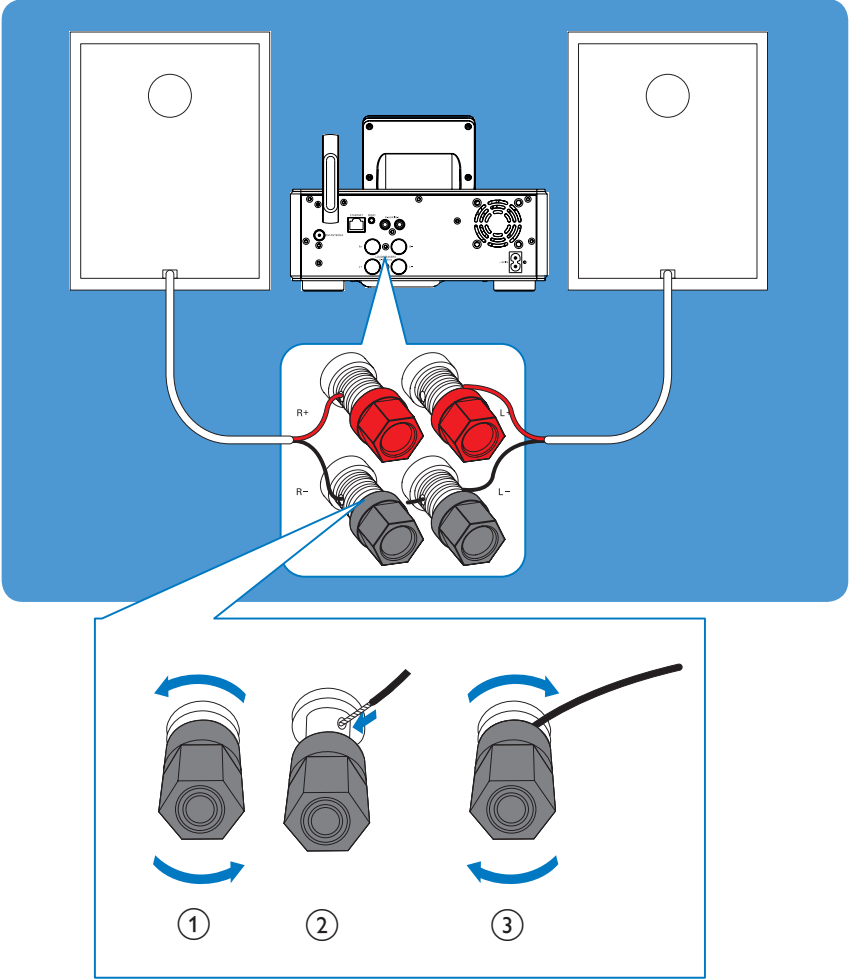

Turn on

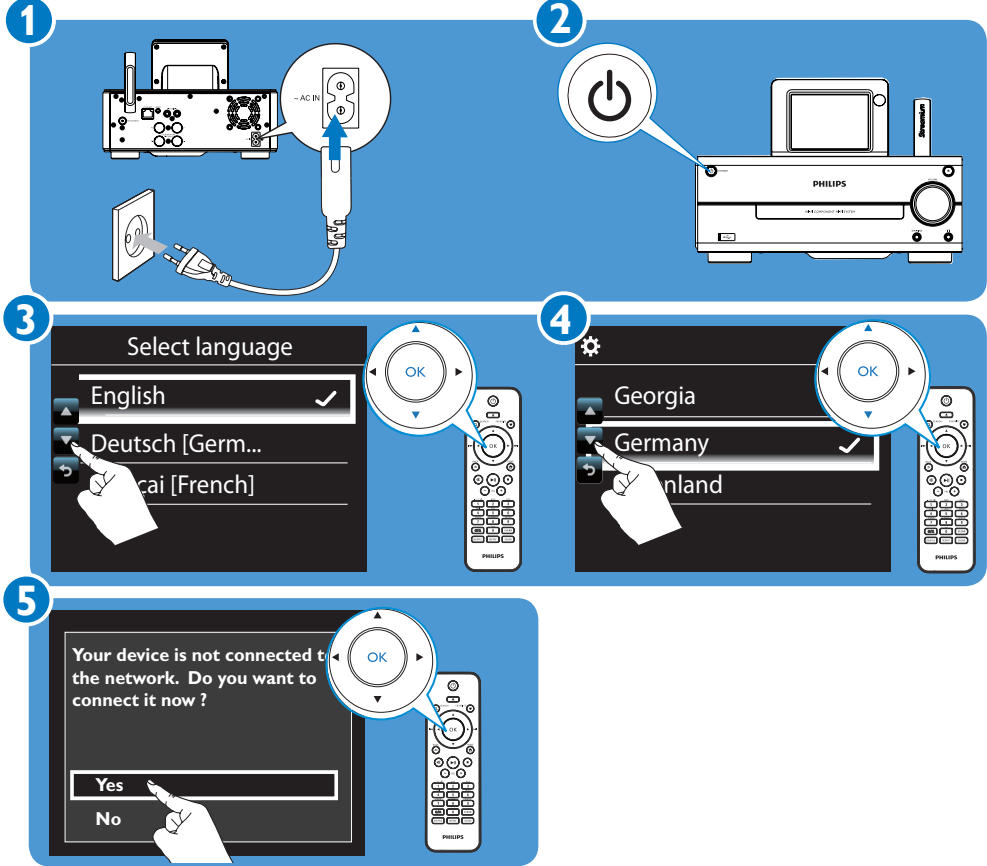


- *Tip**
- To turn off the unit, press **⏻** to switch to active standby. The power indicator lights up red.
 - Or, press and hold **⏻** to switch to Eco standby (power-saving mode).


B Connect Aansluiten Conectar

Connect to the home network

Use Method (A) or (B). Before you use Method B, have the encryption key to your router ready.


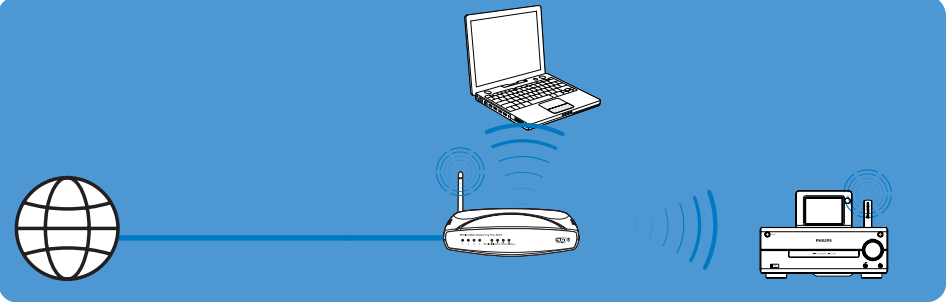


(A) One-touch wireless connection through Wireless Protected Setup (WPS)

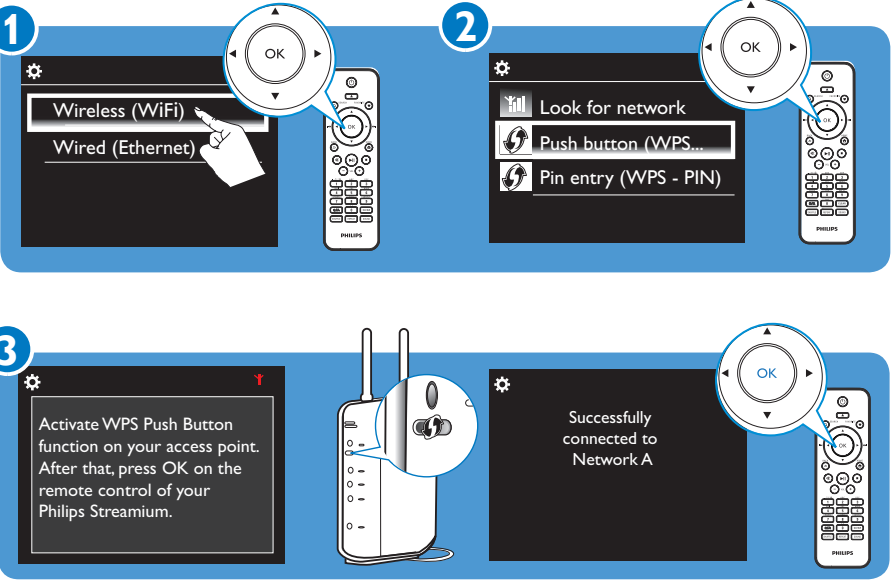


(B) Wireless connection: manually enter encryption key

- Note**
- Ensure that the router connects to the Internet directly and no dial-up is required on the computer.

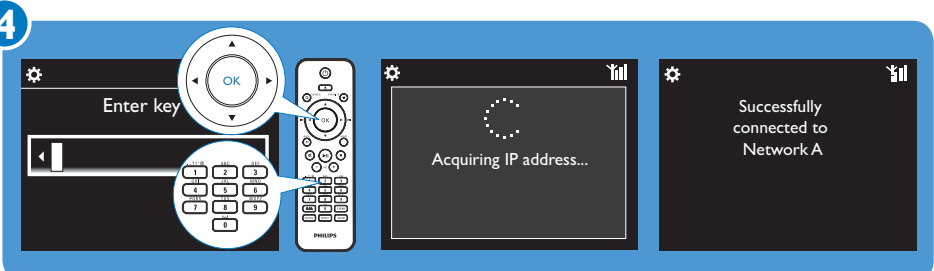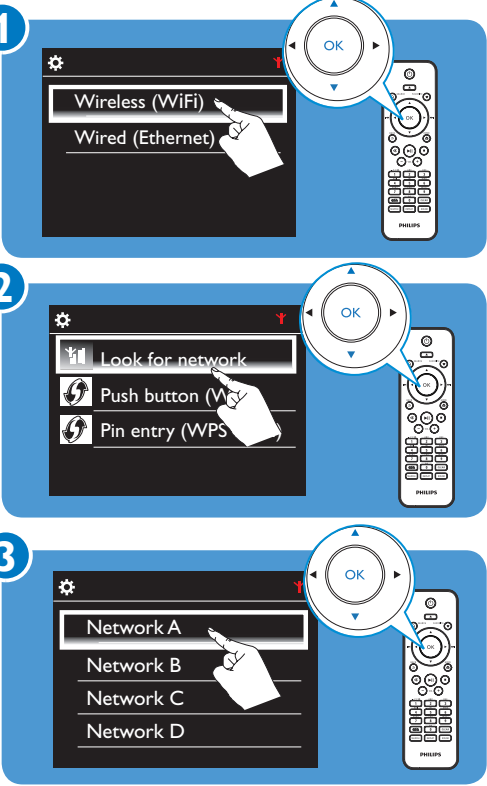


- As prompted, enter the encryption key to the network: on the remote control, press the corresponding alphanumeric key repeatedly until the desired digit appears.

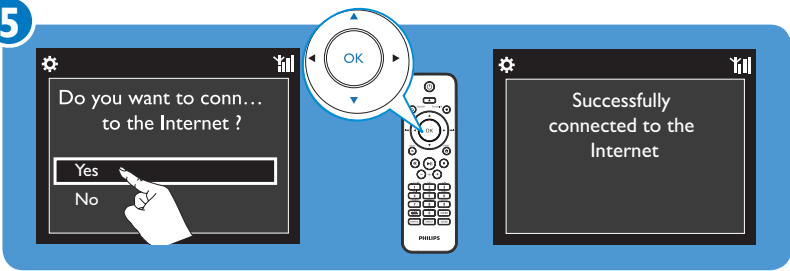


C Enjoy


Play Internet radio

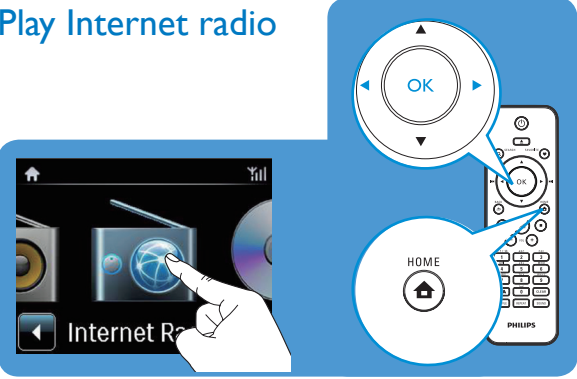

Play preset stations


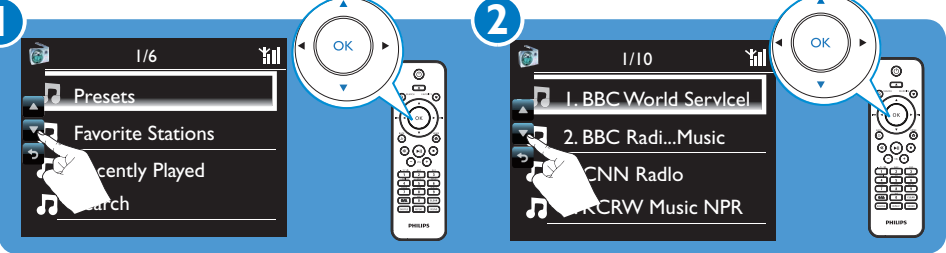


Store and play a favorite station

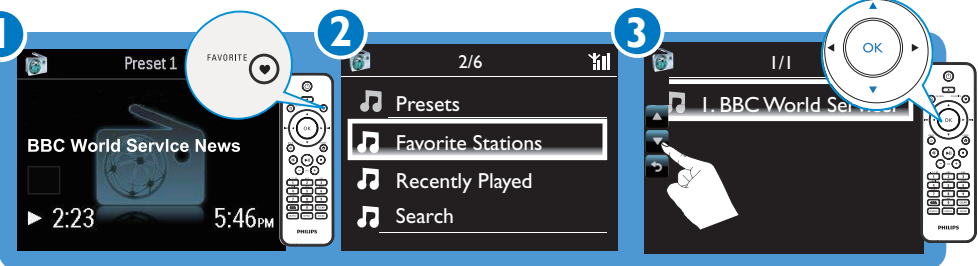

- To store a favorite station, press **FAVORITE** on the play screen.
- To play a favorite station, go to **[Favorite Stations]** to select the station.

Stream music from a computer

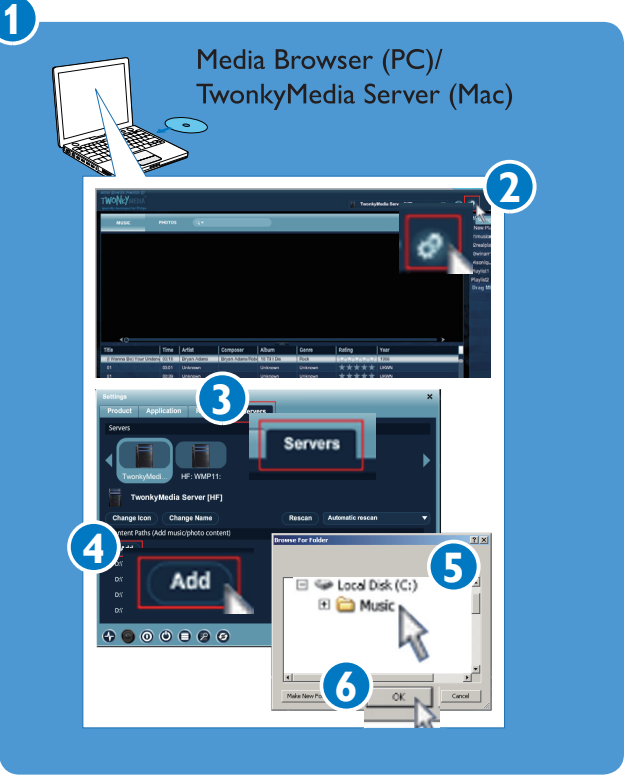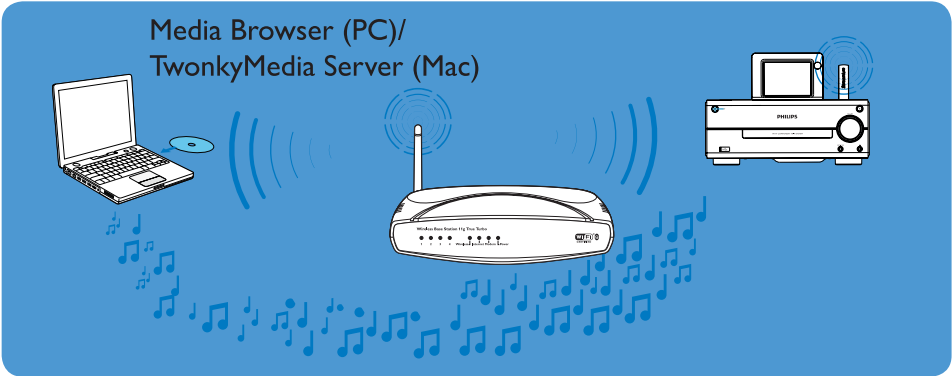

- On the computer, install the supplied software by following screen instructions: **Media Browser** (on a PC); **TwonkyMedia Server** (on a Mac).
- On the computer, add a music folder to **Media Browser** or **TwonkyMedia Server** by selecting [Settings] > [Servers] > [Add].

- *Tip**
- With the software installed, the computer can work as a UPnP music server.
 - Through the UPnP (Universal Plug and Play) protocols, music can be streamed from a UPnP music server to a UPnP client device (e.g. MCi730).