

Portable MP3-CD Player

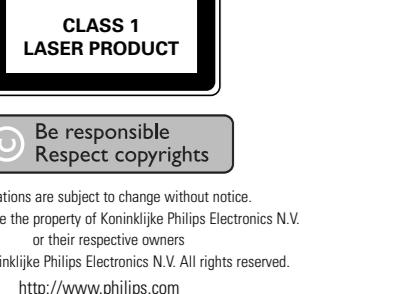
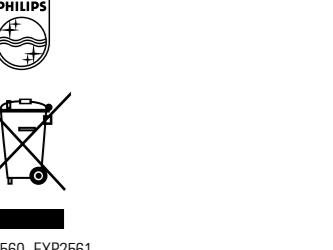
EXP2560
EXP2561
EXP2580
EXP2581

User manual

Manuel d'utilisation

Manual del usuario

Manual do usuário

**PHILIPS**Be responsible
Respect copyrights

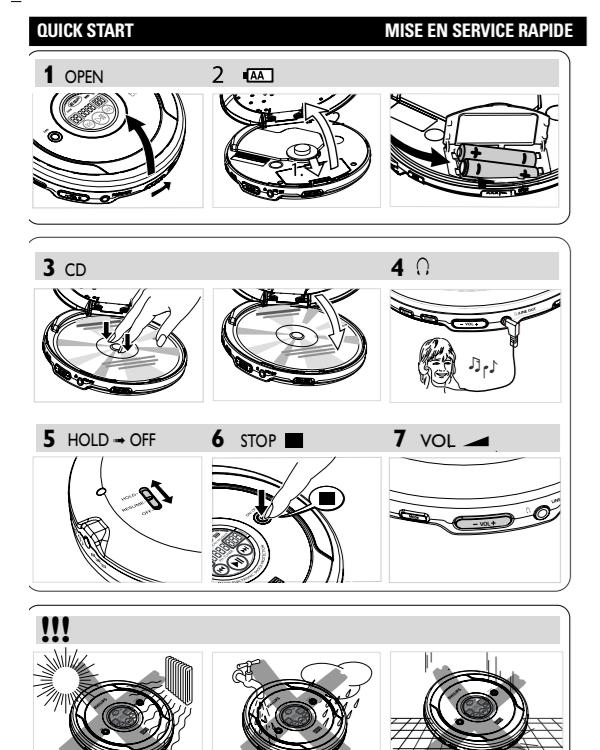
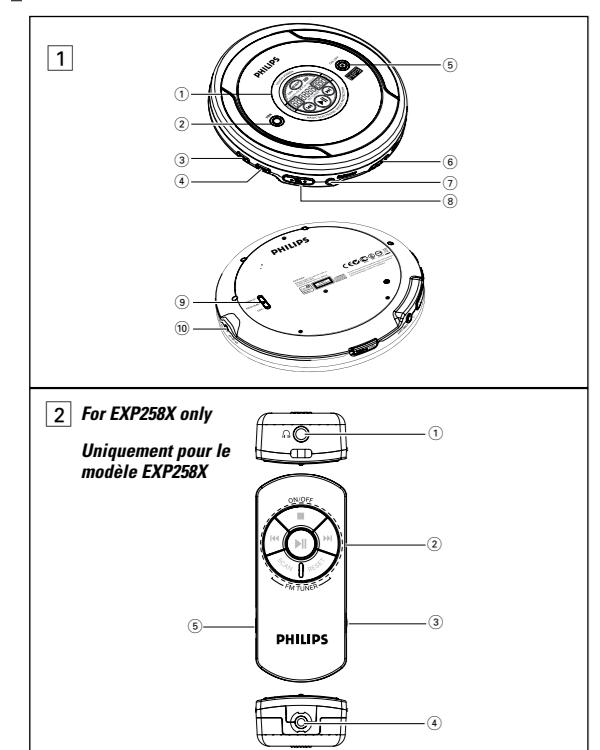
Specifications are subject to change without notice

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

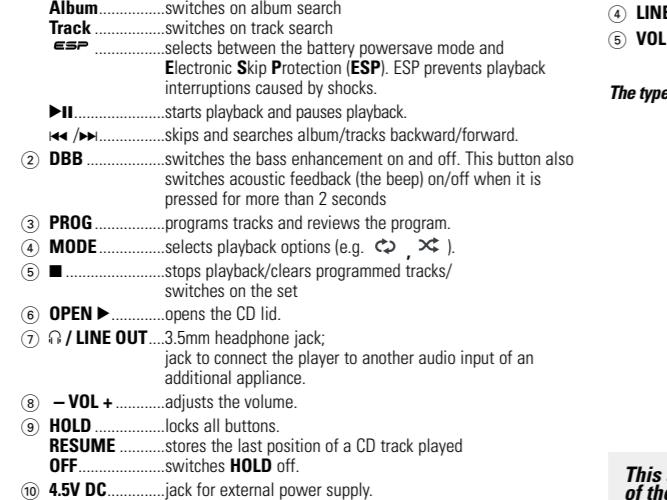
http://www.philips.com

Printed in China

**English****CONTROLS****Supplied Accessories:**

- 1 x headphones AY3806 (for EXP256X series) and AY3808s (EXP258X series)
- 1 x remote control AY5502 (for EXP250X only)
- 2 x remote control connection cable AY4151 (for EXP258X only)
- 1 x AC/DC adapter AY4162 (for EXP256 and EXP2581 only)

CONTROLS (see figure 1)

**PLAYING A CD****To stop playback**

- Press **■**
→ Audio CD. The display shows the total number of tracks and total playing time.
MP3/WMA CD: The total numbers of tracks and albums are displayed
- Press **■** again to switch off the player.
- To remove the CD, hold it by the edge and press the hub gently while lifting the CD.

Helpful Hints:

- If there is no more activity, the set will automatically switch off after 25 seconds.

VOLUME AND SOUND**Volume adjustment**

- Adjust the volume by using **-VOL +** (0-30).

Bass adjustment

- Press **DBB** to switch the bass enhancement on or off
→ DBB appears if the bass enhancement is activated.

CLASS 1 LASER PRODUCT

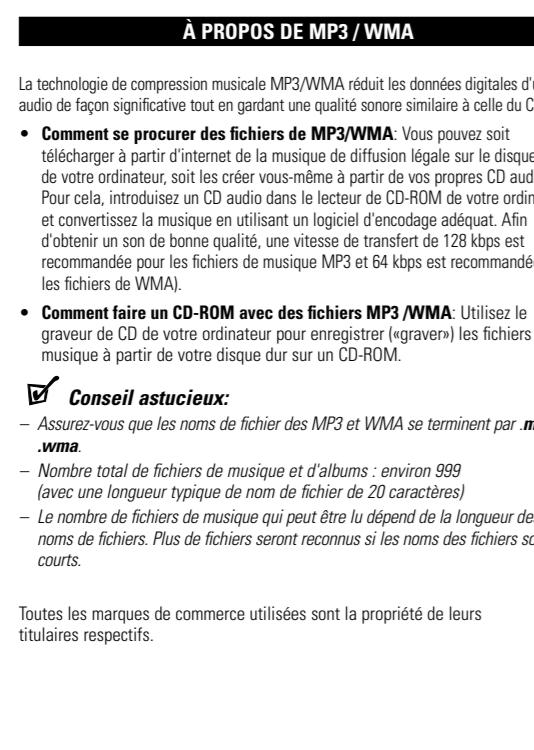
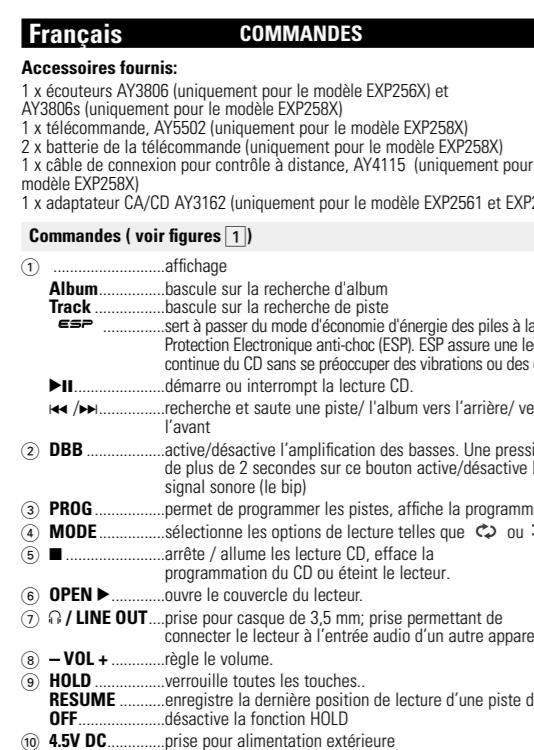
Specifications are subject to change without notice

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

http://www.philips.com

Printed in China

**REMOTE CONTROL AY5502 (for EXP258X only)****Using the remote control**

- ① **display** 3.5 mm headphone jack
- ② **■** stop CD playback, Power ON or OFF the CD
- ③ **↔ ↔** skip and search backward/ forward tracks
- ④ **FM** reset and scan
- ⑤ **RESET / SCAN**
- ⑥ **CD (FM TUNER OFF)** toggle between CD playback and FM
- ⑦ **LINE IN** connect to CD
- ⑧ **VOL +/ -** adjust the volume

The type plate is located on the bottom of the set.

REMOTE CONTROL AY5502 (for EXP258X only)**Using the remote control**

- ① **display** 3.5 mm headphone jack
- ② **■** stop CD playback, Power ON or OFF the CD
- ③ **↔ ↔** skip and search backward/ forward tracks
- ④ **FM** reset and scan
- ⑤ **RESET / SCAN**
- ⑥ **CD (FM TUNER OFF)** toggle between CD playback and FM
- ⑦ **LINE IN** connect to CD
- ⑧ **VOL +/ -** adjust the volume

The type plate is located on the bottom of the set.

REMOTE CONTROL AY5502 (for EXP258X only)**Using the remote control**

- ① **display** 3.5 mm headphone jack
- ② **■** stop CD playback, Power ON or OFF the CD
- ③ **↔ ↔** skip and search backward/ forward tracks
- ④ **FM** reset and scan
- ⑤ **RESET / SCAN**
- ⑥ **CD (FM TUNER OFF)** toggle between CD playback and FM
- ⑦ **LINE IN** connect to CD
- ⑧ **VOL +/ -** adjust the volume

The type plate is located on the bottom of the set.

POWER SUPPLY**Batteries (not included)**

- 1 Open the battery compartment.
- 2 Insert 2 AA batteries as shown into the battery compartment.
- 3 Close the battery compartment.

Helpful Hints:

- Old and new or different types of batteries should not be combined.
- Remove batteries if they are empty or if the player is not going to be used for a long time.

Battery indication

The approximate power level of your batteries is shown in the display.

- Battery full
- Battery two-thirds full
- Battery one-third full
- Battery dead or empty. When the batteries are dead or empty, the symbol **FL** flashes, and the beep tone sounds repeatedly.

Replacing the battery (remote control only) (for EXP258X only)

Replace your 3V lithium battery (type CR 2032) when sound quality deteriorates.

- Remove cover as shown. Insert battery with "+" side facing up. Slide the cover back on.

Helpful Hints:

- Always disconnect the adapter when you are not using it.

GENERAL INFORMATION**ENVIRONMENTAL INFORMATION**

- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into two main materials: cardboard (box) and polyethylene bags, protective foam sheeting.

• If you need to dispose of the unit, please contact your local authority or a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

COPYRIGHT INFORMATION

- The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyright and constitute a criminal offence. This equipment should not be used for such purposes.

• Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

POWER SUPPLY**Power adapter (supplied for EXP2561 and EXP2581 only)**

- Only use AY3162 adapter (4.5V/450mA DC, positive pole at center pin). Any other product may damage the player.
- 2 Insert 2 AA batteries as shown into the battery compartment.
- 3 On the remote control, press **■** to start playback.
- 4 Adjust the volume and sound on your remote control.
- 5 To stop playback, press **■**.
- 6 To switch off the CD player, press **■** again.

Helpful Hints:

- Old and new or different types of batteries should not be combined.
- Remove batteries if they are empty or if the player is not going to be used for a long time.

Battery indication

The approximate power level of your batteries is shown in the display.

- Battery full
- Battery two-thirds full
- Battery one-third full
- Battery dead or empty. When the batteries are dead or empty, the symbol **FL** is displayed, and the beep tone sounds repeatedly.

Replacing the battery (remote control only) (for EXP258X only)

Replace your 3V lithium battery (type CR 2032) when sound quality deteriorates.

- Remove cover as shown. Insert battery with "+" side facing up. Slide the cover back on.

Helpful Hints:

- Always disconnect the adapter when you are not using it.

GENERAL INFORMATION**ENVIRONMENTAL INFORMATION**

- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into two main materials: cardboard (box) and polyethylene bags, protective foam sheeting.

• If you need to dispose of the unit, please contact your local authority or a specialized company. Please observe the local regulations regarding the disposal of packing materials, dead batteries and old equipment.

COPYRIGHT INFORMATION

- The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyright and constitute a criminal offence. This equipment should not be used for such purposes.

• Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

GENERAL INFORMATION**CD player and CD handling**

- Do not touch the lens (A) of the CD player.
- Do not expose the unit to direct sunlight, rain, sand or excessive heat (or humidity), dust or any liquid.

HEADPHONE**HEADPHONE AY3806 (EXP250X series) and AY3808s (EXP258X series)**

- Connect the supplied headphones to the **LINE OUT** socket of the player.

Important:

- Getting MP3/WMA files, you can either download legal music files from the internet to your computer hard disk, or create or burn CD-R or CD-RW discs through appropriate encoder software (128kbps bit rate or higher) for MP3/WMA files and 64kbps bit rate or higher is recommended for WMA files).

• For DRM protected WMA files, use Windows Media Player 10 (or later) for CD burning/conversion. Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).

• Creating a MP3/WMA CD, burn the music files from your computer hard disc on a CD-R or CD-RW using your CD burner.

• Push the **OPEN** slider to open the player.

• Insert an audio CD or a MP3/WMA CD, printed side up, by pressing the CD onto the hub.

• Close the player by pressing the lid down.

• Press **■** to switch the player on and start playback.• **FL** is displayed as the CD player scans the contents of the disc.

• Total number of music files and albums: around 999 (with a typical file name length of 20 characters).

- The length of file names affects the number of tracks for playback.

With shorter file names, more files can be burned on a disc.

Traffic safety: Do not use headphones while driving a vehicle. It may create hazard and it is illegal in many countries.

GENERAL INFORMATION**GENERAL INFORMATION**

- Do not touch the lens (A) of the CD player.
- Do not expose the unit to direct sunlight, rain, sand or excessive heat (or humidity), dust or any liquid.

HEADPHONE**HEADPHONE AY3806 (EXP250X series) and AY3808s (EXP258X series)**

- Connect the supplied headphones to the **LINE OUT** socket of the player.

Important:

- Make sure that the file names of the MP3 and WMA files end with **.mp3** or **.wma** for this product.

- Total number of music files and albums: around 999 (with a typical file name length of 20 characters).

- The length of file names affects the number of tracks for playback.

With shorter file names, more files can be burned on a disc.

Traffic safety: Do not use headphones while driving a vehicle. It may create hazard and it is illegal in many countries.

GENERAL INFORMATION**GENERAL INFORMATION**

- Do not touch the lens (A) of the CD player.
- Do not expose the unit to direct sunlight, rain, sand or excessive heat (or humidity), dust or any liquid.

HEADPHONE**HEADPHONE AY3806 (EXP250X series) and AY3808s (EXP258X series)**

- Connect the supplied headphones to the **LINE OUT** socket of the player.

Important:

- Make sure that the file names of the MP3 and WMA files end with **.mp3** or **.wma** for this product.

- Total number of music files and albums: around 999 (with a typical file name length of 20 characters).

- The length of file names affects the number of tracks for playback.

With shorter file names, more files can be burned on a disc.

Traffic safety: Do not use headphones while driving a vehicle. It may create hazard and it is illegal in many countries.

GENERAL INFORMATION**GENERAL INFORMATION**

- Do not touch the lens (A) of the CD player.
- Do not expose the unit to direct sunlight, rain, sand or excessive heat (or humidity), dust or any liquid.

HEADPHONE**HEADPHONE AY3806 (EXP250X series) and**

