



Quick start guide

SE888/CD680/CD685

PHILIPS

What's in the box



Handset



Charger



Power adapter



Quick start guide

 
Guarantee

Caution

- Use only the supplied batteries and power adapter.

1 Get started

Connect the charger

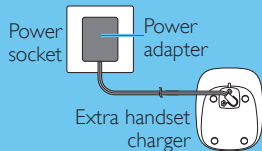


Connect each end of the power adapter to:

- the DC input jack at the bottom of the extra handset charger.
- the power socket on the wall.


Note Charge the batteries for 8 hours before first use.

 Configure your handset

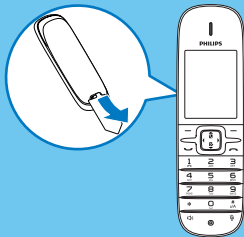

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
- 3 Select your country, then press **[OK]** to confirm.
- 4 Set the date and time.
 - If the time is in 12-hour format, press * key to select **[AM]** or **[PM]**.

 Charge your handset

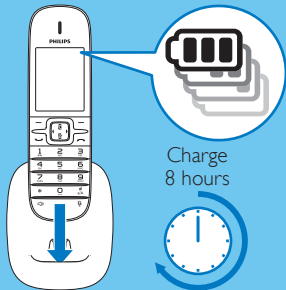

Place the handset on the charger to charge the handset. When the handset is placed correctly on the charger, you hear a docking sound.

↳ The handset starts charging.

Note Charge the batteries for 8 hours before first use.

Check the battery level



When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).



When the handset is on the base station/charger, the bars flash until charging completes.



The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.

2


Register the handsets

You can register additional handsets to the base station. The base station can register up to 5 handsets.

Auto registration

- 1 Place the unregistered handset on the base station.
 - ↳ The handset detects the base station and start to register automatically.
 - ↳ Registration is complete in less than 2 minutes. The base automatically assigns a handset number to the handset.

Manual registration

- 1 Select **[Menu]** > , then press **[OK]**.
- 2 Select **[Register]**, then press **[OK]** to confirm.
- 3 Press and hold **••)** on the base station for 5 seconds until you hear a confirmation beep.

- 4 Enter the system PIN. Press **[Clear]** to make corrections.

- 5 Press **[OK]** to confirm the PIN.

- ↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.
- The preset PIN is 0000. No change can be made on it.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

For further information, download the user manual of your phone at www.philips.com/support



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. © 2011 Koninklijke Philips Electronics N.V. All rights reserved.



CE 0168

QSG_SE888_EN_V1.0
WK11315