

Quick Start Guide



 
Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.



AV cables (Y/W/R)




 Quick Start Guide



Remote control with battery

Remove the plastic protective sheet

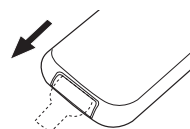

DIN cable



FM antenna



User Manual

PHILIPS


Step A **Connect**

Important!

This set can only be operated after the supplied DIN cable has been connected.

Tip

See the User Manual for other TV connection options.

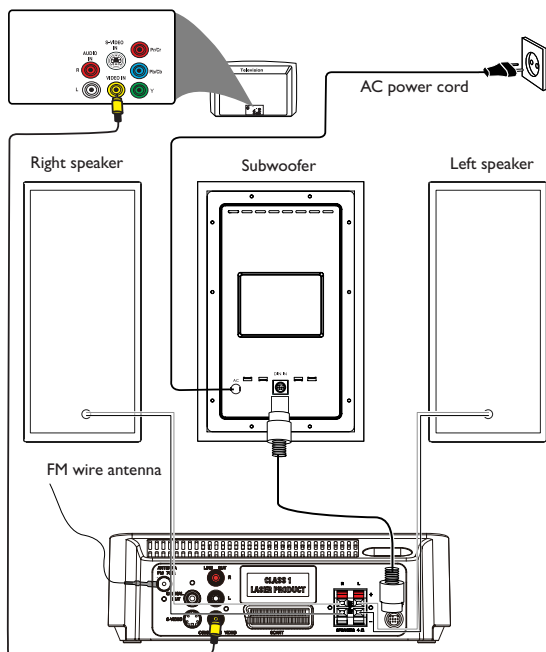


1 Connect the speaker cables.

2 Connect the supplied DIN cable to DVD player's DIN jack and the subwoofer's DIN jack.


3 Connect the FM antenna.

4 Connect the composite video cable (yellow, supplied) to a TV.

5 Connect the power cords of the system and TV.

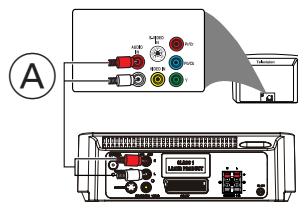

A To hear the sound of this DVD Player through your TV, use the audio cables (white/red, supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

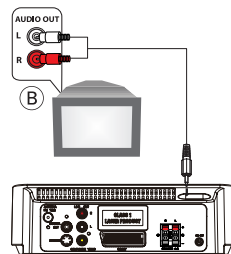


B To listen to TV through this system, use a cinch cable (not supplied) to connect **AUX IN** jack (3.5mm) to the corresponding **AUDIO OUT** jacks on the TV set.

Step B **Setup**

Setting up the TV

1 Press **SOURCE** (**DISC** on the remote control) to select disc source.


2 Turn on the TV and set it to the correct Video In channel.

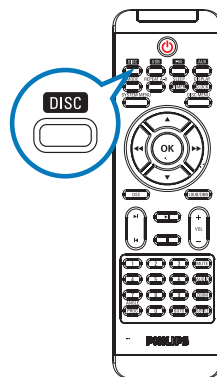






Step B Setup

Setting the clock

- 1 In standby mode, press and hold **DISPLAY/CLOCK**. The clock digits flash on the display panel.
- 2 Press **TUNING** **<</>** (or **<</>** on the remote control) to set the hours.
- 3 Press **</>** to set the minutes.
- 4 Press **PROG** to select between 12 hour and 24 hour display.
- 5 Press **DISPLAY/CLOCK** again to store the setting.

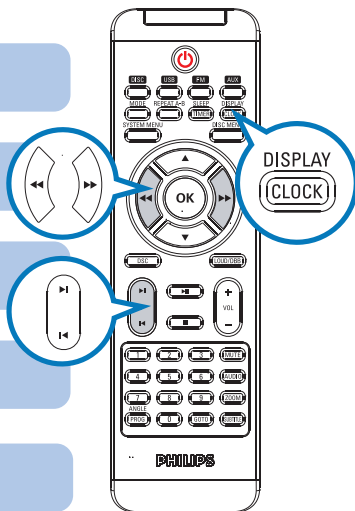

Setting system menu options

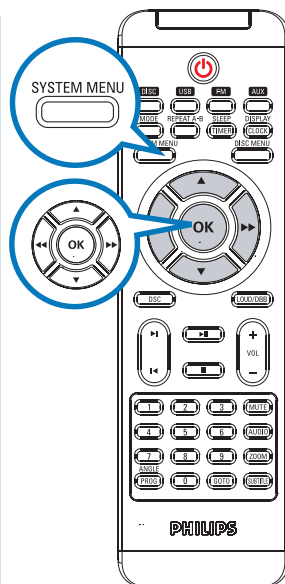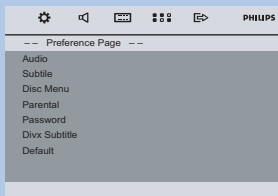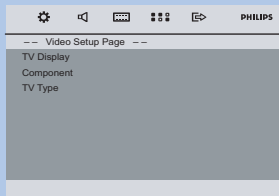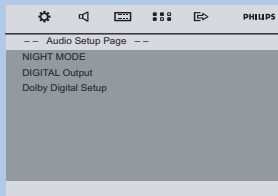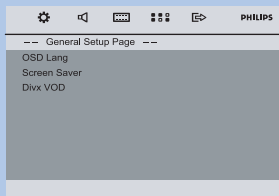

Tip

See chapters "Getting Started" and "System Menu Options" in the User Manual for detailed descriptions.



Playing a disc



- 1 Press **OPEN•CLOSE** to open the disc door and load in a disc, then press the same button again to close the disc door.
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **▶||**.

- 3 To stop playback, press **■**.

Programming and tuning to radio stations

- 1 Press **SOURCE** (**FM** on the remote control) to select tuner source.

- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.

- 3 Press **◀/▶** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket on the front panel of the main set.

- 2 Press **SOURCE** (or **USB** on the remote control) once or more to select **USB**.

- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

