

Quick start guide




What's in the Box?

You should find these items upon opening the box.

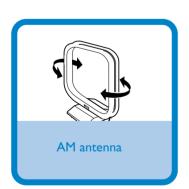

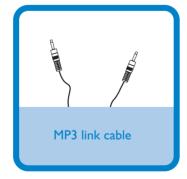

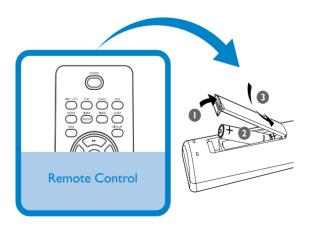

Step C


Enjoy










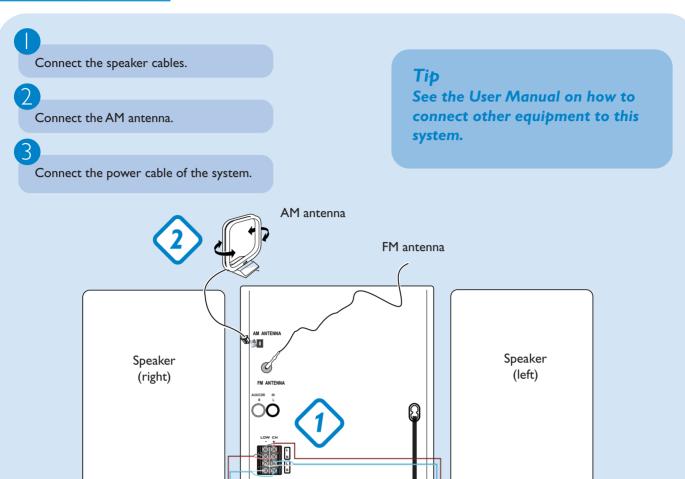

AC power cord

Step B Setup

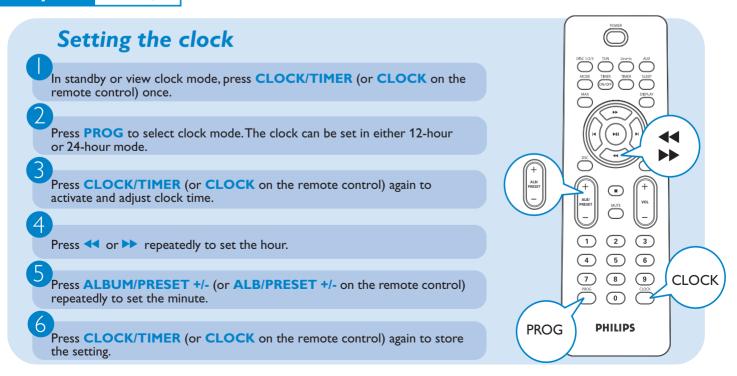

Playing a disc

Press **OPEN•CLOSE** to open the disc tray and load up to two discs on the individual disc trays. To load the third disc, press **DISC CHANGE**.

→ Make sure the label side of each loaded disc is facing up.

2

Press **OPEN•CLOSE** again to close the disc tray.

3

Use DISC 1/2/3 to select a disc for playback.



To stop playback, press ■.

Programming and tuning to radio stations




2

Press **PROG** for more than two seconds to program all available stations in order of waveband.

3

Press **ALBUM/PRESET +/-** (or **ALB/PRESET +/-** on the remote control) until the desired preset station is displayed.

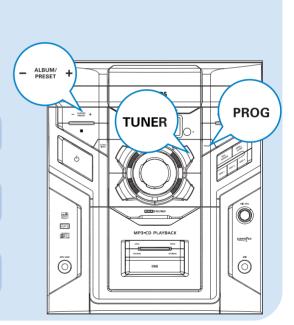

MP3-CD PLAYBACK

Ιiþ

Detailed playback features and additional functions are described in the accompany owner's manual.

