

Register your product and get support at
www.philips.com/welcome

PD7006



User manual

PHILIPS

Contents

1 Important	3
Important Safety Instructions	3
Hearing safety	4
Notice	5

2 Your portable DVD player	8
Introduction	8
What's in the box	8
Overview of the main unit	9

3 Get started	11
Charge the battery	11
Connect additional equipment	12

4 Use your spill-resistant player	14
Turn on	15
Select OSD language	15
Play discs	15
Play from USB	16
Play options	16

5 Use your spill-resistant player	17
--	----

6	Adjust settings	18
---	-----------------	----

7	Product information	19
---	---------------------	----

8	Troubleshooting	21
---	-----------------	----

1 Important

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Clean only with dry cloth.
- ⑥ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑦ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑧ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑨ Only use attachments/accessories specified by the manufacturer.
- ⑩ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑪ Unplug this apparatus during lightning storms or when unused for long periods of time.

- ⑫ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- ⑬ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑭ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.

- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.


Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Always bring your product to a professional to remove the built-in battery.

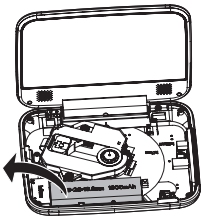



Be responsible
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.



Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

This apparatus includes this label:



2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up). You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):


- DVD-Video
- Video CD
- Audio CD
- MP3 CD
- DivX
- Discs with JPEG files

What's in the box

Check and identify the contents of your package:

- Portable DVD player
- AC power adaptor, ASUC12E-090080 (Philips)
- Car adaptor
- User manual
- AV cable

Overview of the main unit

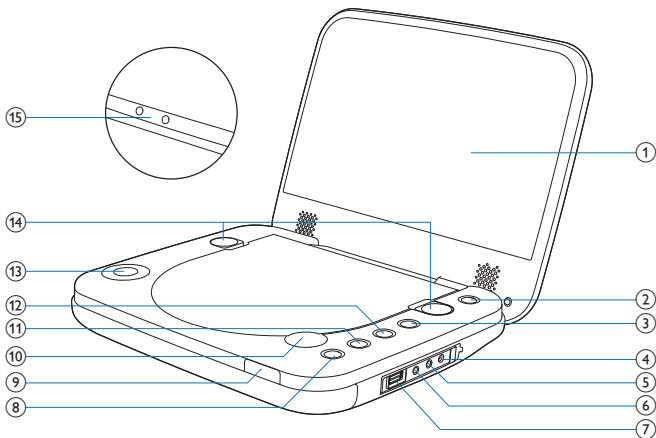

① Display panel







② ①
• Turns on/off DVD player.

③ **OPTIONS**
• Accesses the setup menu.
• Selects disc or USB source.
• Selects different modes before or during play.

④ **DC IN**
• Power supply socket.

⑤ **AV OUT**
• Audio/video output jack.

⑥ ①
• Headphone jack.

- ⑦  • Connects a USB storage device.
- ⑧  /OK • Confirms an entry or selection.
• Starts, pauses or resumes disc play.
- ⑨ **Charging indicator/Power indicator**
- ⑩  **OPEN** • Opens the disc compartment.
- ⑪  • Stops disc play.
- ⑫ **DVD MENU** • For DVD, accesses or exits disc menu.
- ⑬  • Navigates menus.
•  • Skips to the previous or next title, chapter, or track.
- ⑭ **Locks** • Locks the disc panel.
- ⑮ **VOLUME + / -** • Increases or decreases volume.

3 Get started



Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. _____

Serial No. _____


Charge the battery



Caution

- Risk of product damage. Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.
- The type plate is located on the bottom of the player.
- You can only charge the player when it is in power-off mode.
- The supplied adaptor is not waterproof and should be kept from getting wet.
- Never use the supplied adaptor in wet environments.

- 1 Find the **DC IN** jack of the player.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

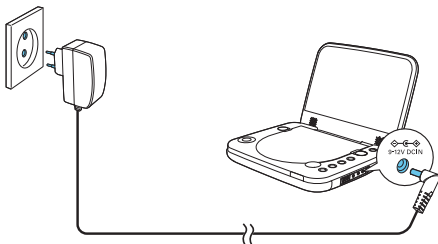

- ↳ The charging indicator turns on (red).
- ↳ When the battery is fully charged, the indicator turns off.

Connect additional equipment




Caution

- Turn off your player before connecting to any additional equipment.

You can connect the player to a TV or an amplifier to enjoy DVDs.

- 1 Connect the to the AV cable (not supplied) to the **AV OUT** jack of the player.
- 2 Match the color of the AV cables (not supplied) with the jacks on your TV:
 - the yellow cable is for the yellow video jack
 - the red/white cable is for the red/white audio jacks.

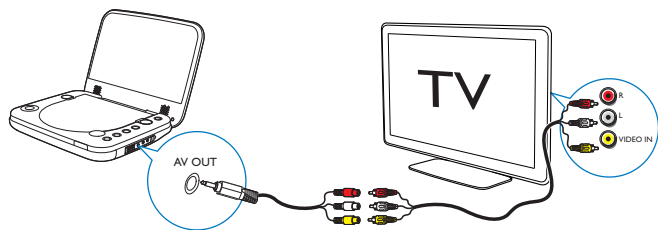

4 Use your spill-resistant player



Caution

- Never immerse the player in water or other liquids.
- Never use the player near a pool or in a shower.
- The supplied adaptor is not waterproof and should be kept from getting wet.
- Never use the supplied AC/DC power adaptor in wet environments.
- Use soft towel to dry your portable DVD player when it gets wet.
- Never remove the silicon rubber case on the outside of the player.




Note

- This spill-resistant player survives accidental spillages.
- The spill resistance meets IP4 standard.

To guarantee the maximum spill-resistant result, you need to

- 1 Close the disc compartment door.
- 2 Shut the locks.
- 3 Close the connector cover.

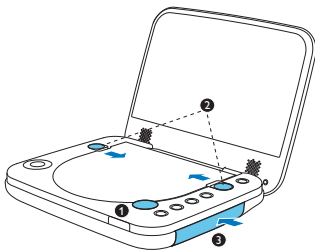

Turn on

Press **⏻** on the player to turn on.

↳ The indicator turns on (green).

To turn off the player, press and hold **⏻**.

↳ The indicator turns off.

Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **OPTIONS** .
↳ The options menu is displayed.
- 2 Select **[Setup] (setup) > [General] > [Language]**.
- 3 Press **▲ / ▼** to select an option.
- 4 Press **▶||/OK** to confirm.
- 5 Press **OPTIONS** to exit.


Play discs

- 1 Press **◀OPEN** on the player to open the disc compartment.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the disc compartment.
↳ Play starts automatically. If not, press **▶||/OK**.
- 4 Lock the disc compartment door with the left and right locks to prevent water leaking into the disc compartment.
 - If a menu is displayed, select an item, then press **▶||/OK** to start play.
 - To pause, press **▶||/OK**. Press again to resume play.
 - To stop, press **■** twice.
 - To select the previous/next item, press **◀** or **▶**.
 - To start search within video/audio, press and hold **◀** or **▶**

Play from USB

You can play DivX,VOB, MP3, or JPEG files that are stored on a USB storage device.

- 1 Press **OPTIONS** and select [**Source**] (source).
- 2 Select [**USB**] from the menu to choose USB mode.
- 3 Connect the USB device to the player:
↳ The content menu is displayed.

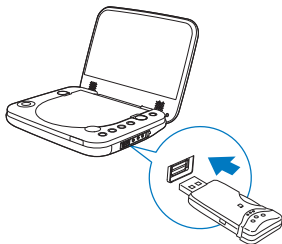

- 4 Select a file, then press ►||/OK.
↳ Play starts.
- 5 To stop play, press ■.

Play options

- 1 During play, press **OPTIONS** to select some play options.
- 2 Follow the on-screen instructions.

5 Use your spill-resistant player



Caution

- Never immerse the player in water or other liquids.
- Never use the player near a pool or in a shower.
- The supplied adaptor is not waterproof and should be kept from getting wet.
- Never use the supplied AC/DC power adaptor in wet environments.
- Use soft towel to dry your portable DVD player when it gets wet.
- Never remove the silicon rubber case from the player.




Note

- This spill-resistant player survives accidental spillages.
- The spill resistance meets IPX4 standard.

To guarantee the maximum spill-resistant result, you need to

- 1 Close the disc compartment door.
- 2 Shut the locks.
- 3 Close the connector cover.

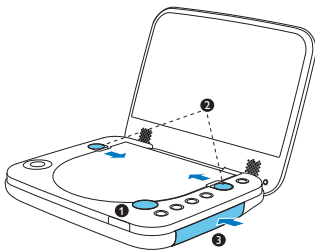

6 Adjust settings

To maximize your play experience, use the setup menu to fine tune your settings.

- 1 Press **OPTIONS** .
↳ The options menu is displayed.
- 2 Select **[Setup]**.
↳ The setup menu is displayed.
- 3 Use navigation keys to select an option and press **▶||/OK** to confirm.

[General]

[Language] Select on-screen display language

[PBC settings] Set playback control function on/off.

[Power save] Select power save mode.

[DivX (VOD)] Get DivX registration code.

[DivX subtitles] Select DivX subtitle language.

[Parental(DVD)] Select parental options.

[Set password] Change existing password (3308 by default).

[Factory settings] Restore factory settings.

[Video]

[LCD Display] Set screen display aspect ratio.

[TV standard] Set video output format to TV system.

[Brightness] Adjust screen brightness.

[Contrast] Adjust screen contrast.

[Audio]

[Dolby] Set Dolby output.

[Version] Check the version information.

- 4 Press **◀** to go back to the previous menu.
- 5 Press **OPTIONS** to exit.

7 Product information



Note

- Product information is subject to change without prior notice.

Dimensions	195 x 154 x 37 mm
Weight	0.675 kg
Power supply	Input: 100-240V~ 50/60Hz Output: DC 9V \equiv 0.8A
Power consumption	7.2 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video output	
Format	PAL & NTSC
Output level	1Vp - p \pm 20%
Load impedance	75 Ω
Audio line out	
Audio out (analog audio)	Output level: 2V \pm 10%
Load impedance	10 K Ω
Audio distortion + noise	\leq -80 (1KHz)
Frequency response	20Hz-20KHz \pm 1dB
Signal/noise ratio	\geq 80 dB
Channel separation	\geq 80 dB
Dynamic range	\geq 80 dB

8 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/welcome.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

No sound

- Ensure that the AV cable is connected correctly.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

PD7006_51_UM_V1.0

