

 
Philips Portable DVD Player PET941D

# Quick start guide

## 1 Charge your battery

This portable DVD player is designed with a built-in lithium battery to supply power to the player when you are on travel.

- 1 Slide the **POWER** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).




- 2 Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.
  - The **CHR** indicator turns red.
  - When the battery is fully charged, the indicator turns off.
- 3 Disconnect the power adaptor cord (or the car adaptor) when the CHR indicator turns off.

### Note:

 – You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) directly wherever possible.

## 2 Enjoy (Disc operation)

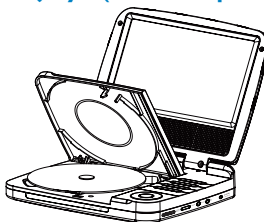

- 1 Open the lid of the player.
- 2 Slide the **POWER** switch to **ON** to switch on the DVD player.
  - The **⊙** indicator turns on.
- 3 Slide **OPEN▶** on the player.
- 4 Remove the protective card (if any) and load a disc with the label side facing up.
- 5 Close the disc door.
  - Playback will start automatically. If not, press **▶||**.
- 6 To stop playback, press **■**.

### Note:

 
During play, you can:

- Press **OPTION** to select some play options: audio, subtitle, repeat, and time display.
- Press **◻** directly to adjust brightness of screen backlight to match lighting conditions.

## 2 Enjoy (AV OUT)

**Connecting additional equipment (TV for example)**

- 1 Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- 2 Switch on the TV and set to the correct video-in channel.
  - You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

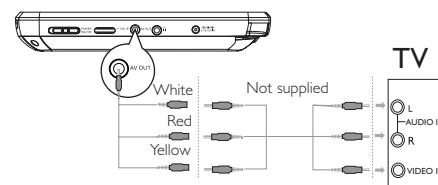

PET941D\_58\_QSG\_V1.1

WK0917

▲ OPEN HERE