

Register your product and get support at
www.philips.com/welcome

PhotoFrame

SPF4308

SPF4328

SPF4508

SPF4528



EN

User manual

PHILIPS

Contents

1 Important	3
Safety	3
Safety precautions and maintenance	3
Notice	3
Respect copyrights	3
Recycling	3
North Europe Information (Nordic Countries)	4
Class II statement	4

2 Your PhotoFrame	5
Introduction	5
What's in the box	5
Overview of your PhotoFrame	6

3 Get started	7
Install the stand	7
Connect power	7
Turn on the PhotoFrame	8
Turn off the PhotoFrame	8
Transfer your media	8
Transfer photos with a storage device	8
Transfer photos with a computer	10
Quick menu	10
Know these keypad icons	10

4 Play	11
Display photos	11
Manage slideshow and photos	11
Zoom and crop a photo	12
Play videos (SPF4508/SPF4528)	13
Manage videos (SPF4508/SPF4528)	14
Play background music (SPF4508/SPF4528)	14

5 Browse	16
Browse and manage albums and media	16
Add media to the favorite album	17
Create an album	17
Copy media	17
Move media	17
Delete media	18

Group media	18
Rename an album	18
Select multiple media to manage	18
Rotate photos	18

6 Clock	19
Display the clock	19
Clock menu	19
Select a clock/calendar style	19

7 Message	20
Create a message	20
Enter the name of a message	21
Edit a message	21
View a created message	23

8 Settings	25
Select an on-screen language	25
Adjust brightness	25
Set time/date	25
Set time/date format	26
Set SmartPower timer	26
Hibernate the PhotoFrame	27
Set auto orientation	28
Turn button sound on/off	28
Protect/Unprotect content on a storage device	29
Set demo on/off	30
Slideshow setting	30
Select slideshow interval	30
Select slideshow sequence	31
Select view mode for slideshow	31
Select file type for slideshow (SPF4508/SPF4528)	31
Select transition effect	31
Select background color	32
Power meter	33
View information of the PhotoFrame	33
Reset all settings to factory default	34

9 Upgrade the PhotoFrame	35
---------------------------------	-----------

10 Product information	36
Video features (SPF4508/SPF4528)	36

11 Frequently asked questions	38
-------------------------------	----

12 Glossary	39
-------------	----

Need help?

Please visit www.philips.com/welcome where you can access a full set of supporting materials such as user manual, the latest software updates and answers to frequently asked questions.

1 Important

Safety

Safety precautions and maintenance

- Never touch, push, rub or strike the screen with hard objects as this may damage the screen permanently.
- When the product is not used for long periods, unplug it.
- Before you clean the screen, turn off and unplug the power cord. Only clean the screen with a soft, water-damp cloth. Never use substances such as alcohol, chemicals or household cleaners to clean the product.
- Never place the product near naked flames or other heat sources, including direct sunlight.
- Never expose the product to rain or water. Never place liquid containers, such as vases, near the product.
- Never drop the product. When you drop the product, it will be damaged.
- Keep the stand away from cables.
- Ensure that you install and use services or software only from trustworthy sources free of virus or harmful software.
- This product is designed for indoor use only.
- Only use the supplied power adaptor for the product.

Notice



This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

Respect copyrights



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

North Europe Information (Nordic Countries)

WARNING:

FÖRSÄKRA DIG OM ATT HUVUDBRYTARE OCH UTTAG ÄR LÄTÅTKOMLIGA, NÄR DU STÄLLER DIN UTRUSTNING PÅPLATS.

Placering/Ventilation

ADVARSEL:

SØRG VED PLACERINGEN FOR, AT NETLEDNINGENS STIK OG STIKKONTAKT ER NEMT TILGÆNGELIGE.

Paikka/Ilmankierto

VAROITUS:

SIIJOITA LAITE SITEN, ETTÄ VERKKOJOHTO VOIDAAN TARVITTAESSA HELPOSTI IRROTTAA PISTORASIESTA.

Plassering/Ventilasjon

ADVARSEL:

NÅR DETTE UTSTYRET PLASSERES, MÅ DU PASSE PÅ AT KONTAKTENE FOR STØMTILFØRSEL ER LETTE Å NÅ.

Class II statement

Class II equipment symbol:



This symbol indicates that this product has a double insulation system.

2 Your PhotoFrame

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

 
With Philips Digital PhotoFrame **SPF4308/SPF4328**, you can use the PhotoFrame to:

- Display JPEG photos
- Create gift messages

With Philips Digital PhotoFrame **SPF4508/SPF4528**, you can use the PhotoFrame to:

- Display JPEG photos
- Play video clips from camera
- Play background music for photo slideshow
- Create gift messages

What's in the box



- Philips Digital PhotoFrame



- Stand



- AC-DC power adaptor

 


- CD-ROM, with digital user manual



- Quick start guide

Overview of your PhotoFrame

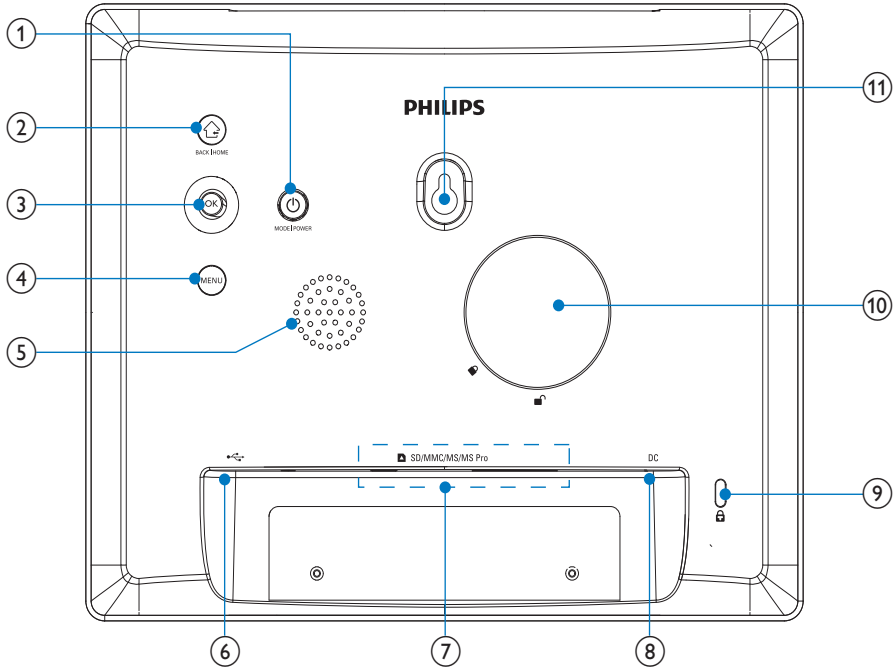

- ① **Power**
 - Press to turn on the PhotoFrame
 - Press and hold to turn off the PhotoFrame
 - Press to switch modes: slideshow/clock/calendar
- ② **Home**
 - Press to return to the previous step
 - Press and hold to go to the home screen
- ③ **OK (Joystick)**
 - Press to confirm a selection
 - Press to pause or resume play
 - Move up/down/left/right to select the upper/lower/right/left option
- ④ **MENU**
 - Press to enter/exit the menu
- ⑤ **Speaker**
- ⑥ **USB**
 - Slot for a USB cable to PC
- ⑦ **SD/MMC/MS/MS Pro**
 - Slot for an SD/MMC/MS/MS Pro card
- ⑧ **DC**
 - Socket for the AC-DC power adaptor
- ⑨ **Kensington lock**
- ⑩ **Stand hole**
- ⑪ **Wall mounting hole**

3 Get started

Caution


- Use the controls only as stated in this user manual.

 
Always follow the instructions in this chapter in sequence.


If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:
Model No. _____
Serial No. _____


Install the stand

To place the PhotoFrame on a flat surface, attach the supplied stand to the back of the PhotoFrame.

- 1 Insert the stand into the PhotoFrame and position the indication on the stand to the  position.

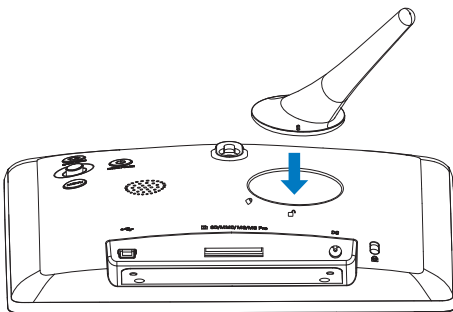

 - 2 Turn the stand clockwise 45 degrees to the  position and lock it to the PhotoFrame firmly.

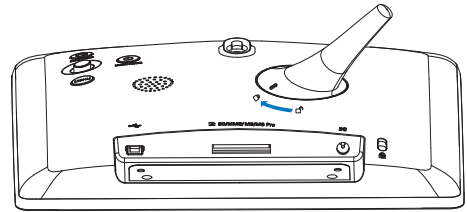


Connect power


Note

- When you position the PhotoFrame, ensure that the power plug and outlet are easily accessible.

 - 1 Connect the power cord to the DC socket of the PhotoFrame.

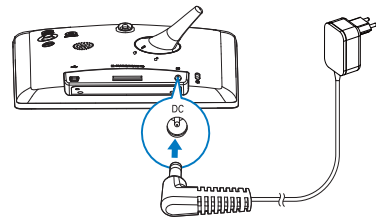

 - 2 Connect the power cord to a power supply socket.

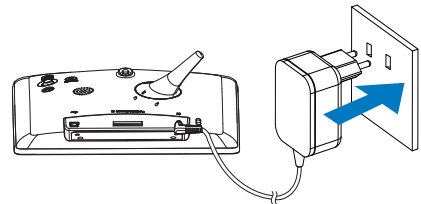

↳ The PhotoFrame turns on automatically.

Turn on the PhotoFrame

Note

- When you connect the PhotoFrame to a power supply, the PhotoFrame turns on automatically.

1 When the PhotoFrame is turned off and connected to the power supply, press and hold ϕ to turn on the PhotoFrame.

For the first time you turn on the PhotoFrame:

- The screen prompts you to select a language.



- Select a language, and then press **OK**.



- The screen prompts you to set time and date.

- Move the joystick to set time and date, and then press **OK**.

Tip

- If the PhotoFrame is disconnected from the power supply for a long time, you need set time and date again after you turn on the PhotoFrame.

Turn off the PhotoFrame

Note

- You can only turn off the PhotoFrame after all copy and save actions are complete.
- To turn off the PhotoFrame, press and hold ϕ for about 2 seconds.

Transfer your media

Transfer photos with a storage device

 
Caution

- Do not disconnect the storage device from the PhotoFrame during media transfer.

The PhotoFrame supports most types of the following storage device:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Multimedia Card (MMC)
- Memory Stick (MS)
- Memory Stick Pro (MS Pro)

- 1 Insert a storage device into the PhotoFrame.
↳ An option menu is displayed.

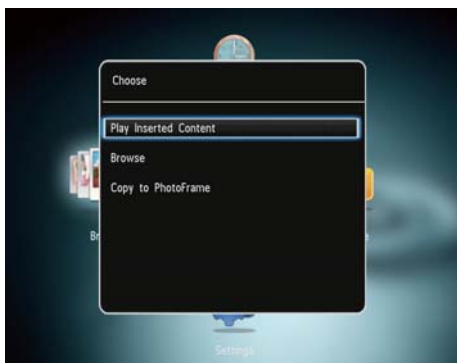


[Play Photos] (SPF4308/SPF4328) / **[Play Inserted Content]** (SPF4508/SPF4528): Select it to play media on the storage device

[Browse]: Select it to browse media on the storage device

[Copy to PhotoFrame]: Select it to start transfer operation

 - 2 Select **[Copy to PhotoFrame]**, and then press **OK**.
↳ A confirmation message is displayed.

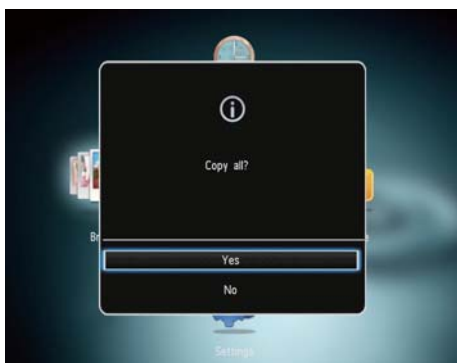

To select all media:

- 1 Select **[Yes]**, and then press **OK**.
- 2 Select an album on the PhotoFrame to store the media, and then press **OK**.

To select a specific medium:

- 1 Select **[No]**, and then press **OK**.
- 2 Select a folder.
- 3 Move the joystick, and then press **OK** to select/deselect a medium.



- 4 Press **MENU** to continue the transfer operation.

- 5 Select an album on the PhotoFrame to store the media, and then press **OK**.

 
- To remove a storage device, pull it out of the PhotoFrame.

Transfer photos with a computer

! Caution

- Do not disconnect the PhotoFrame from the computer during media transfer.

- 1 Connect a USB cable to the PhotoFrame and to the computer:

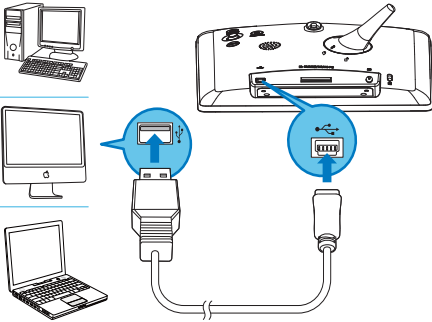

↳ You can drag and drop the media from the computer to an album on the PhotoFrame.

- 2 When the transfer is complete, disconnect the USB cable from the computer and the PhotoFrame.

* Tip

- You can transfer media from the PhotoFrame to a computer.
- The transfer speed depends on the operating system and the software configuration of the computer.






 

 
Quick menu

- 1 In the home screen, press **MENU**.
↳ The quick menu is displayed.



- 2 Select an option, and then press **OK**.
 - 3 Follow the on screen instructions to adjust the brightness or view the status of the PhotoFrame.
- To exit the quick menu, press **MENU** repeatedly.

Know these keypad icons

	Input in English
	Input in supported European languages
	Input in Simplified Chinese
	Input in Russian
	Switch to select symbols, punctuations, alphabet or numbers
	Switch between upper and lower case
	Enter a blank space
	Enter a line break

4 Play

Display photos

Note

- You can display JPEG photos in slideshow mode on the PhotoFrame.

- If there is no message created before, at power up select **[Start PhotoFrame]** and then press **OK**.
- Select **[Play]**, and then press **OK**.



- ↳ (SPF4308/SPF4328) Photos are displayed in slideshow mode.
- ↳ (SPF4508/SPF4528) Photos/video clips are displayed in slideshow mode. If there are music files available, photos are played with background music by default.

In slideshow mode:

- To select the previous/next photo, move the joystick to the left/right.
- To pause the slideshow, press **OK**.
- To resume the slideshow, press **OK** again.

Manage slideshow and photos

You can take the following steps to manage the photo in slideshow mode or the slideshow settings:

- Press **MENU**.
 - ↳ An option menu is displayed.



- Select an option, and then press **OK**.
 - [View Mode]**: Select the view mode
 - [Add to Favorites]**: Add the photo to the **[Favorites]** album on the PhotoFrame
 - [Slideshow Settings]**
 - [Interval]**: Set the interval in slideshow
 - [Shuffle]**: Play media randomly or not
 - [Color Tone]**: Select the color for the photo
 - [File Type]** (SPF4508/SPF4528): Select the type of file shown in slideshow
 - [Transition Effect]**: Select the transition effect
 - [Background Color]**: Select the background color
 - [Rotate]**: Select an orientation to rotate the photo
 - [Copy]**: Copy the photo to another album
 - [Delete]**: Delete the photo
 - [Select Background Music]** (SPF4508/SPF4528): Select music or turn on/off the background music for photo slideshow
 - [Brightness]**: Move the joystick up/down to adjust the brightness of display
 - [Zoom]**: Zoom and crop a photo

Zoom and crop a photo

When the view mode is selected as single, you can zoom in a photo, crop it, and save it as a new photo as follows:

- 1 In slideshow mode, press **MENU**.
↳ An option menu is displayed.
- 2 Move the joystick downwards repeatedly to select [**Zoom**].

 


- 3 Press **OK** repeatedly to zoom in the photo (or exit the zoom mode).
- 4 Move the joystick to pan the photo.
- 5 Press **MENU**.
- 6 Select [**Crop and Save**], and then press **OK**.



↳ A confirmation message is displayed.

- 7 Select [**Yes**], and then press **OK**.

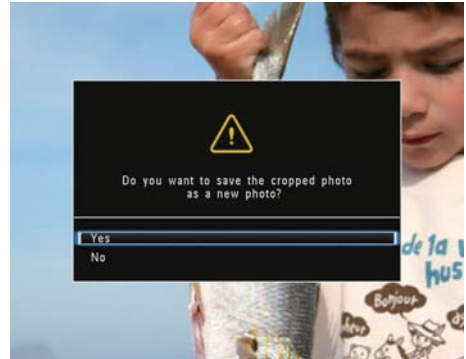

- To cancel the operation, select [**No**] and then press **OK**.
- 8 Select an album or create an album to save the new photo, and then press **OK**.
↳ After the photo is saved, the PhotoFrame goes back to the slideshow mode.

To create an album to save the photo:

- 1 Select [**Create New Album**], and then press **OK** to confirm.
↳ A keypad is displayed.

 



- 2 Move the joystick downwards twice to enter the keypad.
- 3 To enter the name, select an alphabet/number and then press **OK**.

- To switch between uppercase and lowercase, select **aA** on the displayed keypad and then press **OK**.
- When the name is complete, select **✓** and then press **OK**.
 - Press **OK** to start the saving process.

Play videos (SPF4508/SPF4528)

Note

- SPF4508/SPF4528** plays most video clips of a digital still camera in M-JPEG (*.avi/*.mov), MPEG-1 (*.mpg/*.dat/*.avi/*.mov), and MPEG-4 (*.avi/*.mov/*.mp4) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing, ensure that these video clips are compatible with your PhotoFrame.
- Some video clips with audio in a format which is not compatible well with your PhotoFrame, may be played without audio output and with the icon  shown on the screen.
- In album/thumbnail mode, a video clip is displayed with the icon  on the top.

- In the home screen, select **[Browse]** and then press **OK**.



↳ Albums are displayed in wave mode.



- Press **⏏** to access album mode.
- Select a folder, and move the joystick right to access the folder.
- Select a video.
- Press **OK** to start video play.

During video play:

- To adjust volume, move the joystick up/down.
- To pause/resume play, press **OK**.
- To play the previous/next video, move the joystick right/left.
- To start fast-forwarding, hold the joystick right.
- Hold the joystick right once for twice fast-forwarding.
- Hold the joystick right twice for four times fast-forwarding.
- During fast-forwarding, press **OK** to resume the normal speed.

Manage videos (SPF4508/SPF4528)

You can take the following steps to manage the videos that you play:

- 1 During play, press **MENU**.
↳ An option menu is displayed.



- 2 Select an option, and then press **OK**.
 - **[Add to Favorites]**: Add the video to the **[Favorites]** album on the PhotoFrame
 - **[Copy]**: Copy the video to another album
 - **[Delete]**: Delete the video
 - **[Repeat]**
 - **[Play in Loop]**: Play in a loop
 - **[Play Once]**: Play once
 - **[Viewing Format]**
 - **[Full Screen]**: Play in full screen format
 - **[Original]**: Play in original format

Play background music (SPF4508/SPF4528)

Note

- Only MP3 or WAV music files can be played on the PhotoFrame.

- 1 During photo display, press **MENU**.
↳ An option menu is displayed.
- 2 Move the joystick downwards to select **[Select Background Music]**, and then press **OK**.
- 3 Select **[Select Music]**, and then press **OK**.



- 4 Select a folder.



- 5 Select music.
 - To select all music in the folder, continue with **Step-6**.

 
- To select a piece of music in the folder, move the joystick right and then select the music.



6 Press **OK**.


If you have already selected music:

- In [**Select Background Music**] menu, select [**Music On**] and then press **OK**.

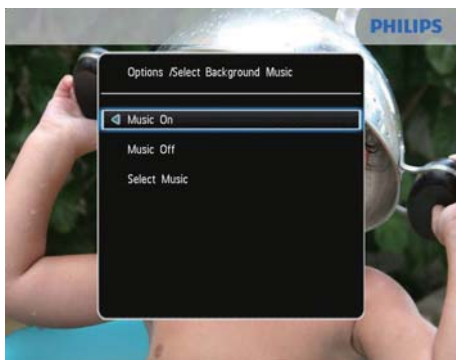

- Selected music files are played.

 - To stop music play, select [**Music Off**] and then press **OK**.

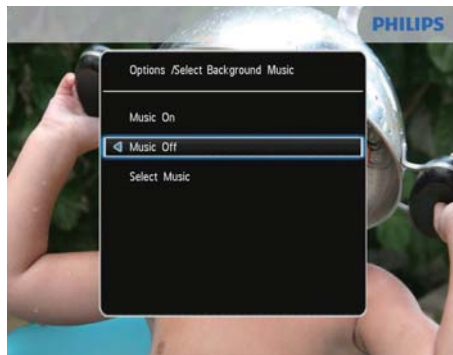

- To adjust the volume of music during music play, move the joystick up/down.

Music menu:

- Select a music folder, and then press **MENU**.
↳ The music menu is displayed.
- Select an option to continue.
 - Copy music to another folder
 - Delete music
 - Adjust the volume of music

5 Browse

Browse and manage albums and media

You can browse and manage albums and media in wave mode or album mode.

- **Wave mode:**



- **Album mode:**



Browse albums:

- 1 In the home screen, select **[Browse]** and then press **OK**.
↳ Albums are displayed in wave mode.
- **To access album mode**, press **⏏**.
 - **To return to wave mode**, press **⏏**.
- In wave/album mode,

- Press **OK** once: A photo is displayed in pause mode.
- Press **OK** twice: Slideshow is started.

Manage albums and media:

 
- 1 Select an album/device, press **MENU**.
↳ An option menu is displayed.
- 2 Select an option, and then press **OK** to continue.

Device menu:



- **[Add to Favorites]:** Add media on the device to the **[Favorites]** album
- **[Create New Album]:** Create an album
- **[Copy]:** Copy media on the device to another album
- **[Move]:** Move media on the device to another album
- **[Delete]:** Delete media on the device
- **[Group by]:** Group media on the device by name or date

Album menu:

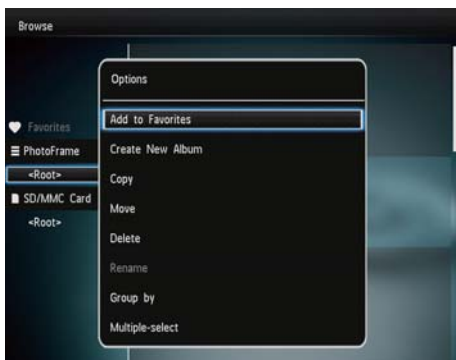

- **[Add to Favorites]:** Add media in the album to the **[Favorites]** album
- **[Copy]:** Copy media in the album to another album
- **[Move]:** Move media in the album to another album
- **[Delete]:** Delete media in the album
- **[Rename]:** Rename the album
- **[Group by]:** Group media in the album by name or date
- **[Multiple-select]:** Select multiple photos to manage

Thumbnail menu:

- **[Add to Favorites]:** Add media in the album to the **[Favorites]** album
- **[Copy]:** Copy media in the album to another album
- **[Move]:** Move media in the album to another album
- **[Delete]:** Delete media in the album
- **[Rotate]:** Rotate the photo in the album
- **[Color Tone]:** Select a color for the photo
- **[Group by]:** Group media in the album by name or date
- **[Multiple-select]:** Select multiple photos to manage

When you select the **[Favorites]** album, a different menu is displayed.

- **[Remove from Favorites]:** Remove media from the **[Favorites]** album
- **[Copy]:** Copy media in the album to another album
- **[Delete]:** Delete media in the album
- **[Group by]:** Group media in the album by name or date

Add media to the favorite album

To add media in the album to the **[Favorites]** album:

- 1 Select **[Add to Favorites]**, and then press **OK**.

Create an album

- 1 Select **[Create New Album]**, and then press **OK**.
- 2 To enter the name, select an alphabet/number and then press **OK**.
 - To switch between uppercase and lowercase, select **aA** on the displayed keypad and then press **OK**.
- 3 When the name is complete, select **✓** and then press **OK**.
- 4 Press **OK** to start the saving process.

Copy media

- 1 Select **[Copy]**, and then press **OK**.
- 2 Select a destination album, and then press **OK** to start copy.

Move media

- 1 Select **[Move]**, and then press **OK**.
- 2 Select a destination album, and then press **OK** to start move.

Delete media

- 1 Select **[Delete]**, and then press **OK**.
↳ A confirmation message is displayed.
- 2 Select **[Yes]**, and then press **OK** to start deletion.
 - To cancel the operation, hold **⏏**.

Group media

You can group media in an album by date or name.

- 1 Select **[Group by]**, and then press **OK**.
- 2 Select a grouping method.
 - To group by name, select **[Name]** and then press **OK**.
 - To group by date, select **[Date]** and then press **OK**.

Rename an album

- 1 Select **[Rename]**, and then press **OK** to confirm.
↳ A keypad is displayed.
- 2 Move the joystick downwards twice to enter the keypad.
- 3 To enter the name, select an alphabet/number and then press **OK**.
 - To switch between uppercase and lowercase, select **aA** on the displayed keypad and then press **OK**.
- 4 When the name is complete, select **✓** and then press **OK**.

Select multiple media to manage

- 1 Select **[Multiple-select]**, and then press **OK**.
- 2 Select media.
 - To select all media in the album, press **OK**.
 - To select some of the media: Move the joystick and press **OK** to select a medium. Then repeat this step to select others.
 - To de-select a medium, select it and then press **OK** again.
- 3 After selection is complete, press **MENU** to continue.
↳ An option menu is displayed.
- 4 Select an option to continue.
 - **[Add to Favorites]**: Add the selected media to the **[Favorites]** album
 - **[Copy]**: Copy the selected media to another album
 - **[Move]**: Move the selected media to another album
 - **[Delete]**: Delete the selected media
 - **[Rotate]**: Rotate the selected media
 - **[Play Slideshow]**: Play the selected media in slideshow mode

Rotate photos

- 1 Select **[Rotate]**, and then press **OK**.
- 2 Select an angle to rotate, and then press **OK**.

6 Clock

Display the clock


- 1 In the home screen, select **[Clock]** and then press **OK**.



↳ A clock/calendar is displayed.

 
- **[Time and Date]**: Move the joystick up/down/left/right to set time/date or to select a time/date format. For details, see Section "Settings - Set time and date".
- **[Select Background Music]** (SPF4508/SPF4528): Select background music to play in clock mode

Select a clock/calendar style

- 1 In the clock menu, select **[Select Clock]** and then press **OK**.
- 2 Move the joystick left/right to select a clock or calendar template, and then press **OK**.
 - To go back to the home screen, hold .

Clock menu

- 1 When a clock/calendar is displayed, press **MENU** to enter the clock menu.

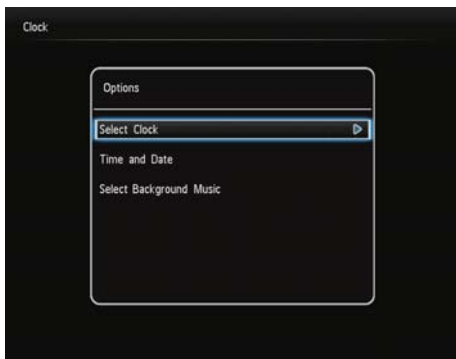

- **[Select Clock]**: Move the joystick left/right to select another clock or calendar to be displayed.

7 Message

Create a message

Note

- If there is no message created before, at power up select **[Personalize Frame]** to add a message to your photo or to view a message.

 
- 1 In the home screen, select **[Message]** and then press **OK**.



- 2 Select **[Add a message to your photo]**, and then press **OK**.




- 3 Move the joystick right or left to select a message template, and then press **OK**.

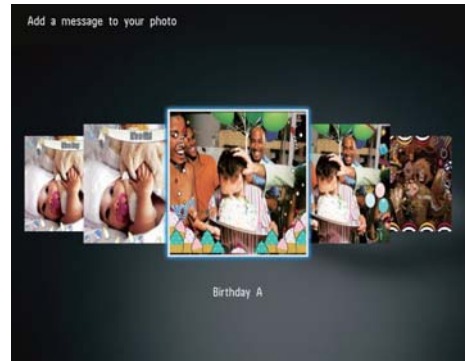

- (SPF4508/SPF4528) Add music to the message.
- Change photo of the message.
- Edit the text of the message.
- Set the real time and date if applicable.

 - 4 Select **[Done]**.

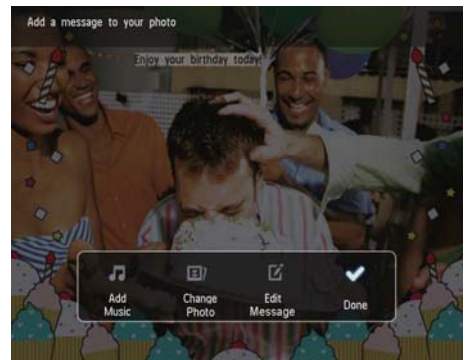

- ↳ The screen prompts you to schedule the message.



- 5 Schedule the message.
 - **[Message Name]:** Enter the name. For details, see “Enter the name of a message”.
 - **[Repeat]:** Select a repeat frequency
 - **[Set Date]:** Set the date or day
 - **[Set Time]:** Set the time
- 6 After you complete the message, select **[Done]** and press **OK**.



- To view the available messages, select **[View Message]**.
- To go back to the home screen, hold **⏏**.

Enter the name of a message

- 1 Select **[Message Name]**, and then press **OK**.
- 2 Move the joystick downward twice to enter the keypad.
- 3 To enter the name, select an alphabet/number and then press **OK**.
 - To switch between uppercase and lowercase, select **aA** on the displayed keypad and then press **OK**.
- 4 When the name is complete, select **✓** and then press **OK**.

Edit a message

 
- 1 In the home screen, select **[Message]** and then press **OK**.




- 2 Select [Add a message to your photo], and then press **OK**.



- 3 Move the joystick right or left to select a message template, and then press **OK**.

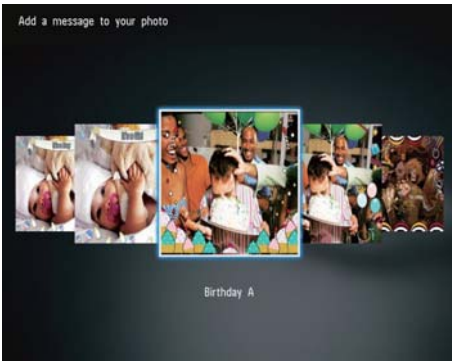

 - 4 Move the joystick to select one of the following options to edit a message.

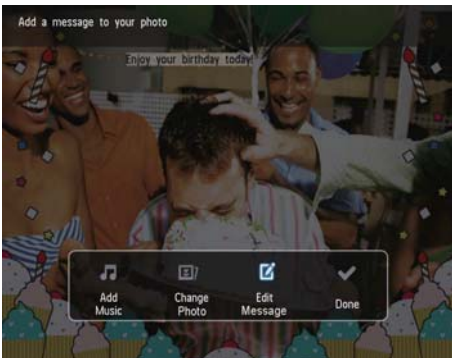

- [Add Music] (SPF4508/SPF4528): Add music to the message
- [Change Photo] (SPF4308/SPF4328)/ [Change Image] (SPF4508/SPF4528): Change the photo of the message
- [Edit Message] (SPF4308/SPF4328)/ [Edit Text] (SPF4508/SPF4528): Edit the text of message

Add background music to message:


- 1 Select [Add Music], and then press **OK**.
- 2 Select a piece of music available on the PhotoFrame, and then press **OK**.

To change the photo of a message:

- 1 Select [Change Photo], and then press **OK**.
- 2 Select a photo available on the PhotoFrame, and then press **OK**.

To edit the text of a message:

 - 1 Select [Edit Message], and then press **OK**.

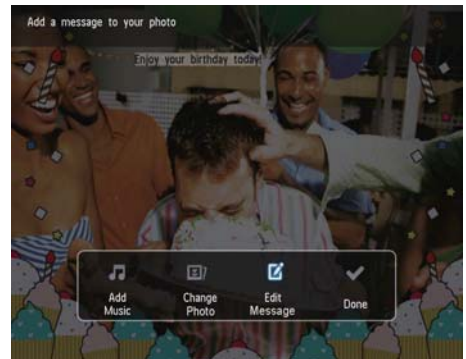

- 2 Select a preset template, and then press **OK**.
↳ The keypad is displayed.
- 3 Move the joystick downwards twice to enter the keypad.
- 4 To enter the text, select an alphabet/ number and then press **OK**.

 
- Select an input method, see “Know these keypad icons”.
- To switch between uppercase and lowercase, select **aA** on the displayed keypad and then press **OK**.

- 5 After you enter the text, select ✓ and then press **OK**.




- 6 Move the joystick up/down/right/left to position the text, and then press **OK**.

- 7 Move the joystick up/down/right/left to select the color or font of the text, and then press **OK**.

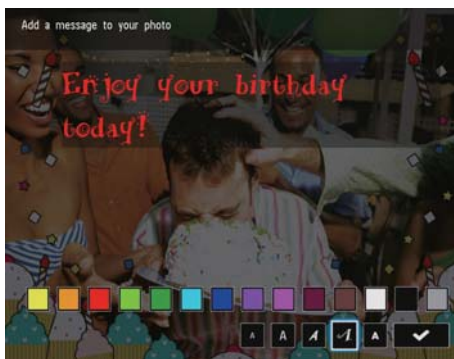

- 8 Move to ✓, and then press **OK**.

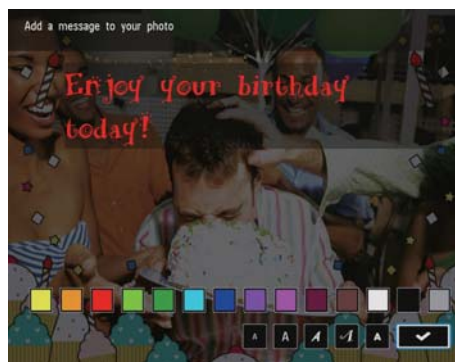 

- 9 Select **[Done]**, and then press **OK**.

View a created message

 
- 1 In the home screen, select **[Message]** and then press **OK**.



- 2 Select **[View Message]**, and then press **OK**.




- 3 Select a message template, and then press **OK**.

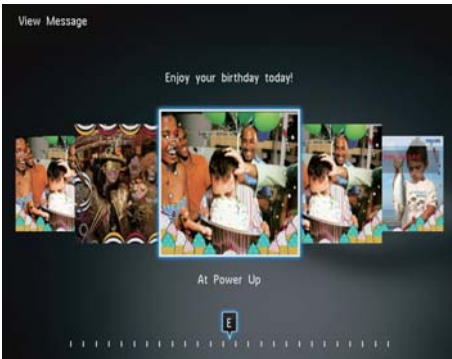

↳ A message template is displayed.

 - To change music (SPF4508/SPF4528), reschedule or delete the message, press **MENU** and then select an option to continue.

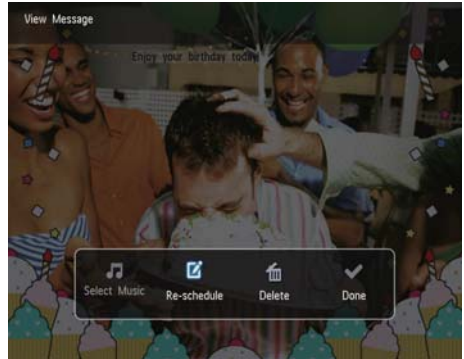

- To go back to the message browser screen, select **[Done]** and then press **OK**.

8 Settings

Select an on-screen language

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Language]**, and then press **OK**.
- 3 Select a language, and then press **OK**.



Adjust brightness

You can adjust the brightness of the PhotoFrame to achieve the best view.

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Brightness]**, and then press **OK**.
- 3 Move the joystick up/down to adjust brightness, and then press **OK**.

Set time/date

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select [Time and Date], and then press OK.



- 3 Select [Set Time] / [Set Date], and then press OK.
- 4 Move the joystick up/down/right/left to adjust minute/hour/day/month/year, and then press OK.

Set time/date format

- 1 In the home screen, select [Settings] and then press OK.



- 2 Select [Time and Date], and then press OK.
- 3 Select [Select Time Format] / [Select Date Format], and then press OK.

- 4 Select a format, and then press OK.



Set SmartPower timer

With the SmartPower timer, you can configure the time for the display of the PhotoFrame to turn on or turn off automatically. When the display automatically turns off, the PhotoFrame goes to standby (sleep) mode.

 
Note

- Ensure that the current time of the PhotoFrame is set correctly.


- 1 In the home screen, select [Settings] and then press OK.



- 2 Select [SmartPower], and then press **OK**.
- 3 Select [Timer], and then press **OK**.

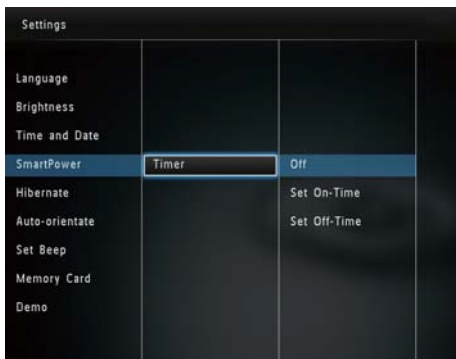

 - 4 Select [Set On-Time] / [Set Off-Time], and then press **OK**.
 - To switch off the SmartPower function, select [Off] and then press **OK**.

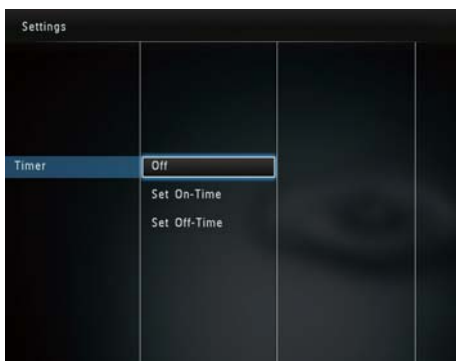

- 5 Move the joystick up/down/right/left to set time, and then press **OK**.



Tip

- When the PhotoFrame is in standby (sleep) mode, you can press ϕ to wake up the PhotoFrame.

Hibernate the PhotoFrame

- 1 In the home screen, select [Settings] and then press **OK**.

 


- 2 Select [Hibernate], and then press **OK**.
- 3 Select an option, and then press **OK**.



- ↳ After the selected period, the PhotoFrame hibernates.

- To disable the hibernation function, select **[Never]** and then press **OK**.

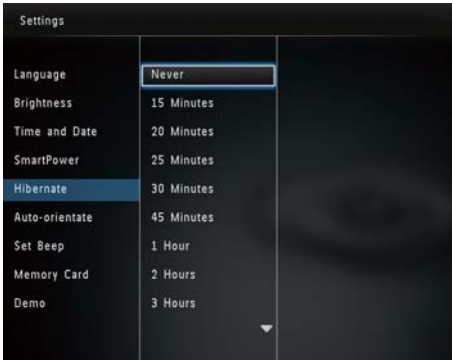

- To get the PhotoFrame out of hibernation, press **⏏**.

Set auto orientation

With the auto orientation function, you can play photos in the correct orientation depending on the horizontal/vertical orientation of the PhotoFrame.

- In the home screen, select **[Settings]** and then press **OK**.



- Select **[Auto-orientate]**, and then press **OK**.

- Select **[On]**, and then press **OK**.



- To disable the auto orientation function, select **[Off]** and then press **OK**.

Turn button sound on/off

- In the home screen, select **[Settings]** and then press **OK**.



- Select **[Set Beep]**, and then press **OK**.

- 3 To turn on the button sound, select **[On]** and then press **OK**.



- To turn off the button sound, select **[Off]** and then press **OK**.

Protect/Unprotect content on a storage device

With the PhotoFrame, you can delete content on a storage device available on the PhotoFrame. To protect content on a storage device from accidental deletion, you can disable the deletion function on a storage device.

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Memory Card]**, and then press **OK**.



- 3 Select **[Enable Delete]** / **[Disable Delete]**, and then press **OK**.



Set demo on/off

Note

- The demo function is effective during photo or video slideshow.

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Demo]**, and then press **OK**.



- 3 Select **[On]**, and then press **OK**.
 - ↳ The demo function is activated.
 - ↳ When Demo mode is ON, the photo frame will play the DEMO slideshow automatically once the power cable is connected.

- During demo show, press **ESC** to exit it.

- To disable demo show at power up, select **[Off]** and then press **OK**.

Slideshow setting

Select slideshow interval

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Slideshow]**, and then press **OK**.
- 3 Select **[Interval]**, and then press **OK**.



- 4 Select a slideshow interval, and then press **OK**.

Select slideshow sequence

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Slideshow]**, and then press **OK**.
- 3 Select **[Shuffle]**, and then press **OK**.
- 4 To display slideshow randomly, select **[On]** and then press **OK**.
 - To display slideshow in sequence, select **[Off]** and then press **OK**.

Select view mode for slideshow

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Slideshow]**, and then press **OK**.
- 3 Select **[View Mode]**, and then press **OK**.
- 4 Select a view mode for slideshow, and then press **OK**.

Select file type for slideshow (SPF4508/SPF4528)

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Slideshow]**, and then press **OK**.
- 3 Select **[File Type]**, and then press **OK**.
- 4 Select a file type for slideshow, and then press **OK**.
 - **[Photos and Videos]**: Photos and videos are shown in the slideshow
 - **[Only Photos]**: Only photos are displayed in the slideshow

Select transition effect

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Slideshow]**, and then press **OK**.

- 3 Select [**Transition Effect**], and then press **OK**.
- 4 Select a transition effect, and then press **OK**.

Select background color

You can select a background border color for photos that are smaller than the PhotoFrame display.

- 1 In the home screen, select [**Settings**] and then press **OK**.



- 2 Select [**Slideshow**], and then press **OK**.
- 3 Select [**Background Color**], and then press **OK**.
- 4 Select [**RadiantColor**] / a background color/ [**Auto-fit**], and then press **OK**.



- ↳ If you select [**RadiantColor**], the PhotoFrame extends the color on the edges of a photo that is smaller than the full screen to fill the screen without black bars or aspect ratio distortion.



- ↳ If you select a background color, the PhotoFrame displays a photo with a background color:



- ↳ If you select **[Auto-fit]**, the PhotoFrame extends a photo to fill the screen with picture distortion.



Power meter

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Power Meter]**, and then press **OK**.
- 3 To show the power meter, select **[On]** and then press **OK**.
 - To hide the power meter, select **[Off]** and then press **OK**.

View information of the PhotoFrame

You can find the model name, the firmware version of the PhotoFrame, and the memory status of the PhotoFrame and other storage device available on the PhotoFrame.

- 1 In the home screen, select **[Settings]** and then press **OK**.



- 2 Select **[Info]**.



- ↳ The information of the PhotoFrame is displayed on the screen.

Reset all settings to factory default

- 1 In the home screen, select [**Settings**] and then press **OK**.



- 2 Select [**Default Settings**], and then press **OK**.
↳ A confirmation message is displayed.
 - 3 Select [**Yes**], and then press **OK**.
↳ All settings on the PhotoFrame are set to factory default.
- To cancel the operation, select [**No**] in the prompt message and then press **OK**.

9 Upgrade the PhotoFrame



Caution

- Do not power off the PhotoFrame during software upgrade.

If there is a software update, you can download the latest software from www.philips.com/support to upgrade your PhotoFrame. The earlier software is unavailable on line.

- 1 Visit www.philips.com/support.
- 2 Search for your PhotoFrame and go to the software section.
- 3 Download the latest software onto the root directory of an SD card.
- 4 Insert the SD card into the PhotoFrame.
- 5 Turn on the PhotoFrame
↳ A confirmation message is displayed.
- 6 Select [**Yes**], and then press **OK** to confirm.
↳ When the upgrade is complete, the PhotoFrame reboots.

10 Product information



Note

- Product information is subject to change without prior notice.

Picture/Display

- Viewing angle: @ C/R > 10, 140° (H)/120° (V)
- Lifetime, to 50% brightness: 20000 hr
- Aspect ratio: 4:3
- Panel resolution: 800 × 600
- Brightness (typical): 200 cd/m²
- Contrast ratio (typical): 400:1
- Photo format support:
 - JPEG photo (maximum: 8000 × 8000 pixel resolution)
 - Progressive JPEG photo (Up to 1024 × 768 pixels)

Video features (SPF4508/SPF4528)

Video feature (SPF4508/SPF4528)

- Video format supported: M-JPEG (*.avi/*.mov), MPEG-1 (*.mpg/*.dat/*.avi/*.mov), MPEG-4 (*.avi/*.mov/*.mp4)
- Video size:
 - M-JPEG, MPEG-1: ≤ 640 × 480
 - MPEG-4: ≤ 720 × 576
- Frame rate: ≤ 30 fps

Audio feature (SPF4508/SPF4528)

- Audio supported format:
 - MP3 (MPEG Audio Layer III)
 - WAV
- Speaker output power: 0.8 W ± 10% (8 ohm)
- Frequency response (-3dB) : 150 ~ 10kHz
- S/N > 70 dB (background)

Storage media

- Internal memory capacity: 512 MB, for up to 500 High Definition photos
- Memory Card Types:
 - Secure Digital (SD)
 - Secure Digital High Capacity (SDHC)
 - Multimedia Card (MMC)
 - Memory Stick (MS)
 - Memory Stick Pro (MS Pro)

Connectivity

- USB: USB 2.0 Slave

Dimensions and weight

- Set dimensions without stand (W × H × D): 225 × 184 × 33 mm
- Set dimensions with stand (W × H × D): 225 × 184 × 113 mm
- Weight withstand: 0.582 kg

Temperature range

- Operation: 0 °C - 40 °C
- Storage: -20 °C - 70 °C

Power

- Power mode supported: AC powered
- Efficiency level: V
- Average consumption (system on):
 - SPF4308/SPF4328 (for photo display): 4.54 W
 - SPF4508/SPF4528 (for video play): 5.6 W
- Power adaptor:
 - Manufacturer: Philips Consumer Lifestyle International B.V.
 - Model number: SSW-1918xx-y (xx=EU, UK, AU, BR; y=1,3)
 - Input: AC 100-240V ~ 50-60Hz 0.3A
 - Output : DC 9V = 1.1A

Adaptor	Region
SSW-1918EU	Europe, Russia, and Singapore
SSW-1918UK	U.K. and Hong Kong
SSW-1918AU	Australia and New Zealand
SSW-1918CN	China

Accessories

- AC-DC adaptor
- CD-ROM with digital user manual
- Quick start guide

Convenience

- Card Reader: Built-in
- Photo format supported:
 - JPEG photo (maximum: 8000 × 8000 pixel resolution)
 - Progressive JPEG photo (Up to 1024 × 768 pixels)
- Placement supported: Photo auto orientation
- Buttons and controls: Joystick, home/back button, menu button, power/mode button
- Playback mode: Slideshow, wave view, album view
- Album management: Create, copy, move, delete, rename, group, add to the favorites album, multi-selection
- Photo management: Copy, move, delete, rotate, add to the favorites album, color tone, group, multi-selection
- Clock: Clock, calendar, set time and date, Background music
- Message: Create message, view message
- Slideshow setting: Transition effect, background color, view mode, interval, shuffle, color tone
- Color tone: Black and white, Sepia, other colors
- Screen background: Black, white, grey, auto fit, RadiantColor
- Settings: Language, brightness, time and date, SmartPower, hibernate, auto orientation, beep (button sound), memory card protection, demo, slideshow settings, information of the PhotoFrame, reset the PhotoFrame to the factory default
- System status: Model name, software version, memory size
- Plug & Play Compatibility: Windows Vista/XP/7, Mac OS X 10.4/10.5/10.6
- Regulatory Approvals: BSMI, C-Tick, CCC, CE, GOST, PSB
- Other convenience: Kensington lock compatible
- On-Screen Display languages: English, French, German, Spanish, Italian, Danish, Dutch, Portuguese, Russian, Simplified Chinese, Traditional Chinese

11 Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. Use the buttons on the back to control the PhotoFrame.

Can I use the PhotoFrame to delete photos on a memory card?

Yes, it supports operations to delete photos on an external device, such as a memory card. Ensure that you enable the deletion function on a memory card available on the PhotoFrame.

Why does my PhotoFrame not show some of my photos?

- The PhotoFrame plays only JPEG photos (maximum: 8000 x 8000 pixel resolution) and Progressive JPEG photo (Up to 1024 x 768 pixels).
- Ensure that these photos are not damaged.

Why does my PhotoFrame not show some of my video files?

- The PhotoFrame plays most video clips of a digital still camera in M-JPEG (*.avi/*.mov), MPEG-1 (*.mpg/*.dat/*.avi/*.mov), and MPEG-4 (*.avi/*.mov/*.mp4) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing, ensure that these video clips are compatible with your PhotoFrame.
- Ensure that the size of the video files are applicable to your PhotoFrame (For details, see "Product information" in the User Manual).
- Ensure that the video files are not damaged.

Why does my PhotoFrame not show video files even I could see them in browse mode, and I played them before?

- Ensure that the [Photos and Videos] option is selected and the [Only Photos] option is not selected. For details, see "Settings - Slideshow settings - Select file type for slideshow".

Why does my PhotoFrame not play some of my music files?

The PhotoFrame only supports MP3 or WAV music files. Ensure that these MP3 or WAV music files are not damaged.

Why does the PhotoFrame not go into auto-off status after I set it?

Ensure that you set the real time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the time has already passed for the day, it starts to go into auto-off status at the specified time from the next day.

Can I increase the memory size to store more pictures on the PhotoFrame?

No. The internal memory of the PhotoFrame is fixed and cannot be expanded. However, you could switch between different photos by using different storage devices on the PhotoFrame.

12 Glossary

A

Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

J

JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension 'jpg' or 'jpeg'.

K

Kbps

Kilobits per second. A digital-data-rate measurement system which is often used with highly compressed formats such as AAC, DAB, MP3 etc. The higher the amount, the better the quality generally is.

Kensington lock

A Kensington Security Slot (also called a K-Slot or Kensington lock). Part of an anti-theft system. It is a small, metal-reinforced hole found on almost all small or portable computer and electronics equipment, particularly on expensive and/or relatively light ones, such as laptops, computer monitors, desktop computers, gaming consoles, and video projectors. It is used for attaching a lock-and-cable apparatus, in particular those from Kensington.

M

Memory Stick

Memory Stick. A flash memory card for digital storage on cameras, camcorders and other handheld devices.

MMC Card

MultiMedia Card. A flash memory card that provides storage for cellphones, PDAs and other handheld devices. The card uses flash memory for read/write applications or ROM chips (ROM-MMC) for static information, the latter widely used for adding applications to a Palm PDA.

Motion JPEG

Motion JPEG (M-JPEG) is an informal name for multimedia formats where each video frame or interlaced field of a digital video sequence is separately compressed as a JPEG image. It is often used in mobile appliances such as digital cameras.

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

S

SD Card

Secure Digital Memory Card. A flash memory card that provides storage for digital cameras, cellphones and PDAs. SD Cards use the same 32 x 24mm form factor as the MultiMediaCard (MMC), but are slightly thicker (2.1mm vs. 1.4mm), and SD Card readers accept both formats. Cards up to 4GB are available.

T

Thumbnail

A thumbnail is reduced-size versions of a picture that is used to make it easier to recognize an them. Thumbnails serve the same role for images as a normal text index does for words.



© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.

UM_V2.1