

Always there to help you
Register your product and get support at
www.philips.com/welcome



SPA2335



User manual

PHILIPS

Contents

1 Important	2
Safety	2
Notice	3

2 Your multimedia speaker	4
---------------------------	---

3 Use your multimedia speaker	4
-------------------------------	---

4 Product information	5
-----------------------	---

5 Troubleshooting	6
-------------------	---

1 Important

Safety

Important safety instructions

- Read and follow all these instructions.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed or should be easily accessed during intended use.
- No naked flame sources, such as lighted candles, shall be placed on the products.
- Keep this product away from direct sunlight, naked flames or other heat sources.
- Unplug the product from the power outlet during lightening storms or when unused for long periods of time.
- When you disconnect the power cord, always pull the plug instead of the cable.
- Only use attachments/accessories specified by the manufacturer.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this product.
- Never place this product on other electrical equipment.

Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

This product complies with the radio interference requirements of the European Community.



Disposal of your old product

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2 Your multimedia speaker


Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 Use your multimedia speaker




Note

- When you press  **ON/OFF** knob on remote control to switch to standby mode, the unit is still connected to the mains.

- 1 Connect the speaker plug to **AUDIO OUTPUT** (audio output) socket (①).
- 2 Connect the audio input plug on remote control to the audio output socket of your computer (②).
- 3 Connect the AC plug to AC power socket (③).
- 4 Press  **ON/OFF** knob on remote control to switch on the multimedia speaker (④).
↳ Green LED on the remote control is on.
- 5 Adjust the volume by **VOL** (volume) knob on remote control or by the computer application.
- 6 Rotate **BASS** (bass) knob to adjust the bass (⑤).

- 7 After use, press **ON/OFF** knob on remote control to switch off the multimedia speaker and unplug.

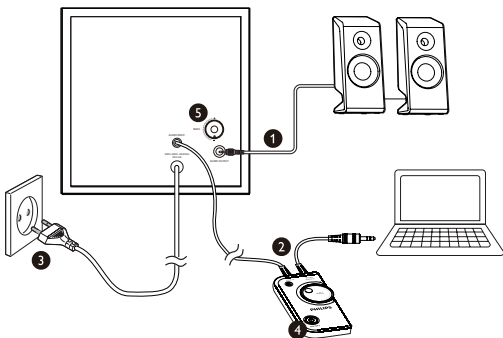

4 Product information

AC power input	100-240V~, 50/60Hz, 350mA
Operation power consumption	35W
Standby power consumption	<0.5W
Dimensions	
- Main unit (W x H x D)	190 x 225 x 200 mm

5 Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the product, check the following points before requesting service. If the problem remains unsolved, register your product and get support at www.philips.com/support.

- Make sure that the speakers are correctly installed.
- Make sure the LED lights up.



Specifications are subject to change without notice

2013 © WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

