



**Charge the handset(s) 24 hours
before use.**

PHILIPS

4	Important Information
4	For your safety
4	Installation requirements
4	Need Help?
5	What's in the box?
6	Your SE635
6	Overview of the handset
9	Overview of the base station
10	Main features of your SE635
12	Connect
13	Install
18	Call
22	Phonebook
26	Call log
28	SMS
35	Clock & Alarm
36	Personal Settings
41	Advanced Settings
48	Network Services
51	Games
52	Telephone Answering Machine (TAM)
59	Troubleshooting
62	Information
63	Index

Important Information

For your safety

In the event of a power failure, you cannot use this handset to make or receive calls. Alternative arrangements should be made for access to emergency calls.

Your PIN code is preset to 0000. If you change your PIN code, keep the PIN details in a safe place where you have easy access to them. Do not lose the PIN code.

To avoid damage or malfunction:

- Do not allow the product to come into contact with liquid.
- Do not open it as you could be exposed to high voltages.
- Never use any battery type other than the one supplied.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Active mobile phones in the vicinity may cause interference.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.

About operating and storage temperatures:

- Operate in a place where temperature is always between 0 and 35° C (32 to 95° F).
- Store in a place where temperature is always between -20 and 45° C (-4 to 113° F).
- Battery life may be shortened in low temperature conditions.

Installation requirements

This product requires an electrical supply of 220-240 volts, alternating monophasic power, excluding IT installations defined in standard EN 60-950. In case of power failure, the communication can be lost.

The electrical network is classified as hazardous according to criteria in the standard EN 60-950. The only way to power down this product is to unplug the power supply unit from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60-950.

Need Help?

For more information on troubleshooting and FAQs:

Troubleshooting: page 59

Online Help

www.p4c.philips.com

 
What's in the box?

EN

The following accessories are included with your SE635:



Handset



Base station



 
Power supply for
base station



Line cord



2 AAA
rechargeable
batteries



Battery door



User Guide



Quick Start
Guide

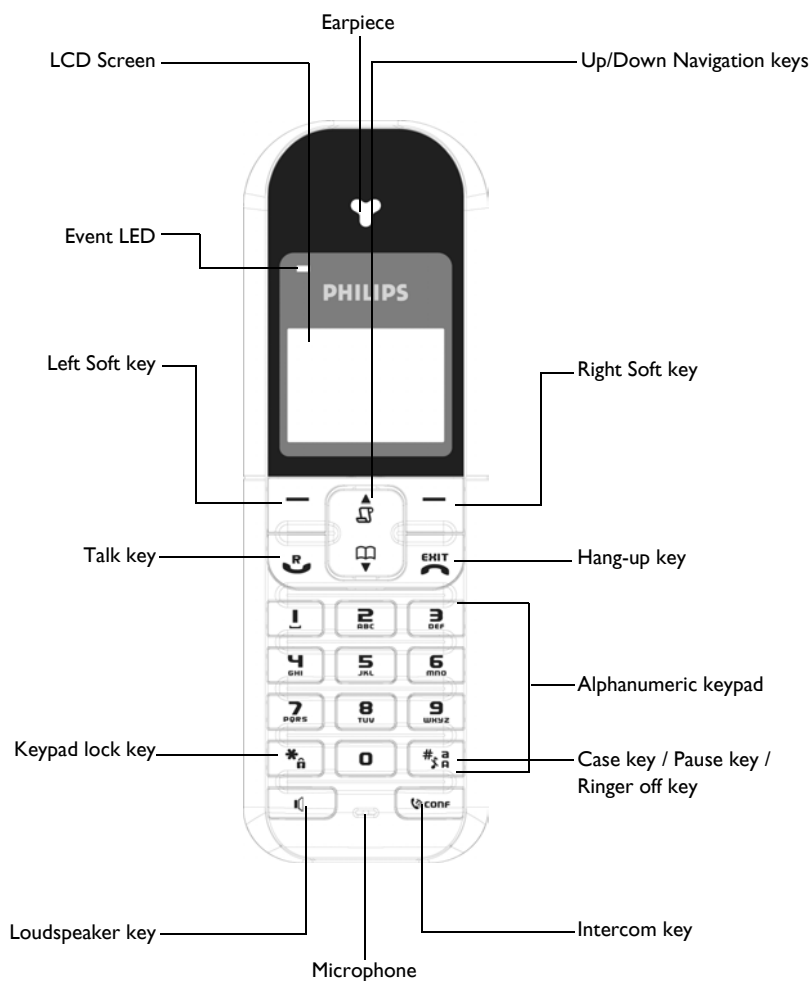


Warranty card

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.


 






 

Overview of the handset




Your SE635

EN

Handset keys

Press	To
	Enter the main menu from stand-by mode. Select the function displayed on the handset screen directly above it. Activate mute function during a call.
	Go to redial list from stand-by mode. Select the function displayed on the handset screen directly above it.
	Answer an incoming external or internal call. Insert R for operator services when on the line.
	Hang up a call. <i>Long press</i> from menu browsing to return to stand-by mode, short press to return to previous menu. <i>Long press</i> in stand-by mode to switch off the handset, short press to switch on the handset again.
	Access call log from stand-by mode. Scroll up a menu list or go to the previous phonebook or call log record. Increase earpiece volume during a call. Go to the previous character in editing mode.
	Access phonebook from stand-by mode. Scroll down a menu list or go to the next phonebook or call log record. Decrease earpiece volume during a call. Go to the next character in editing mode.
	Initiate an internal call.
	Answer an incoming call in handsfree mode. Activate and deactivate the loudspeaker* during a call.
	Dial # in stand-by mode. <i>Long press</i> to mute the ringer in stand-by mode. Insert a pause in dialling mode. Switch between upper and lower case in editing mode.
	Dial * in stand-by mode. <i>Long press</i> to activate and deactivate keypad lock.










Soft key

 BACK	Short press from menu browsing to return to the previous menu.
--	--

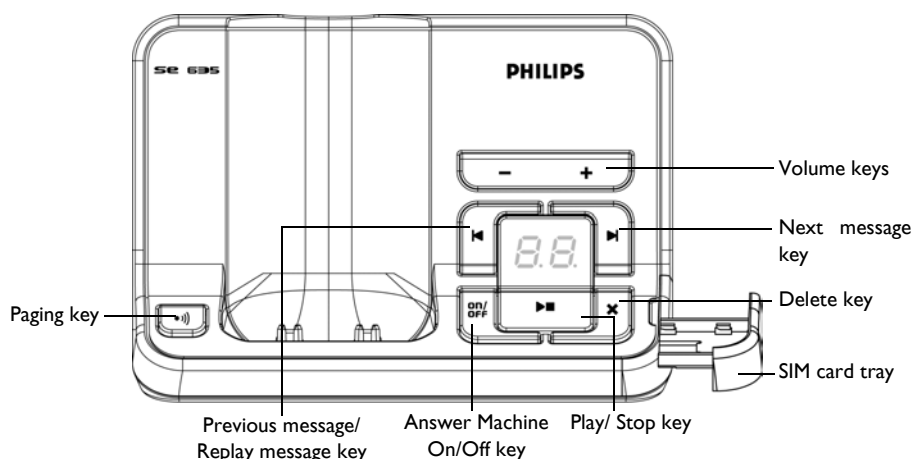
***WARNING** Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

Display icons & symbols

In stand-by mode, several icons & symbols may be displayed on the handset.

	The handset is registered and within range of the base station. It blinks when the handset is out of range or is searching for a base.
	Battery symbol indicating 3 different battery levels.
	The ringer volume is set to zero.
	There is an external incoming call, an external call is connected or an external call is held.
	There is an internal incoming call, an internal call is connected or an internal call is held.
	The loudspeaker is ON.
	Alarm clock is activated.
	Blinks when there is a missed call, or when new SMS or voicemail messages are received and not read yet. Steady when there are received SMS messages in the SMS box.
	Telephone answering machine (TAM) is activated. It blinks when there are new messages received.


Overview of the base station



Base station keys









	Page handset. <i>Long press</i> to start registration procedure.
	<i>Long press</i> to turn the answering machine On/Off.
	Increase speaker volume during message playback. Reduce speaker volume during message playback.
	Delete current message during message playback. <i>Long press</i> to delete all messages when TAM is in standby mode (unread messages will not be deleted).
	Play phone messages (the first recorded will be played first). Stop message playback.
	Go to previous message if pressed within 1 second of current message playback. Replay current message if pressed after 1 second of current message playback.
	Skip to the next message during message playback.

Your SE635

LED Message counter	<p>No display: Indicates that the answering machine is switched off.</p> <p>Blinking: Indicates number of new messages.</p> <p>Steady: Indicates number of old messages.</p> <p>2 bars flashing: Indicates that there is no more memory left.</p> <p>Indicates the volume level (L0 - L9) when  is pressed.</p> <p>Indicates the current message number during playback.</p>
---------------------	---

 
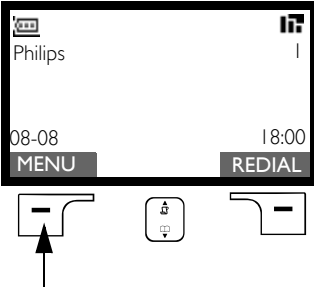

 
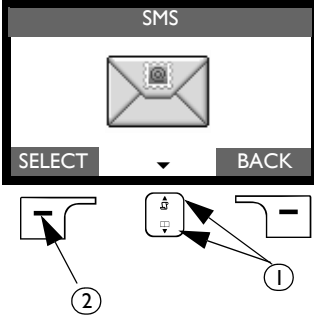

 

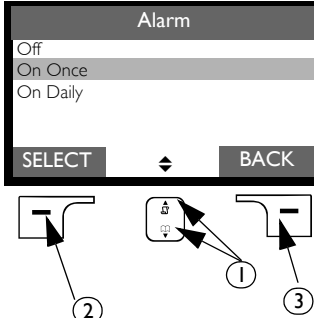
Main features of your SE635

The following is an overview of the menu options that are available in your SE635. For detailed explanation of the menu options, please refer to the corresponding sections in this User Guide.

Menu	To	Page
SMS 	Setup, write/read SMS, etc	28
PHONEBOOK 	Add, edit and manage phonebook entries	22
CLOCK & ALARM 	Set date and time, alarm and alarm tone	35
PERSONAL SET 	Set Handset tone, Wallpaper, Contrast level, Screensaver, Handset name, Auto pickup/Hang-up, Languages and Babysit mode	36
ADVANCED SET 	Set Recall time, Dial mode, Call barring, Baby call mode, Register/Unregister handset, Select Base, Change PIN, Reset phone, Auto prefix, Country and Conference mode	41
NET. SERVICE 	Set Call forwarding, Voice mail, Call back, Caller ID	48
GAMES 	Play games	51
ANSWER MACHINE 	Setup, play, delete phone messages, etc	52

Menu navigation

The basic steps of navigating through the menus and options are as follows:

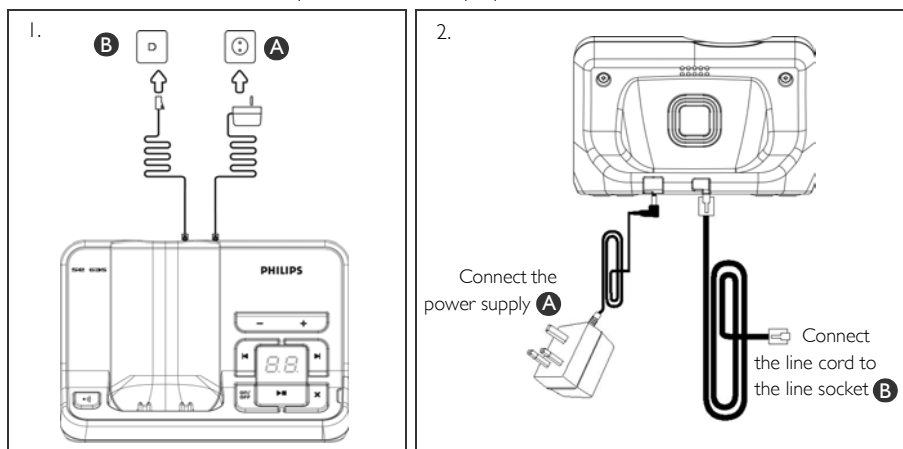
Task	Action	Illustration
Enter main menu/menu options.	Choose MENU by pressing the key directly below it (left soft key )	
<ul style="list-style-type: none"> Go to a specific menu/option Confirm your selection 	<ol style="list-style-type: none"> Press  key to scroll to your desired menu/option. Choose SELECT by pressing the key directly below it (left soft key ) 	
<p>In this example, the alarm is On Once.</p> <ul style="list-style-type: none"> To change your selection To confirm your selection Return to previous menu level or stand-by screen 	<ol style="list-style-type: none"> Press  key to scroll to your desired option. Choose SELECT by pressing the key directly below it (left soft key ) Choose BACK by pressing the key directly below it (right soft key ) 	

Connect

The location of your base station can have an effect on the range and performance of your SE635 (see TIP below).

Connecting the Base Station

1. Place the base station in a central location near the telephone line socket and electricity sockets.
2. Connect the line cord and the power cable to the proper connector at the back of the base station.



3. Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

TIP Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.

WARNING The base station does not have an ON/OFF switch. Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible.

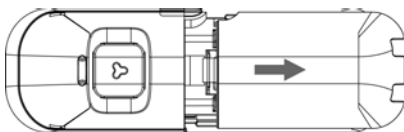
The power adaptor and telephone line cord have to be connected correctly, as incorrect connection could damage the unit.

Always use the telephone line cord supplied with the unit. Otherwise, you may not get a dial tone.

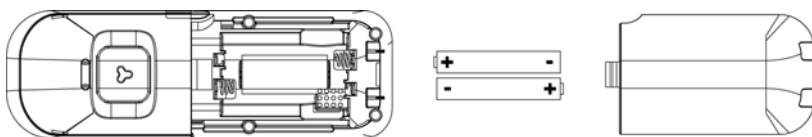
Install battery

Your SE635 is supplied with 2 rechargeable batteries allowing approximately up to 12 hours of talk-time and up to 150 hours stand-by time. Before using the handset, the batteries have to be installed and fully charged.

1. Slide out the battery cover.

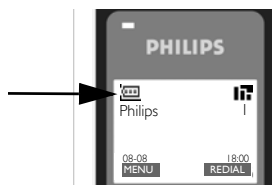



2. Place the batteries as indicated and replace the cover.



Charge battery

1. Place the handset on the charging cradle of the base station. A beep is emitted if the handset is placed correctly.
2. A charging animation on the handset indicates that the battery is charging.



3. Leave it there until the batteries are fully charged (at least 24 hours).
4. The handset is fully charged when the charging animation stops and  is displayed.

The handset must be charged for at least 24 hours before using it for the first time.

Battery life and range

Talk time and stand-by time





When the battery is fully charged, the talk time of your SE635 is approximately 12 hours and the stand-by time is approximately 150 hours.

Low battery warning


The battery level is shown at the top left of the handset screen. When the battery level becomes low, the low battery sensor alerts you by sounding an audible tone and blinking the battery icon.

If the battery level becomes exceedingly low, the phone automatically switches off shortly after the alert and any function in progress will not be saved.

The approximate power levels of your battery are indicated as follows:





-  *Battery is fully charged* - 3 bars in the battery icon
-  *Battery is partially charged* - 2 bars in the battery icon
-  *Battery is running low* - 1 bar in the battery icon
-  *Battery is fully discharged* - 0 bar in the battery icon

Out of range warning

The indoor and outdoor range of the phone is up to 50 metres and 300 metres respectively. When the handset moves beyond operation range, the antenna icon  will blink.

Configure your SE635

 




Before you use your SE635, you need to configure it according to the country of use. After charging it for a few minutes, the WELCOME screen appears. Follow these steps to configure your phone:

1. Press any key to display the list of countries.
2. Scroll  to your country.
3. Press  **SELECT** to confirm your selection.
4. Scroll  to your operator (if necessary).
5. Press  **SELECT** again to confirm your selection.
6. The default line settings and menu language for the selected country will be automatically configured.

You can still make outgoing calls or receive incoming calls without first defining your country selection.

Depending on your country, the WELCOME screen may not appear. In this case, you are not required to select your country/operator/language settings.

Set date and time

1. Press  **MENU**.
2. Scroll  to **Clock & Alarm** and press  **SELECT**.
3. Press  **SELECT** to enter Set Date/Time.
4. Enter current time (HH:MM) and current date (DD/MM/YY) and press  **SELECT**.

WARNING If your phone is connected to an ISDN line through an adaptor, the date & time may be updated after each call. The availability of date & time update is dependent on your network provider. Please check the date & time settings in your ISDN system or contact your network provider.

Now, you are ready to use your phone.

Basic operations of your SE635

Make a call

Enter the phone number (maximum 24 digits) and press  to dial the number.

For details, please refer to "Make a call" on page 18.


Answer or end a call

Press  key to answer a call.

Press  key to end a call.

For details, please refer to "Answer a call" and "End a call" on page 19.

Switch the handset on/off

Press and hold  key for 5 seconds to switch off the handset in stand-by mode.


Short press  key to switch on the handset again.

Keypad lock/unlock

Press and hold  key for 2 seconds to lock and unlock the keypad in stand-by mode.

Paging

The paging feature enables you to locate a missing handset if the handset is in range and contains charged batteries.

Press  key on the base until the handset starts to ring.

Once retrieved, press  to end the paging.

Stand-by mode

If the handset is idle for 30 seconds in settings mode, review mode, edit mode, etc. it will automatically return to stand-by mode. It will also return to stand-by mode automatically when the handset is placed back on the base station.




 
 
 

 
 

Screen and keypad backlight

The backlight remains on for 20 seconds after each activation such as an incoming call, key presses, lifting up the handset off the base station, etc. The color of the keypad backlight is AMBER.

 
 
 



Event LED

The event LED on your handset blinks when there is a new message recorded on your telephone answering machine. If you have subscribed to Caller Line Identification, the event LED also blinks when there is a new call, a new SMS or a new voice mail message.

 
Text and number entry

Key	Assignment
	space 1 @ _ # = < > () & £ \$ ¥ [] { } ¢ §
	a b c 2 à ä ç å æ
	d e f 3 é è Δ Φ
	g h i 4 ì Γ
	j k l 5 Λ
	m n o 6 ñ ò ö
	p q r s 7 β Π Θ Σ
	t u v 8 ù ü
	w x y z 9 ø Ω Ξ Ψ
	. 0 , / ; “ ‘ ! i ? * + - % \ ^ _


For example, to enter the name “Philips”:

1. Press  once: P
2. Press  twice: Ph
3. Press  three times: Phi
4. Press  three times: Phil
5. Press  three times: Phili
6. Press  once: Philip

7. Press  four times: Philips

By default, the first letter of a word is in upper case. Press  to switch between upper and lower case.

Default settings


Ringer Volume	Medium
Earpiece Volume	Volume 3
Speaker Volume	Volume 3
Key Beep	On
Wallpaper	
Contrast	Level 2
Screensaver	On
Auto Pick-up	Off
Auto Hang-up	On
Babysit mode	Off
Alarm clock	Off
Barring mode	Off
SMS reception	On
Master PIN	0000

Answering Machine



Answer Mode	Answer & Rec.
Number of rings before answer	4
Outgoing Messages	Predefined for Answer & Rec. mode
Base station screening	On with default speakerphone level
Handset screening	Off
Base speaker	Level 5
Remote access	Deactivated

Make a call




Predialling

1. Enter the phone number (maximum 24 digits).
2. Press  to dial the number.

Direct dialling





1. Press  or  to take the line.
2. Enter the phone number.

Call from redial list

1. Press  in stand-by mode.
2. Scroll  to an entry in the redial list.
3. Press  to dial the number.




TIP The handset stores the last 20 numbers dialled. The last number dialled will appear first in the redial list. If the redial number matches a phonebook entry, the name will be displayed instead.


 

Call from the call log

1. Press  in stand-by mode.
2. Press  **SELECT** to enter call log.
3. Scroll  to an entry in the call log.
4. Press  to dial the number.

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log. See "Call log" on page 26 for details.

Call from the phonebook


1. Press  in stand-by mode.
2. Scroll  to a phonebook entry.
3. Press  to dial the number.

TIP Instead of scrolling  to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing  will show the entries starting with A. Pressing  again will show the entries starting with B, etc...

Answer a call

When the phone rings, press  key.

Handsfree answering

When the phone rings, press  key.

Incoming call has priority over other events. Whenever there is an incoming call, other status in progress such as phone setting, menu navigation, etc will be aborted.

TIP If Auto Pick-up mode (see page 39) is activated, you can simply lift up the handset from its base station to answer the call. This feature is deactivated by default.

WARNING When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

End a call

Press  key.

The call duration will be displayed on the handset screen for about 5 seconds.

TIP If Auto Hang-up mode (see page 39) is activated, you can simply place the handset back to its base station to end the call. This feature is activated by default.

 

Calls in-progress

The following options are available during a call:

Adjust earpiece volume

 
1. Press  to select from Volume 1 to Volume 5.

Mute/unmute the handset

1. During a call, press  **MUTE** to turn off the microphone so that your correspondent cannot hear you.
2. Press  **UNMUTE** to turn on the microphone.

Loudspeaker mode

1. Press  key to activate loudspeaker mode.

2. Press  key again to return to normal mode.

WARNING Activation of loudspeaker can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

Adjust loudspeaker volume


 
 
1. Press  key to select from Volume 1 to Volume 5.

Intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make free internal calls, transfer external calls from one handset to another and use the conference option.




Intercom another handset

To be able to use intercommunication feature, you must have at least 2 handsets registered to your base station (see page 44 "To register an additional handset").

1. Press  key in stand-by mode.
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press  **ALL** to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.



If the handset does not belong to SE630/635 range, this function may not be available.

Transfer an external call to another handset

 
1. Press  key to put the external call on hold (the caller can no longer hear you).
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press  **ALL** to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.

The called handset rings.

If there is no answer from the called handset, press  key to resume the external call.


 


3. Press  key on the called handset to answer the internal call, where both internal callers can talk.
4. Press  key on the first handset to transfer the external call to the called handset.

Switch between an internal and external call

1. Press  key once to switch between an internal call and external call.

Three-party conference call



The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

1. Press  to put the external call on hold (the caller can no longer hear you).
2. Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for establishing a conference call will be displayed. Press  **ALL** to call all the handsets or press the handset number to select a specific handset, e.g. press  to call handset 2.
The called handset rings.
3. Press  key on the called handset to answer the internal call, where both internal callers can talk.
4. Press **CONF** soft key on the first handset to start the three-party conference.

TIP If Conference mode is activated (see page 47), a three-party conference call is automatically established if the second handset takes the line when there is already an external call in progress.

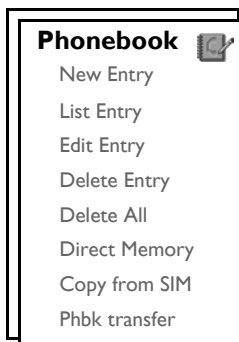
Call waiting

If you have subscribed to Call Waiting service, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or name of the second caller will also be displayed if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

To answer the second call, press  +  (may be different according to your network).

Caller Line Identification

Caller Line Identification (CLI) is a special service that you may subscribe from your network operator. If you have subscribed to CLI service, and provided the identity of the caller is not withheld, the number or name of the caller (if stored in the phonebook) will be displayed when the phone rings so that you may decide whether to answer the call or not. Please contact your network provider for more information on this service.



Your SE635 can store up to 250 phonebook memories, including 9 direct access memories (1 to 9). Each phonebook entry can have a maximum of 24 digits for the phone number and 12 characters for name.

Access phonebook

1. Press in stand-by mode or press **MENU**, scroll to Phonebook and press **SELECT**, scroll to List Entry and press **SELECT**.
2. The phonebook entries will be listed in alphabetical order.
3. Press to browse the phonebook.



To view the details of a phonebook entry, press **VIEW**.

To dial a number from the phonebook, scroll to the phonebook entry and press .

TIP Instead of scrolling to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing will show the entries starting with A. Pressing again will show the entries starting with B, etc...

Store a contact in the phonebook









 

 
 


1. Press **MENU**, scroll to Phonebook and press **SELECT**, press **SELECT** to enter New Entry.
2. Enter the name of the contact (maximum 12 characters) and press **OK**.
3. Enter the number (maximum 24 digits) and press **OK**.
4. Enter the SMS Box number and press **OK** (only for UK).

5. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **SELECT** to confirm.
A long confirmation beep tone is emitted.



You can assign individual contacts to specific groups of your choice. For example, Group A contains phone numbers of all your co-workers. You can also assign a specific ring melody to that group (see "Group Melody" on page 37) . If you have subscribed to Caller Line Identification service from your network provider, every time someone from that group calls you, you will hear the designated ringtone for that group.

TIP You can store up to 250 phonebook entries. You cannot store a new phonebook entry when the memory is full. In this case, you have to delete existing entries to make space for new entries.






 
Edit a phonebook entry

1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Edit Entry and press  **SELECT**.
2. Scroll  to the entry you wish to edit and press  **SELECT**.
3. Press  **CLEAR** to erase the letters one by one, edit the name and press  **OK**.
4. Press  **CLEAR** to erase the digits one by one, edit the number and press  **OK**.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **OK** to confirm.
A long confirmation beep tone is emitted.

Delete a phonebook entry

 

 


 





1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Delete Entry and press  **SELECT**.
2. Scroll to the entry you wish to delete and press  **SELECT**.
A long confirmation beep tone is emitted.

Delete all phonebook entries

 

 






1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Delete All and press  **SELECT**.
2. Press  **SELECT** again to confirm.
A long confirmation beep tone is emitted.

Store direct access memory

You can store up to 9 direct access memories (Key  to ). A long press on the keys in stand-by mode will automatically dial the stored phone number.

1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Direct Memory and press  **SELECT**.
2. Select a key (Key 1 to Key 9) and press  **VIEW**. If there is a stored number in that key, the number/ name will be displayed.
3. If there is no number stored for the selected key or if you want to change the number currently stored, press  **SELECT** and press  **SELECT** again to select Add.
4. Press  **OK** to display the phonebook list and scroll  to the entry you wish to store as direct access memory.
5. Press  **OK** to confirm.
A long confirmation beep tone is emitted.

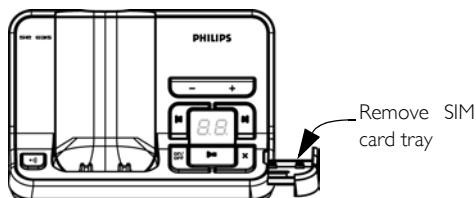
Delete a direct access memory

1. Press  **MENU**, scroll  to Phonebook and press  **SELECT**, scroll  to Direct Memory and press  **SELECT**.
2. Select a key (Key 1 to Key 9) and press  **VIEW**.
3. Press  **MENU** and scroll  to Delete.
4. Press  **OK** to confirm.
A long confirmation beep tone is emitted.

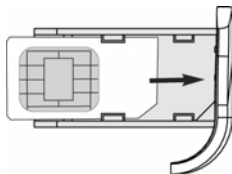
Copy phonebook from SIM card

This feature allows you to copy the SIM card phonebook of your mobile phone to the phonebook of your handset.

1. Open the SIM card tray and remove it from the base station.



- Slide the SIM card between the retaining clips, microchip facing up, until it stops.



- Put the SIM card tray back in the slot on the base station and push into place until it latches.
- On the handset, press **MENU**, scroll **Phonebook** and press **SELECT**, scroll **Copy from SIM** and press **SELECT**.
- Scroll **Copy All** or **Select Entry**. If you choose **Copy All** then all entries in the SIM card will be copied to your phonebook. If you choose **Select Entry**, you can browse the SIM card entries and select the ones you wish to copy.
- Press **SELECT** to confirm.
- Enter the PIN code of the SIM card (if required). The copy progress will be displayed on the screen.
- A message **Transferred!** will be displayed upon successful completion.

Your handset should be able to read all standard SIM phonebook contents. If the handset is unable to read the SIM card, or no SIM card is detected, the screen will display an error message **No SIM Card!** and return to previous menu.

TIP You can select **CANCEL** anytime to abort the process.

Transfer phonebook




This feature allows you to transfer the phonebook from one handset to another handset when there are at least 2 handsets registered to your base station.

- Press **MENU**, scroll **Phonebook** and press **SELECT**, scroll **Phbk transfer** and press **SELECT**.
- The handset numbers which are available for transfer will be displayed. If there are more than 2 handsets, you can scroll **Phonebook** to select a specific handset.
- Press **SELECT** to confirm.
- The called handset will be prompted with a message **Transfer from Handset X**.
- To accept the transfer of phonebook, press **SELECT** on the called handset; to reject the transfer, press **CANCEL**.
- A message **Transferred!** will be displayed upon successful completion.


 



 
 

 
 
Call log

The call log can store up to 50 entries. If you have subscribed to Caller Line Identification (CLI), and provided the identity of the caller is not withheld, the name (or number) of the caller will be displayed together with the date & time of the call (if provided by the network). The calls (missed and received) are displayed in chronological order with the most recent call at the top of the list. When the call log is empty, the screen displays List Empty.


 




Access call log

1. Press  in stand-by mode, press  **SELECT** to enter Call Log and scroll  to view the entries.


 




Save call log entry to phonebook

1. Press  in stand-by mode, press  **SELECT** to enter Call Log and scroll  to select an entry.
2. Press  **SELECT** and press  **SELECT** again to Copy to Phbk.
3. Enter name and press  **OK**.
4. Edit number if necessary and press  **OK**.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **SELECT** to confirm.
A long confirmation beep tone is emitted.

Delete call log entry

1. Press  in stand-by mode, press  **SELECT** to enter Call Log and scroll  to select an entry.
2. Press  **SELECT** and scroll  to Delete.
3. Press  **SELECT** to confirm.
A long confirmation beep tone is emitted.



 
 
Delete all call log

1. Press  in stand-by mode, press  **SELECT** to enter Call Log.
2. Press  **SELECT** and scroll  to Delete All and press  **SELECT**.
3. Press  **SELECT** again to confirm.
A long confirmation beep tone is emitted.



 


 
 
 

 
Access redial list

1. Press  in stand-by mode and scroll  to view the entries.



 

 
View details of a redial list entry

1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT** and press  **SELECT** again to View.


 

 

Save redial list entry to phonebook

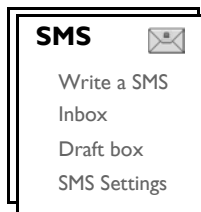
1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT**, scroll  to Copy to Phbk and press  **SELECT**.
3. Enter name and press  **OK**.
4. Edit number if necessary and press  **OK**.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **SELECT** to confirm.
A long confirmation beep tone is emitted.

Delete a number from redial list

1. Press  in stand-by mode and scroll  to select an entry.
2. Press  **SELECT** and scroll  to Delete and press  **SELECT**.
A long confirmation beep tone is emitted.

Delete all redial list

1. Press  in stand-by mode.
2. Press  **SELECT** and scroll  to Delete All and press  **SELECT**.
3. Press  **SELECT** again to confirm.
A long confirmation beep tone is emitted.



SMS stands for Short Message Service. To benefit from this service, you must subscribe to Caller Line Identification Service (CLI) together with SMS service from your network provider. SMS messages can be exchanged with a phone (mobile or compatible fixed lines), provided the receiver has also subscribed to CLI and SMS services.

The factory settings on your SE635 correspond to the main national operator. If you wish to send or receive SMS messages through another service provider, you must set the corresponding numbers (see page 33).

You can create up to 10 SMS boxes (Box 0 to Box 9) and protect each box with a password (only for UK). Your SE635 can store up to 50 SMS messages (40 SMS in the Inbox and 10 SMS in the Draft box) shared by all the SMS boxes and the maximum length of each message is 160 characters.

In order to send and receive SMS messages, there must be at least one SMS Box. Box 9 with empty password is created by default (only for UK). For more information, please refer to "SMS Box (only for UK)" on page 32.

Write and send new SMS

1. Press MENU, press SELECT to enter SMS, press SELECT again to enter Write a SMS.
2. Scroll to the desired SMS Box (Box 0 to Box 9) and press SELECT to enter password (only for UK).
3. Enter the password (if needed) and press OK.

Key	Operation
	Press to move cursor left by 1 position. Press and hold to jump to the 1st character/digit.
	Press to move cursor right by 1 position. Press and hold to jump to the last character/digit.
CLEAR	Press to erase the previous character/digit. Press to return to the previous menu if there are no characters/digits on the input screen. Long press to delete all characters/digits.

4. Enter the text and press OK.

You can enter up to 160 characters for an SMS.

If you receive a call while writing an SMS, the operation will be interrupted. However, your SMS will be saved in the Draft box. To retrieve it, go to Draft box in your SMS menu (see page 31).

5. Enter the destination phone number and press **OK**. Or press **PHBK** to browse the phonebook list to select a phone number; press **SELECT** and press **OK**.
6. Enter the destination box number (0 to 9) directly and press **OK** (only for UK).

By default, the destination box is 9 (the default destination box depends on the country).

7. Press **SELECT** to Send the message or scroll to Save as Draft to save the message in the Draft box and press **SELECT** to confirm.
8. If you select Send, the message will be sent immediately. SMS Sent! will be displayed if the message has been sent successfully.

If the message cannot be sent successfully, the screen will display SMS not Sent! and the message will be saved in the Draft box.

WARNING When composing your SMS, if no keys are pressed for 60 seconds, the handset will return to stand-by mode. The edited message will be automatically saved in the Draft box.

Inbox

The messages in the Inbox are listed according to the time of receipt, with the newest message appearing first. The Inbox can store up to 40 messages (shared between Box 0 to Box 9).

Each time an SMS is received, you will be alerted by a beep tone (see "SMS Tone" on page 37) and the screen displays the number of new messages received. If LED is activated, the event LED will blink until the SMS has been reviewed.

WARNING When the message box is full, you will not be able to receive new messages. In this case, you need to delete some old messages in order to receive new ones

View Inbox messages

1. Press **MENU**, press **SELECT** to enter SMS, scroll to Inbox press **SELECT**.
2. Scroll to your desired box number and press **SELECT** (only for UK).
3. Enter the password and press **OK** (Password is not required for Box 9).
4. Browse the list of SMS messages and select the message you wish to read. The message list will be displayed with the sender's phone number or corresponding name (if the number matches the phonebook record).
5. Press **VIEW** to view the message content.


TIP While reading an SMS, press to scroll to the next or previous row. At the end of the message, the sender's phone number and the date and time of reception are shown.

6. When viewing the message content, you can press  **MENU** to access the following options:





Reply	Send a reply to the sender of the message.
Edit	Forward the message to another recipient.
Copy to Phbk	Save the sender's number to your phonebook.
Delete	Delete the selected message.
Delete All	Delete all messages in the Inbox.

7. To return to SMS menu, press .



 
 
Press  while viewing the message content/sender number/date/time stamp will abort the SMS function and dial the sender's phone number.

Press  to return to Inbox message list.





 
 

 
Reply to an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Reply and press  **SELECT** to start editing.
3. After editing, press  **OK** to confirm the message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 28 to send the message or select Save as Draft to save the message in the Draft box.

Forward an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Edit and press  **SELECT** to start editing it if you wish.
3. After editing, press  **OK** to confirm message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 28 to forward the message or select Save To Draft to save the message in the Draft box.

Save sender's phone number to phonebook

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Copy to Phbk and press  **SELECT** to enter a name for this new contact.
3. Enter the name and press  **OK** to modify number.
4. To confirm the number, press  **OK** again.
5. Enter the SMS Box number and press  **OK** (only for UK).
6. Scroll  to select a group you wish to assign for this contact and press  **SELECT** to confirm.
A long confirmation beep is emitted and the screen returns to display the message content.

Delete an Inbox message

1. While viewing the message content, press  **MENU** to display the Inbox menu options.
2. Scroll  to Delete and press  **SELECT** to confirm deletion.

Delete all Inbox messages

1. While viewing the message content, press MENU to display the Inbox menu options.
2. Scroll to Delete All and press SELECT.
3. Press SELECT again to confirm deletion.

Draft box

In addition to SMS messages saved as drafts, all the SMS messages that are not successfully sent will be automatically stored in the Draft box. The Draft box can store up to 10 messages.

Review Draft messages

1. Press MENU, press SELECT to enter SMS, scroll to Draft box and press SELECT.
2. Scroll to your desired box number and press SELECT (only for UK).
3. Enter the password and press OK (Password is not required for Box 9).
4. Browse the list of SMS messages and select the message you wish to review.
5. Press VIEW to view the message content.
6. When viewing the message content, you can press MENU to access the following options:

Send	Send the message immediately.
Edit	Edit the message and send or save as draft.
Delete	Delete the message.
Delete All	Delete all messages in the Draft box.

Send a message from Draft box

1. While viewing the message content, press MENU to display the Draft box menu options.
2. Press SELECT to Send the message.
3. Press SELECT again to confirm or scroll to Save as Draft to save the message in the Draft box and press SELECT.
4. If you select Send, the message will be sent immediately. SMS Sent! will be displayed if the message has been sent successfully.

Edit a Draft message





1. While viewing the message content, press MENU to display the Draft box menu options.
2. Scroll to Edit and press SELECT to start editing.
3. After editing, press OK to confirm message.
4. Refer to steps 5 to 7 in "Write and send new SMS" on page 28 to send the message or select Save as Draft to save the message in the Draft box.

Delete a Draft message

1. While viewing the message content, press MENU to display the Draft box menu options.

2. Scroll  to Delete and press  **SELECT** to confirm deletion.

Delete all Draft messages

1. While viewing the message content, press  **MENU** to display the Draft box menu options.
2. Scroll  to Delete All and press  **SELECT**.
3. Press  **SELECT** again to confirm deletion.

SMS settings

This menu allows you to set up the server for sending and receiving SMS messages. Your SE635 can receive messages from 3 service centers.

Each service center consists of 2 numbers:

- Incoming number
- Outgoing number








The maximum length of an incoming/outgoing number is 24 digits.

The incoming and outgoing numbers of your SE635 are already set to work on your country network. We advise you not to modify these settings. For more details or in case of any problems, please contact your local network provider.

SMS reception

Your SE635 can receive SMS messages from another phone if you have subscribed to the CLI and SMS services from your network provider. By default, SMS reception is set to On so that you can receive SMS messages.

To activate or deactivate the reception of SMS

1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, press  **SELECT** to enter SMS Reception.
2. Scroll  to On or Off and press  **SELECT** to confirm.

 




 


Even if SMS reception is Off, you can still send SMS messages.

SMS Box (only for UK)

In order to send and receive SMS messages, there must at least be 1 SMS Box created. Box 9 with empty password is created by default.

You can create a maximum of 10 SMS boxes (Box 0 to Box 9), and you can protect each box with a password.

To create a new SMS Box (only for UK)

1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to SMS Boxes and press  **SELECT**.
2. Press  **MENU** and press  **SELECT** to Add New Box.

3. Enter box name (maximum 12 characters) and press OK.
4. Enter a password (maximum 8 digits) and press OK.
5. Enter the password again and press OK.

You can choose to leave the password empty. If no password is required, simply press OK when prompted to enter password.

6. Enter the SMS box number and press OK.
If the confirmation password is correct, the new SMS box will be created. A long confirmation beep is emitted and the screen returns to SMS box list.

To change the password of an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box for which you wish to change password and press SELECT.
3. Scroll to Change Passwd and press SELECT.
4. Enter old password and press OK.
5. Enter new password, press OK and enter the new password again for confirmation.
6. Press OK to confirm password change.

To delete an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box you wish to delete and press MENU.
3. Scroll to Delete Box and press SELECT.
4. Enter password (if needed) and press OK to confirm box deletion.


To change the box number of an SMS Box (only for UK)

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Boxes and press SELECT.
2. Scroll to the SMS box you for which wish to change the box number and press MENU.
3. Scroll to Change Box Nr and press SELECT.
4. Enter the new box number and press OK to confirm box number change.

To set outgoing number

 








The incoming and outgoing numbers of your SE635 are already set to work on your country network. We advise you not to modify these settings. For more details or in case of any problems, please contact your local network provider.

1. Press MENU, press SELECT to enter SMS, scroll to SMS Settings and press SELECT, scroll to SMS Center 1, SMS Center 2 or SMS Center 3 and press SELECT.
2. Press SELECT to enter Outgoing Nr..

3. Enter the number and press  **OK** to confirm.
A confirmation beep is emitted.

The maximum length of an outgoing number is 24 digits.

To set incoming number









1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to SMS Center 1, SMS Center 2 or SMS Center 3 and press  **SELECT**.
2. Scroll  to Incoming Nr. and press  **SELECT**.
3. Enter the number and press  **OK** to confirm.
A confirmation beep is emitted.

The maximum length of an incoming number is 24 digits.

Default SMS center

The default SMS center number is 1.

 







To set default SMS center

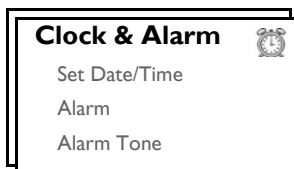
1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to Default Ctr. and press  **SELECT**.
2. Scroll  to SMS center that you wish to set as default center (SMS Center 1, SMS Center 2 or SMS Center 3) and press  **SELECT**.
A confirmation beep is emitted.

Ist ring

When this function is set to Off, the first ring from a voice call will not sound. This is particularly useful in countries where calling line identity is sent after the first ring, so no phones in the house would ring when a message arrives.

To set Ist ring

1. Press  **MENU**, press  **SELECT** to enter SMS, scroll  to SMS Settings and press  **SELECT**, scroll  to Set Ist Ring and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.



Set date and time

1. Press MENU, scroll to Clock & Alarm and press SELECT, press SELECT again to enter Set Date/Time.
2. Enter the current time (HH:MM) and current date (DD/MM/YY) and press SELECT.

Enter the date in Day/Month/Year format and the time in 24-hour format.

3. A confirmation beep is emitted and the screen returns to Clock & Alarm menu.

Once the date and time are set, there will be time & date recovery when the batteries are removed, or when there is a power failure.

Set Alarm

1. Press MENU, scroll to Clock & Alarm and press SELECT, scroll to Alarm and press SELECT.
2. Scroll to Off, On Once or On Daily and press SELECT.
3. If you have selected On Once or On Daily, enter the time for the alarm and press SELECT. A confirmation beep is emitted and the screen returns to previous menu.

The alarm tone and alarm icon will only sound/blink for 1 minute when the alarm time is reached. To mute the alarm tone, simply press any key on the handset.

Alarm tone

1. Press MENU, scroll to Clock & Alarm and press SELECT, scroll to Alarm Tone and press SELECT.
2. Scroll to the desired melody (Melody 1, Melody 2 or Melody 3) to play the melody.
3. Press SELECT to set the alarm tone.

Personal Settings



Handset Tones

Ring Volume

There are 5 ringer volume options (Silence, Low, Medium, High and Progressive). The default level is Medium.

To set ring volume

1. Press **MENU**, scroll to Personal Set and press **SELECT**, press **SELECT** to enter Handset Tones and press **SELECT** again to enter Ring Volume.
2. Scroll to your desired volume level and press **SELECT** to confirm. A confirmation beep is emitted and the screen returns to previous menu.

When Silence is activated, the icon is displayed on the screen.


WARNING When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

Ring Melody

There are 10 ring melodies available on your handset.

To set Ring Melody

1. Press **MENU**, scroll to Personal Set and press **SELECT**, press **SELECT** to enter Handset Tones, scroll to Ring Melody and press **SELECT**.
2. Scroll to your desired melody to play the melody.

3. Press  **SELECT** to set the ring melody.
A confirmation beep is emitted and the screen returns to previous menu.

 

 
 

 




Group Melody

To benefit from this feature, you must subscribe to the Caller Line Identification service. See "Caller Line Identification" on page 21.

This menu enables you to select and set the melodies to be played when there is an external incoming call from a contact whose name is stored in your phonebook and is part of a group. You can associate 1 ring melody to each group.

There are three phonebook groups (Group A, B, C) available for you to organize your contacts. Each group can be assigned a unique melody.

 

 
 




To set Group Melody

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to Group Melody and press  **SELECT**.
2. Scroll  to the group for which you wish to set melody and press  **SELECT**.
3. Scroll  to the desired melody to play the melody.
4. Press  **SELECT** to set the group melody.
A confirmation beep is emitted and the screen returns to previous menu.

Key Beep

A single beep is emitted when a key is pressed. You can enable or disable this key beep. By default, the key beep is On.

 

 
 

 


To set key beep On/Off

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to Key Beep and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

SMS Tone

A tone is emitted when a new SMS is received. You can enable or disable this SMS Tone. By default, SMS tone is On.





 


To set SMS tone On/Off

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, press  **SELECT** to enter Handset Tones, scroll  to SMS Tone and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Wallpaper

This feature allows you to select the wallpaper to be displayed in stand-by mode. There are 4 wallpapers pre-installed on your phone. Please see "Default settings" on page 17 for the default wallpaper.

 



 

 
To set wallpaper

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Wallpaper and press  **SELECT**.
2. Scroll  to your desired wallpaper and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Contrast level

There are 3 contrast level options (Level 1, Level 2 or Level 3). The default contrast level is Level 2.

 

 

 


To set contrast level

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Contrast and press  **SELECT**.
2. Scroll  to your desired contrast level (Level 1, Level 2 or Level 3) and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Screensaver

Screensaver will be activated automatically after 1 minute in stand-by mode.






To set screensaver

 
1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Screensaver and press  **SELECT**.
2. Scroll  to On or Off and press  **OK** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Handset Name

You can name the handset and display the handset name in stand-by mode. The default handset name of your handset is PHILIPS.

To rename the handset

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Handset Name and press  **SELECT**.

 

 




2. Edit the handset name and press  **OK** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Maximum length of the handset name is 12 characters and the default handset name is PHILIPS.

Auto Pick-up

This function enables you to answer a call automatically by simply lifting the handset from the base station. By default, the Auto Pick-up feature is **Off**.

 

 




To set Auto Pick-up mode

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Auto Pick-up and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Auto Hang-up

This function enables you to end a call automatically by simply replacing the handset on the base station. By default, the Auto Hang-up feature is **On**.

 

 



 
To set Auto Hang-up mode

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Auto Hang-up and press  **SELECT**.
2. Scroll  to On or Off and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Language

Your SE635 can support different display languages.

To change the language

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Language and press  **SELECT**.
2. Scroll  to your desired language and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.







Babysit mode


You must have at least 2 handsets registered to your base station to be able to use this feature (see page 44 "To register an additional handset").

This feature allows you to monitor, e.g. the baby's room. Place the handset in the room to be monitored. If the sound level around the microphone of the handset exceeds a certain threshold, the handset can automatically call another handset registered on the same base station.


To use the Babysit feature you need to activate it (e.g. on handset 1) and enter the number of the handset to be called (e.g. handset 2) in the event that there are noises in the monitored room. Place the handset which is in Babysit mode (e.g. handset 1) in the room to be monitored. If this handset detects a sound level greater than a certain threshold, it will automatically initiate an internal call to the selected handset (e.g. handset 2).

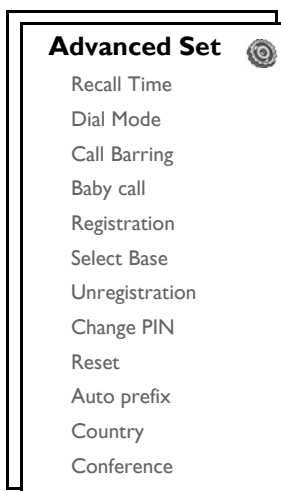
To activate Babysit mode

1. Press  **MENU**, scroll  to Personal Set and press  **SELECT**, scroll  to Babysit mode and press  **SELECT**.
2. Enter the number of the handset you wish to call to and press  **OK** to activate.

In Babysit mode, all keys are deactivated except for  key. Babysit mode is displayed on the screen when this function is activated and the handset cannot make or receive calls.

To deactivate Babysit mode

1. Press , select Off and press  **OK**.



Recall Time

Recall time (or dial delay) is the time delay by which the line will be disconnected after you press key. It can be set to short, medium or long.

The default value of recall time that is preset in your SE635 should be the best suited for your country network and therefore you should not need to change it.

To set recall time

1. Press MENU, scroll to Advanced Set and press SELECT and press SELECT to enter Recall Time.
2. Scroll to select Short / Medium / Long and press SELECT to confirm. A confirmation beep is emitted and the screen returns to previous menu.

This setting is useful when using network services. The use of some services accessed with [+], [+], [+] (call waiting, call forward...) will depend on your recall time setting. Please contact your network provider for more details on this feature.

Advanced Settings

Dial Mode

The default value for dial mode that is preset in your SE635 should be the best suited for your country network and therefore you should not need to change it.

There are 2 dial modes: Tone or Pulse.

To set dial mode

1. Press **MENU**, scroll to Advanced Set and press **SELECT**, scroll to Dial Mode and press **SELECT**.
2. Scroll to Tone or Pulse and press **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Call Barring

Call barring enables you to restrict selected handsets from dialling a phone number beginning with certain numbers. You can set up to four different barring numbers, with each number containing up to 4 digits.

If you have modified the Master PIN before and it is not the default 0000, you will be required to enter the Master PIN before you can activate or deactivate call barring mode, add or modify call barring number.

To activate/deactivate Call Barring mode

1. Press **MENU**, scroll to Advanced Set and press **SELECT**, scroll to Call Barring and press **SELECT**.
2. Enter the Master PIN when prompted and press **OK** to confirm.
3. Press **SELECT** to enter Barring Mode.
4. Scroll to On or Off and press **SELECT** to confirm.
A confirmation tone is emitted and the screen returns to previous menu.

To modify Call Barring number

1. Press **MENU**, scroll to Advanced Set and press **SELECT**, scroll to Call Barring and press **SELECT**.
2. Enter the Master PIN when prompted and press **OK** to confirm.
3. Scroll to Barring Number and press **SELECT**.
4. Scroll to Number 1, Number 2, Number 3 or Number 4 and press **SELECT** to confirm.
5. Enter a maximum of 4 digits and press **OK** to confirm.
A confirmation beep is emitted and the screen returns to stand-by mode.

If a restricted number is dialled, the call will not be connected. When this happens, the phone emits an error tone and returns to stand-by mode.

Baby Call

When activated, the Baby Call feature enables you to dial a number by pressing any key on your handset. This feature is very useful for direct access to emergency services.

You can enter up to 24 digits for baby call number.

If you have modified the Master PIN before and it is not the default 0000, you will be required to enter the Master PIN before you can activate or deactivate Baby Call mode or change Baby Call number.

To activate Baby Call mode

1. Press **MENU**, scroll to Advanced Set and press **SELECT**, scroll to Baby call and press **SELECT**.
2. Enter the Master PIN when prompted and press **OK** to confirm.
3. Press **SELECT** to enter Mode.
4. Scroll to On and press **OK** to confirm.

When Mode is activated but the Baby Call number is not set yet, your handset will prompt you to enter a number.

5. Enter the Baby Call number and press **OK** to confirm.
A confirmation message will be displayed on the screen.

To deactivate Baby Call mode

1. Long press **MENU** (when Baby Call mode has been activated before).
2. Scroll to Off and press **SELECT** to confirm.

To change Baby Call number

1. Press **MENU**, scroll to Advanced Set and press **SELECT**, scroll to Baby call and press **SELECT**.
2. Enter the Master PIN when prompted and press **OK** to confirm.
3. Scroll to Number and press **SELECT**.
4. The last stored Baby Call number is displayed (if any).
5. Enter the new Baby Call number and press **OK** to confirm.
A long confirmation beep is emitted and the screen returns to previous menu.


Registration

The procedures described below are the procedures that you will find in your SE635 handset. The procedures may vary according to the handset you want to register. In this case, please refer to the manufacturer of the additional handset.

 
 
 

Additional handsets must be registered to the base unit before you can use them. Up to 5 handsets can be registered to one base station.

The Master PIN is required before you can register or unregister handsets. The default PIN is 0000.

To register an additional handset

1. On the base station, press and hold  for 3 seconds in stand-by mode. After that, the registration procedure has to be done within 1 minute.

Within 1 minute, the base station is able to accept registration from a handset. If no key is pressed within 10 seconds, the registration procedure will be aborted.

2. At the same time, on the handset, press  **MENU**, scroll  to **Advanced Set** and press  **SELECT**, scroll  to **Registration** and press  **SELECT**.
3. Enter the Master PIN when prompted and press  **OK** to start registration.
4. Press  to select the Base to be registered to and press  **OK** to confirm.

If the base is found and the PIN is correct, the unused handset numbers will be displayed and you can select a handset number by entering the number directly.





 

 
If the PIN is incorrect, Incorrect PIN will be displayed and the handset returns to stand-by mode.

A long confirmation tone is emitted to indicate successful registration and the screen returns to stand-by mode.

Select Base

One SE635 handset can register up to 4 different SE635 Base stations. By default, the handset will register to BASE 1. If you select Any Base, the handset will register to the nearest base station.

To manually select a base station

1. Press  **MENU**, scroll  to **Advanced Set** press  **SELECT**, scroll  to **Select Base** and press  **SELECT**.
2. Scroll  to the desired base station and press  **OK** to confirm.
3. The handset will start searching for the base station. If the selected base is found, a long confirmation tone is emitted.

Unregistration

To unregister a handset

1. Press **MENU**, scroll to **Advanced Set** and press **SELECT**, scroll to **Unregistration** and press **SELECT**.
2. Enter the Master PIN when prompted and press **OK** to confirm.
3. Press on the handset keypad the handset number corresponding to the handset that you wish to unregister.

If there are no key presses within 15 seconds, the unregistration procedure will be aborted and the handset returns to stand-by mode.

A long confirmation beep is emitted to indicate successful unregistration and the screen shows **Unregistered**.

Change Master PIN

The Master PIN is used for setting call barring/baby call number and for registration/unregistration of handsets. The default Master PIN number is 0000. The length of the PIN is 4 digits. This PIN is also used to protect the settings of your handset. Your handset will prompt you whenever the PIN is required.

To change Master PIN

1. Press **MENU**, scroll to **Advanced Set** and press **SELECT**, scroll to **Change PIN** and press **SELECT**.
2. Enter the current Master PIN when prompted and press **OK** to confirm. The PIN entered will be shown as asterisks (*) on the screen.

If an incorrect PIN is entered, **Incorrect Pin** will be displayed and the screen returns to stand-by mode.

If your PIN number is the default 0000, step 2 is skipped.

3. Enter new PIN and press **OK**.
4. Enter new PIN again and press **OK** to confirm PIN change.
A confirmation tone is emitted, the message **New PIN Stored** appears and the screen returns to previous menu.

If the Master PIN is modified, you will be required to enter the Master PIN before you can modify Call Barring and Baby Call settings.

Advanced Settings

Reset

Reset to default settings

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Reset and press SELECT.
2. Enter the Master PIN when prompted and press OK.

If your PIN number is the default 0000, step 2 is skipped.

3. Scroll to Yes and press SELECT.
A confirmation beep is emitted, and the unit is reset to its default settings (please see "Default settings" on page 17).

The WELCOME mode will appear again after master reset.

Auto Prefix

The maximum length of an auto prefix number is 5 digits. Once the number is set, it will be automatically inserted at the beginning of each number that will be dialled.

To set auto prefix number

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Auto prefix and press SELECT.
2. The last stored auto prefix number is displayed (if any).
3. Enter the number and press SELECT to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Country Setting

The availability of this menu is dependent on your country.

You can select another country different from the one chosen during Welcome mode.

1. Press MENU, scroll to Advanced Set and press SELECT, scroll to Country and press SELECT.
2. Enter the Master PIN when prompted and press OK to confirm.

You need to enter the Master PIN even if your PIN is 0000 (default PIN).

3. Scroll  to the country of your choice and press  **SELECT** to confirm.

 

 



 
Once the country is selected, the default line settings for the selected country will be applied to the phone automatically (e.g. Recall time, Dial mode, Language, etc).

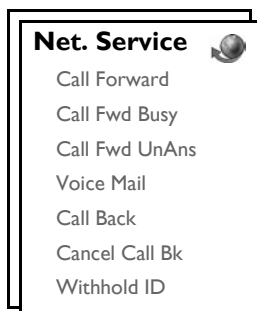
Conference Mode

When Conference mode is activated, you can initiate a three-party conference call with a second handset registered to your base station automatically if the second handset takes the line when there is already an external call in progress.

The default setting for this mode is Off.

To activate/deactivate conference mode

1. Press  **MENU**, scroll  to **Advanced Set** and press  **SELECT**, scroll  to **Conference** and press  **SELECT**.
2. Scroll  to **On** or **Off** and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.



This menu provides a convenient means for you to access, activate or deactivate some network services that are **country/subscription** dependent. Contact your network provider for more information about these services.

The default numbers and values that are preset in your SE635 should be the best suited for your country network and therefore you should not need to change them.

Call Forward

There are 3 call forwarding options available: Unconditional Call Forwarding, When Busy and When Unanswered.

Set up Call Forward number

1. Press MENU, scroll to Net. Service and press SELECT.
2. Scroll to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press SELECT.
3. Scroll to Settings and press SELECT to enter the number for forwarding.
4. Press OK to confirm.


 



Activate Call Forward

1. Press MENU, scroll to Net. Service and press SELECT.
2. Scroll to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press SELECT.
3. Press SELECT to Activate.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press to return to stand-by mode.

When this feature is activated, depending on the call forwarding option you have set, your incoming calls will be forwarded to the number of your choice.

Deactivate Call Forward





 

 

 

1. Press MENU, scroll to Net. Service and press SELECT.

2. Scroll  to the type of call forwarding option you wish to set (Call Forward / Call Fwd Busy / Call Fwd UnAns) and press  **SELECT**.
3. Scroll  to Deactivate and press  **SELECT** to confirm.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press  to return to stand-by mode.





 

 
 

Voice Mail

This feature allows the caller to leave a voice message when you are unable, or do not wish to take a call yourself. The availability of this feature is dependent on your country and your subscription with your network provider. Charges often apply for you to retrieve messages, as these are stored by the network rather than on the handset itself. Contact your network provider for more information about this feature.

Set up Voice Mail number









1. Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Voice Mail and press  **SELECT**.
2. Scroll  to Voice Mail 1 or Voice Mail 2 and press  **SELECT**.
3. Scroll  to Settings and press  **SELECT**.
4. Modify the voice mail number and press  **OK**.

Activate Voice Mail






 
1. Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Voice Mail and press  **SELECT**.
2. Scroll  to Voice Mail 1 or Voice Mail 2 and press  **SELECT**.
3. Press  **SELECT** to Activate.
4. The number string for that selected service will be dialed.
5. When the number has been dialed, press  to return to stand-by mode.


Call Back

Setting

1. Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Call Back and press  **SELECT**.
2. Scroll  to Settings and press  **SELECT**.
3. Enter the required number for call back and press  **OK**.

 

 




 
Activate Call Back

1. Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Call Back and press  **SELECT**.
2. Press  **SELECT** to Activate.
3. The number string for that selected service will be dialed.

 

 




- When the number has been dialled, press  to return to stand-by mode.

Cancel Call Back

Setting





 

 
 
- Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Cancel Call Bk and press  **SELECT**.
- Scroll  to Settings and press  **SELECT**.
- Enter the required number for cancelling of call back and press  **OK**.

Activate Cancel Call Back





 


- Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Cancel Call Bk and press  **SELECT**.
- Press  **SELECT** to Activate.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.

Withhold ID





 

 

Setting

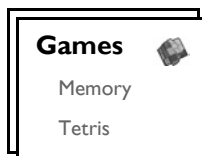
- Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Withhold ID and press  **SELECT**.
- Scroll  to Settings and press  **SELECT**.
- Enter the required number for withholding ID and press  **OK**.

Activate Withhold ID

- Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Withhold ID and press  **SELECT**.
- Press  **SELECT** to Activate.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.

Deactivate Withhold ID

- Press  **MENU**, scroll  to Net. Service and press  **SELECT**, scroll  to Withhold ID and press  **SELECT**.
- Scroll  to Deactivate and press  **SELECT** to confirm.
- The number string for that selected service will be dialled.
- When the number has been dialled, press  to return to stand-by mode.



Memory

The objective of this game is to find and match different pairs of graphics in the shortest possible time using your memory. To win, you have to complete matching all 8 pairs of graphics in a 4x4 matrix.

To start the game

1. Press MENU, scroll to Games and press SELECT, press SELECT to enter Memory game.
2. An instruction screen is displayed.

Press / / / keys to move up / down / left / right respectively.
Press to select.

3. Press SELECT or press to start the game.
4. To exit from the game, press .

Tetris

You can rotate each shaped block as they fall such that they fit neatly into horizontal blocks. The more blocks you can gather within the same level, the more you will score.

To start the game

1. Press MENU, scroll to Games and press SELECT, scroll to Tetris and press SELECT.
2. An instruction screen is displayed.

Press / / / keys to rotate / move left / move right / move down respectively.

3. Press SELECT to start the game.
4. To exit from the game, press .

EN

Telephone Answering Machine (TAM)

Answer Machine

Play

Delete All

Record Memo

Answ. Mode

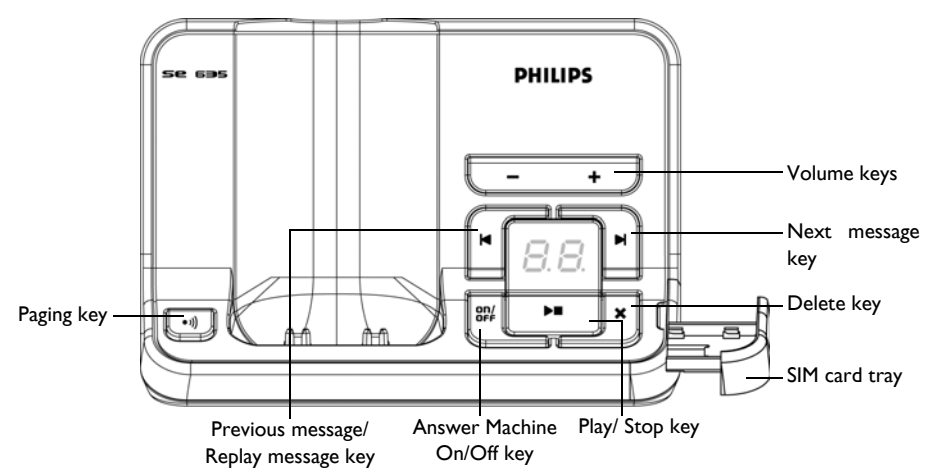
Ans. On/Off

Settings

Voice Lang.

Your SE635 features an answering machine that records unanswered calls when it is activated. The answering machine can store up to 99 messages within the maximum recording time of 30 minutes.






Your SE635 base station answering machine control keys



	Page handset. <i>Long press</i> to start registration procedure.
	<i>Long press</i> to turn the answering machine On/Off.
	Increase speaker volume during message playback. Reduce speaker volume during message playback.

 


 
Telephone Answering Machine (TAM)












 


 

EN

	Delete current message during message playback. <i>Long press</i> to delete all messages when TAM is in standby mode (unread messages will not be deleted).
	Play phone messages (the first recorded will be played first). Stop message playback.
	Go to previous message if pressed within 1 second of current message playback. Replay current message if pressed after 1 second of current message playback.
	Skip to the next message during message playback.
LED Message counter	No display: Indicates that the answering machine is switched off. Blinking: Indicates number of new messages. Steady: Indicates number of old messages. 2 bars flashing: Indicates that there is no more memory left. Indicates the volume level (L0 - L9) when  is pressed. Indicates the current message number during playback.

Play

Playback of new messages via handset

1. Press  MENU, scroll  to Answer Machine and press  SELECT, press  SELECT to Play.
2. The new messages will be played via the loudspeaker. During playback, you can:

 




 
Adjust volume	Press  key.
Stop playback	Press  or  to stop and return to Play menu.
Repeat	Press  SELECT, scroll  to select Repeat and press  SELECT.
Next message	Press  SELECT, scroll  to select Next Message and press  SELECT.
Previous message	Press  SELECT, scroll  to select Prev. Message and press  SELECT.
Delete message	Press  SELECT, scroll  to select Delete and press  SELECT.
Switch the playback to earpiece	Press  key.

Telephone Answering Machine (TAM)





 

TIP You can also playback messages by pressing  key in stand-by mode, scroll  to Answer Machine and press  **SELECT**, press  **SELECT** again to Play.

Playback of old messages via handset

Old messages can only be played if there are no new messages. The first recorded message will be played first and the next message will be played automatically until there are no more messages.

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, press  **SELECT** to enter Play.
2. Press  **OK**, the first recorded message will start to play until the last recorded message. During message playback, you can press  **MENU** to select the available options. (Please refer to the options available under "Playback of new messages via handset" on page 53.)



 

 
 
 
Delete All

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Delete All and press  **SELECT**.
2. Press  **SELECT** again to confirm deletion of all your messages.

 




Unread messages will not be deleted.

Memo recording

You can record a reminder message for yourself or for anyone else who uses your answering machine. The answering machine treats a memo recording the same way it treats any incoming message, and the new message indicator will flash accordingly

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Record Memo and press  **SELECT**.
2. Press  **START** to start recording the memo.
3. Press  **STOP** to end the recording.

Answering machine mode

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Answer Mode and press  **SELECT**.
2. There are 2 answering modes available: Answer Only or Answ. & Record. The current selected mode is highlighted.


 
Telephone Answering Machine (TAM)

EN


3. To change the answering mode, scroll  to your selection and press  **SELECT**.

If you select Answer Only mode, the answering machine will only pick up an incoming call after a certain number of rings but will not record any message. Your correspondent will be prompted to call back later.

Set Outgoing Messages (OGM)

1. Once the answering mode is set, you can choose to set your outgoing message as Predefined or Personalised.
2. The current selected mode is highlighted.
3. To change it, scroll  to your selection and press  **SELECT**.


 
Predefined Outgoing Messages

1. If you set your OGM as Predefined, you can press  **SELECT** to play the OGM.
2. The predefined OGM will be played and the screen will return to previous menu once it has finished playing.

Personalised Outgoing Messages

1. If you set your OGM as Personalised, the following options are available:

 
 
Play message	Playback existing outgoing message (if any).
Record message	Record your outgoing message.

2. To play the existing OGM, scroll  to Play message and press  **SELECT**.
3. The existing OGM will be played and the screen will return to previous menu once it has finished playing.

If there is no existing OGM, the screen will display Empty and return to previous menu.

4. To record your outgoing message, scroll  to Record message and press  **SELECT**.

The maximum length of an outgoing message is 40 seconds.

5. Press  **START** to start recording and press  **STOP** to end the recording.
The recorded message will be played and the screen will return to the previous menu once it has finished playing.

When you record an outgoing message, the previous one is overwritten automatically.

Telephone Answering Machine (TAM)

Answer On/Off

Turn answering machine On/Off

1. Press MENU, scroll to Answer Machine and press SELECT, scroll to Ans. On/Off and press SELECT.
2. Scroll to On or Off and press SELECT to confirm.

Answering Machine settings

1. Press MENU, scroll to Answer Machine and press SELECT, scroll to Settings and press SELECT.

Ring delay

This is the number of rings before the answering machine answers and starts playing your greeting. You can set the answering machine to start playing your greeting after 3 - 8 rings or Toll Saver. The default ring delay is 4.

1. Press MENU, scroll to Answer Machine and press SELECT, scroll to Settings and press SELECT, press SELECT to enter Ring delay.
2. Scroll to your desired ring delay setting (3 - 8 rings or Toll Saver) and press SELECT to confirm.

Toll Saver mode can save you the cost of a long-distance call when you check your messages remotely. If there are new messages in your answering machine, the outgoing message will start playing after 3 rings. If there are no new messages, the outgoing message will be played after 5 rings. Hence, if you want to check if you have any messages without incurring call charges, you can hang up the call after the 4th ring.

Remote control access

This feature lets you check your messages, or otherwise operate your answering machine, by calling the answering machine and entering a remote access code (which is the same as your Master PIN code) on a tone dialling phone.

Remote control access is only possible if the Master PIN code has been changed (see page 45) and is NOT the default (0000).

Activate/Deactivate remote access

1. Press MENU, scroll to Answer Machine and press SELECT, scroll to Settings and press SELECT, scroll to Remote access and press SELECT.
2. The current selected option is highlighted.

Telephone Answering Machine (TAM)

EN


 
 
 
 
3. Scroll  to Activated or Deactivated and press  **SELECT** to confirm.

Remote access code is to prevent unauthorised access of the answering machine from external callers.
The remote access code is the same as the Master PIN of the phone.

Controlling the answering machine from an external call

 

 
1. From your external phone, dial home. The answering machine answers and starts playing your greeting message.
2. Within 4 seconds, enter the remote access code (same as your Master PIN code) and press # key. If the code is not correct, the answer machine will drop the line immediately.
3. If the access code is correct, a long beep tone can be heard. If there are new messages, all the new messages will be played immediately and then stop when there are no more new messages.
If there are no new messages, the answering machine will not play any messages.

The following table indicates how to access the below features during remote access procedure:

 

 

 

 

 
	Replay current message or go to previous message.
	Play old messages or stop them.
	Go to next message.
	Delete current message.
	Turn the answering machine on/off.

Call screening

Handset call screening

 
If Handset Call screening is set to On, when there is an incoming message, you can press  **MENU** to listen to the message. If you decide to pick up the call, press . Once the call has been picked up, the recording will stop automatically. If you press , the call will be cut off and the recording will be ignored.

Set Handset Call Screening

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Settings and press  **SELECT**, scroll  to HS Screening and press  **SELECT**.
2. The last selected option is highlighted.
3. Scroll  to On or Off and press  **SELECT** to confirm.

 








If you have multiple handsets, only 1 handset can enable handset call screening for each call.

Base Call Screening

If Base call screening is set to On, you can hear the incoming message via the loudspeaker of the base station.
If you press , the call will be cut off and the recording will be ignored.

Telephone Answering Machine (TAM)

Set Base Call Screening








1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Settings and press  **SELECT**, scroll  to Base Screening and press  **SELECT**.
2. The last selected option is highlighted.
3. Scroll  to On or Off and press  **SELECT** to confirm.

By default, the call screening on base unit is activated and call screening on handset is deactivated.



Voice Language

This menu allows you to change the language of the predefined OGM. The availability of this menu and the language options available are country dependent.

To set voice language

1. Press  **MENU**, scroll  to Answer Machine and press  **SELECT**, scroll  to Voice Lang. and press  **SELECT**.
2. The current selected language is highlighted.
3. Scroll  to your preferred language and press  **SELECT** to confirm.
A confirmation beep is emitted and the screen returns to previous menu.

Troubleshooting of the phone

Problem	Causes	Solution
The  icon is not blinking when the handset is placed on the base	<ul style="list-style-type: none"> • Bad battery contact • Dirty contact • Battery is full 	<ul style="list-style-type: none"> • Move the handset slightly • Clean the battery contact with a cloth moistened with alcohol • No need to charge
No dialling tone	<ul style="list-style-type: none"> • No power • Batteries are empty • You are too far from the base station • Wrong line cable • Line adaptor (when needed) is not connected to the line cord 	<ul style="list-style-type: none"> • Check the connections. Reset the phone: unplug and plug back in the mains • Charge the batteries for at least 24 hours • Move closer to the base station • Use the line cable provided • Connect the line adaptor (when needed) to the line cord
Poor audio quality	<ul style="list-style-type: none"> • You are too far from the base station • The base station is too close to electrical appliances, reinforced concrete walls or metal doorframes 	<ul style="list-style-type: none"> • Move closer to the base station • Move the base station at least one metre away from any electrical appliances
The  icon is blinking	<ul style="list-style-type: none"> • Handset is not registered to the base station • The handset is too far from the base station 	<ul style="list-style-type: none"> • Register the handset to the base station • Move closer to the base station
The copy from my mobile phone SIM card to SE635 phonebook is not complete.	Only phonebook entries from your mobile phone SIM card will be transferred; the phonebook entries that are stored on your mobile phone memory will not be transferred.	Transfer the phonebook entries that are on your mobile phone memory to your mobile phone SIM card and then to your SE635.

Troubleshooting

Problem	Causes	Solution
<p>The handset displays "not available"</p> <ul style="list-style-type: none"> when attempting to add another handset to the base station when using a handset 	<ul style="list-style-type: none"> The procedure to add a handset has failed Maximum number of handsets (5) has been reached Base station is already busy with another handset 	<ul style="list-style-type: none"> Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset (see page 44) Remove and place back the handset batteries Unregister a handset so as to register the new handset Wait until it is available
Noise interference on your radio or television	Your SE635 base station or mains power pack are too close to electrical appliances	Move the power pack or base station as far away as possible
Caller Line Identification (CLI) service does not work	The service is not activated	Check your subscription with your network operator
No ring tone	The ring tone is deactivated	Increase the volume
A phonebook entry cannot be stored	The phonebook is full	Delete an entry to free memory
Cannot receive new SMS	<ul style="list-style-type: none"> SMS storage space is full Wrong SMS settings 	<ul style="list-style-type: none"> Delete old SMS Check your SMS settings (see page 32)
Cannot send or receive new SMS	<ul style="list-style-type: none"> The outgoing or incoming SMS center numbers are not set or are wrong You have no subscription Another SMS-enabled phone is also on your line There is a problem of compatibility between operators The identity is withheld 	<ul style="list-style-type: none"> Refer to "SMS settings" on page 32 Contact your provider for more information Deactivate the SMS reception mode on one of the device Contact your provider for more information Show identity (see "Withhold ID" on page 50)

Troubleshooting of the Answering Machine

Problem	Causes	Solution
The answering machine does not record messages	<ul style="list-style-type: none"> • Memory is full • The ANSWER ONLY mode has been activated 	<ul style="list-style-type: none"> • Delete old messages • Activate Answ. & Record mode (see "Answering machine mode" on page 54)
Remote control access does not work	<ul style="list-style-type: none"> • Remote control access has not been activated 	<ul style="list-style-type: none"> • Activate Remote control access (see "Remote control access" on page 56)
Cannot record outgoing message	<ul style="list-style-type: none"> • Memory is full 	<ul style="list-style-type: none"> • Delete old messages
The SE635 hangs up during remote access	<ul style="list-style-type: none"> • You have entered the wrong access code • You have not changed your Master PIN code • You have taken more than 4 seconds to enter the Master PIN code 	<ul style="list-style-type: none"> • Enter the correct access code • To prevent unauthorised access to your answering machine, your Master PIN code must be changed. To change PIN code, see page 45 • Enter the Master PIN code within 4 seconds
The answering machine stops automatically	<ul style="list-style-type: none"> • Memory is full • Message exceeds 3 minutes 	<ul style="list-style-type: none"> • Play and delete old messages • Messages must not exceed 3 minutes

Electric, Magnetic and Electromagnetic Fields ("EMF")

1. Philips Royal Electronics manufactures and sells many consumer oriented products which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
2. One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. Philips is committed to develop, produce and market products that cause no adverse health effects.
4. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Conformity

The Declaration of conformity is available on www.p4c.philips.com.

Hereby, Philips Consumer Electronics, BLC P&ACC, declares that the SE635x is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Recycling and disposal

Disposal instructions for old products

The WEEE Directive (Waste Electrical and Electronic Equipment: 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and give utmost protection to the environment.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Do not dispose of your old product in your general household waste bin. Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol:

Use one of the following disposal options:

1. Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities
2. If you purchase a replacement product, return your old product, in its entirety, to the retailer. He should accept it as required by the WEEE Directive.

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery & recycling system.



The labelled packaging material is recyclable.

A

- Accessories 5
- Alarm 35
- Alarm tone 35
- Answer a call 15, 19
- Answering machine 52
- Auto Hang-up 39
- Auto Pick-up 39
- Auto Prefix 46

B

- Baby Call 43
- Babysit mode 40
- Backlight 16
- Basic operations 12
- Battery level 14

C

- Call 42
- Call Back 49
- Call Barring 42
- Call Forward 48
- Call log 18, 26
- Call waiting 21
- Caller Line Identification 21
- Calls in-progress 19
- Charge battery 13
- Clock & Alarm 35
- Conference call 21
- Conformity 62
- Connect Base Station 12
- Contrast 38
- Copy phonebook from SIM card 24
- Country Setting 47

D

- Date & time 35
- Date and time 15
- Default SMS center 34
- Default settings 17
- Delete SMS message 30
- Delete call log 26
- Delete phonebook 23
- Dial Mode 41
- Direct access memory 24
- Direct dialling 18
- Draft box 31

E

- Earpiece volume 19
- Edit Draft message 31
- Edit phonebook 23
- End a call 15, 19
- Event LED 16

F

- Forward SMS message 30

G

- Group melody 37

H

- Handset Name 38
- Handset Tones 36
- Handsfree answering 19

I

- Icons & symbols 8
- Inbox 29
- Incoming number 34
- Install battery 13, 14, 15, 17
- Intercom 20
- Intrusion Mode 47

K

- Key Beep 37
- Keypad lock 15
- Keypad lock/unlock 15
- Keypad unlock 15

L

- Language 39
- Loudspeaker 19
- Loudspeaker mode 19
- Loudspeaker volume 20

M

- Main features 9
- Make a call 15
- Master PIN 45
- Memory 51
- Menu navigation 11
- Mute 19
- Mute handset 19

N

- Noise interference 60

O

- Other network services 50
- Out of range 14
- Outgoing number 33
- Overview of the base station 9
- Overview of the handset 6

P

- Paging 15
- Personalize 36
- Phonebook 18, 22
- Predialling 18

R

- Recall Time 41
- Recycling and disposal 62
- Redial list 18, 26
- Registration 44
- Reply SMS message 30
- Reset Unit 46

- Ring Melody 36
- Ring Volume 36

S

- SMS 28
- SMS Boxes 32
- SMS Tone 37
- SMS reception 32
- SMS settings 32
- Save redial list 27
- Screensaver 38
- Select Base 44
- Send SMS 28
- Stand-by mode 15
- Store a contact 22
- Switch handset on/off 15

T

- Tetris 51
- Text and number entry 17
- Transfer an external call 20
- Transfer phonebook 25

U

- Unmute 19
- Unregister 45

V

- Voice Mail 49

W

- Wallpaper 38
- Withhold ID 50
- Write a SMS 28



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3111 285 26743

