 


PHILIPS

K song speaker

2000 series

TAS2508

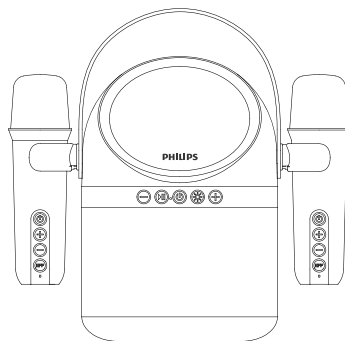

User manual

Visit the following websites to register your product and get support
www.philips.com/support

1 Important information

Please read and understand all instructions before using this product. Damage caused by failure to follow instructions is not covered by the warranty.

Important safety instructions

- Make sure the supply voltage matches the voltage on the back or bottom of the product.
- Never expose the speaker to leaks or splashes.
- Do not place any sources of danger on the speaker (e.g. objects containing liquids, lit candles).
- Speakers should be kept away from direct sunlight, open flames or high temperatures.
- If the type of battery replacement is incorrect, there is a risk of explosion.
- If the plug of the in-line adapter is used as a disconnect device, the disconnect device should be ready to use.
- Be sure to leave enough space around the speaker for ventilation.
- Please use the speaker safely in an environment between 0° and 45.
- Only accessories specified by the manufacturer can be used.

Battery safety precautions

- Improper battery replacement is a risk of explosion. It can only be replaced with the same or equivalent model.
- Batteries (battery packs or installed batteries) should not be exposed to direct sunlight near an open flame or similar heat source.
- Batteries exposed to extremely high or low temperatures during use, storage or transportation, as well as low air pressures at high altitudes, can pose safety hazards.

warn

 
- Do not replace the wrong type of battery that may break the protection (for example, some lithium battery types).
- Throwing the battery into a fire or mechanically breaking or cutting the battery with a hot oven can cause an explosion.
- Leaving the battery in extremely high temperatures or very low air pressure may cause flammable liquids or gases to explode or leak.

2 Product list

※When purchasing, please check that the following items are complete

Speaker *1 Microphone User Manual *1 Warranty Card *1

3 Product introduction

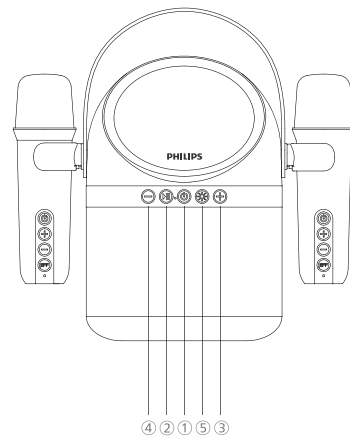

Speaker button operation

① Power on and off button

·When the power is turned off, press and hold for 1 second to turn it on
·In the power-on state, press and hold for 3 seconds to shut down
·Short press mode switching: (BT mode, AUX mode, U disk mode, TF card mode)

② Pause/play key

·Short press, music pause/play
·Long press to disconnect Bluetooth mode
·Quick short press three times to play the previous song
·Quick short press twice to play the next song

③ Volume plus

 
·Short press to increase the volume by one level
·Long press, the volume increases continuously

④ Volume down


·Short press to reduce the volume by one level
·Long press, the volume decreases continuously

⑤ Light keys

·Short press to switch the lighting effect
·Long press to turn the light effect on/off

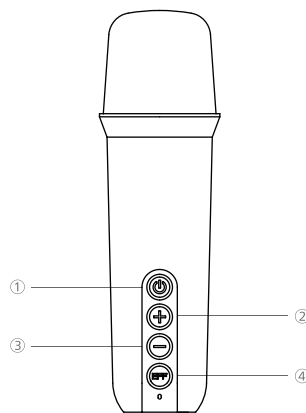

5



Philips and the Philips shield logo are trademarks of Koninklijke Philips NV and may only be used with permission from Koninklijke Philips NV.

This product is manufactured and sold by TPV Audiovisual (Shenzhen) Co., Ltd. or its subsidiaries, and TPV Audiovisual Technology (Shenzhen) Co., Ltd. is the guarantor of this product

Microphone key operation

① Power on and off button

·In the shutdown state, press and hold for 3 seconds to turn it on
·In the power-on state, press and hold for 3 seconds to shut down
·Mode adjustment: short press microphone adjustment, accompaniment mode, reverb adjustment (default microphone mode at startup)

② Volume plus

·Short press to increase the volume by one level
·Long press, the volume increases continuously (maximum tone)
·Reverb mode: Volume increases by one level
·Accompaniment mode: Volume increased by one level

③ Volume down

·Short press to reduce the volume by one level
·Long press, the volume decreases continuously
·Reverb Mode: Volume down one level
·Accompaniment mode: Volume down one level

④ EFF mode key

·Long press to eliminate vocal on/off
·Double-click, Talk Simple/Talk
·Short press, magic sound switching: professional mode, K song mode, male to female voice, female to male voice, Warcraft sound mode, doll sound mode (boot default professional mode)

4 Bluetooth connection

After turning on, the indicator flashes, and the speaker automatically enters Bluetooth mode and enters the state of waiting for pairing (if there is a matching device, the speaker will automatically connect). Turn on the Bluetooth function of mobile phones, tablets and other devices and click Search. When the pairing name "Philips S2508" appears in the list, select the pairing name and connect, the indicator light is solid after the connection is successful. Once connected to a Bluetooth device, you can play music on Bluetooth devices such as mobile phones and tablets. When the speaker is turned on, Bluetooth is not successfully connected to the device or the audio from the connected device is not played, and no button is pressed, the speaker will automatically shut down after 10 minutes.

5 charge

·When the battery is low, the speaker will prompt a low battery every 60 seconds with a tone, and when you hear a bass tone, charge the speaker.
·Use the Type-C charging cable to insert the Type-C charging port of the speaker, and the other end is connected to a charging device that can provide DC voltage of 5V and current of 1000mA, the speaker will automatically enter the charging mode When charging, the charging indicator light is always on, and the indicator light is off after charging.

6 FAQ/Troubleshooting

- Automatic shutdown after power on: Please use it after charging when the power supply is insufficient.
- Automatic shutdown or restart: The voltage is too low due to insufficient battery power, please use after charging.
- Mute speaker: Check that the volume is on, or restart the speaker.

Bluetooth can not connect: please check whether the speaker enters the Bluetooth mode, if the speaker is connected to other devices, you can force disconnect the device by long pressing the play button on the speaker, enter the mode to match: finally confirm whether the Bluetooth device such as mobile phone and tablet computer is turned on the Bluetooth function, click the device to search.
·No function or function error: Please shut down and then power it back on.

7 Product specifications

※Designs and specifications are subject to change without notice

Bluetooth version	V5.3
Bluetooth transmission distance	≤10 m
Battery capacity	2400mAh
Output power	5W*1
Horn specifications	Diameter 66mm Height 36.5mm 4Ω
Frequency response	Fo 20 ~ 20 KHz
sensitivity	81±3dB
Product size	184.5(L)*120(W)*174.6(H)mm
Charging voltage	DC5V


8 Product safety

Name of the parts	Hazardous Substanc					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Loudspeakers	x	x	x	o	o	o
Terminal	o	o	o	o	o	o
PWBs	o	o	o	o	o	o
Plastic	o	o	o	o	o	o
Packing material	o	o	o	o	o	o

This form has been prepared in accordance with SJ/T11364.

○: It indicates that the content of the hazardous substance in all homogeneous materials of the part is GB/T26572 The specified limits are as follows.

×: Indicates that the hazardous substance exceeds GB/T in at least one of the homogeneous materials of the part Limit requirements specified in 26572.

 Environmentally friendly service life

This mark refers to the period (ten years), the period during which the harmful substances in electronic and electrical products will not leak or mutate under normal use conditions, and the user will not cause serious pollution to the environment or cause serious damage to his person and property when using the electronic and electrical products.

10