# Always there to help you

Register your product and get support at www.philips.com/welcome



DS8400/10



# User manual



# Contents

1	Important	2
	Safety	2
	Compliance	2
	Care of the environment	2
	Notice	3
2	Your Docking Entertainment System	4
	Introduction	4
	What's in the box	4
	Overview of the main unit	4
3	Get started	6
	Prepare the remote control	6
	Charge the battery	6
	Turn on	7
4	Play	8
	Play from iPod/iPhone/iPad	8
	Play from Bluetooth device	8
	Play from an external device	9
	Adjust volume level	9
	Mute sound	9
 5	Product information	10
	Specifications	10
6	Troubleshooting	11
	About Bluetooth device	11

# 1 Important

Safety

- Only use attachments/accessories specified by the manufacturer;
- Use only power supplies listed in the user manual.
- The product shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Where the mains plug or an applicance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

### Risk of swallowing batteries!

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the

product. Keep out of reach of children and contact the manufacturer.



### Warning

- · Never remove the casing of this apparatus.
- · Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

# Compliance

# €0890

This product complies with the requirement of the 1999/5/EC directive.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www. philips.com/support.



### Note

The type plate is located on the bottom of the product.

## Care of the environment

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Always bring your product to a professional to remove the built-in battery.

## **Notice**



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

# 2 Your Docking **Entertainment** System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

## Introduction

 
With this unit, you can enjoy audio from the iPod/iPhone/iPad and other audio devices.


## What's in the box

Check and identify the contents of your package:

- Main unit
- Remote control
- 1 x AC adaptor
- $1 \times AC$  power cord
- 1 x UK AC power cord
- 1 x charge base
- Short User manual
- Safety & Notice sheet


# Overview of the main unit



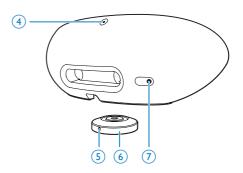

- - Select Bluetooth mode
  - Pair with Bluetooth device.
- (2) iPod/iPhone/iPad dock
- - Adjust volume.
- - Turn on the unit.
- (5) Power supply socket
- (6) Charge base
- (7) AUDIO IN
  - lack for an external audio device.

## Overview of the remote control

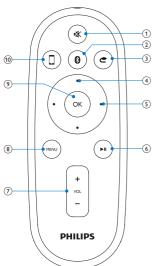

- (1) ⋈
  - Mute or restore volume.
- 2) \*
  - Select Bluetooth mode
  - Pair with Bluetooth device.
- (3) **c** 
  - · Select audio-in mode
- (4) Up/down keys
  - Navigate through the iPod/iPhone menu.
- 5 Fast forward/backward keys
  - Fast reverse or fast forward within a track or iPhone/iPod/iPad.
  - Skip to the previous/next track.
- (6) ►II
  - Start or pause play.
- (7) VOL +/-
  - Adjust volume.
- (8) MENU
  - Access the iPod/iPhone menu.
- (9) OK
  - · Confirm a selection.

- (10) 🛚
  - Select iPod/iPhone/iPad dock mode.

# 3 Get started



### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No	
Serial No	

# Prepare the remote control



### Caution


 Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

### For first-time use:

1 Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- Press the hole with the tip of a ball-point pen or a sharp tool to open the battery compartment.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

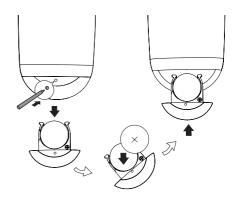



### Note


- Before pressing any function button on the remote control, first select the correct source with the remote control instead of the main unit.
- If you are not going to use the remote control for a long time, remove the battery.

# Charge the battery



### Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the unit.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure you have completed all other connections.
- 1 Place the unit onto the charge base.

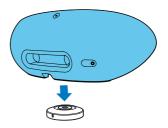


Insert the plug of the AC adaptor to the DC IN socket on the back of the charge base.



 Connect one end of the AC power cord to the AC adaptor.



 Connect the other end of the AC power cord to the wall outlet.



## Use built-in battery



### Note

· Always bring your product to a professional to remove the built-in battery.



### Caution

· Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

When the battery is fully charged, you can also operate the unit on built-in rechargeable battery.



Use only the supplied AC adapter to charge the battery.

## Turn on

- Press & on the main unit.
  - → When user approaches the unit, light LED under volume button on the main unit turns on automatically.

## Switch to ECO standby

The unit switches to standby mode automatically, when:

- In DOCK mode: the iPod/iPhone/iPad is disconnected from the unit.
- In Audio-in mode: the device no longer playing music for more than 15 minutes.
- In Bluetooth mode: the Bluetooth device no longer playing music for more than 15 minutes.

When the unit is in standby mode for longer than 15 minutes, the unit switches to ECO power mode automatically.



· Under ECO/standby mode, press \$\,\display \text{ or } \mathbb{C} \text{ on the remote control, the unit will switch on to the corresponding selected source.

# 4 Play

# Play from iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this unit.


## Compatible iPod/iPhone/iPad

Apple iPod, iPhone and iPad models with a lightning dock connector. Made for:

- iPod nano (7th generation)
- iPod touch (5th generation)
- iPhone 5
- iPad Mini
- iPad 4

### Load the iPod/iPhone/iPad

1 Place the iPod/iPhone/iPad in the dock.

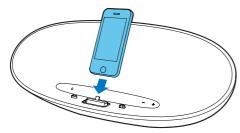

### Remove the iPod/iPhone/iPad

Pull the iPod/iPhone/iPad out of the dock.

## Listen to the iPod/iPhone/iPad

- 1 Ensure that the iPod/iPhone/iPad is loaded correctly.
- 2 Press I to select dock mode.
- 3 Press ►II.

- → The connected iPod/iPhone/iPad starts play.
- To pause/resume play, press ►II.
- To skip to a track, press fast forward/ backward keys.
- To search during play, press and hold fast forward/backward keys, then release to resume normal play.
- To navigate the menu, press MENU, then press up/down keysto select, and press OK to confirm.(for iPod and iPhone only)

## Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad begins to charge.

# Play from Bluetooth device

### Pair with Bluetooth deivces

- 1 Press \* to select Bluetooth source.
  - → Paring starts automatically.
  - → LED under \* button on the main unit flashes rapidly.
- 2 Turn on Bluetooth function on your device.
- 3 Search for Bluetooth devices that can pair with your device.
- 4 When "PHILIPS DS8400" displays, select it to start connection.
  - → Double beep tone confirmation is heard and the \* LED turns on stably if connection is successful.
  - → If the pairing cannot be completed within 15 minute, \* LED turns off.



### Tip

 If your Bluetooth device is already paired with DS8400 before, you just need to find out the "PHILIPS DS8400" on your Bluetooth menu, then confirm the connection,

- To disconnect Bluetooth device
- Turn off the connected device or move it beyond the communication range.
  - → \* LED flashes.
- To erase Bluetooth paring information
- 1 Press and hold \* for 5 seconds.
  - → The unit beeps once after paring information is cleared successfully.

# Play audio files from Bluetooth devices



Note

- Make sure the Bluetooth connection between the unit and the device is active.
- To start play, press ►II on the remote control.
- To pause/resume play, press ► II again.
- To track up/down, press forward/backward keys.

# Play from an external device

With this docking speaker, you can also enjoy audio from an external device such as an MP3 player.



Note

- Make sure that no iPod/iPhone/iPad is docked in the speaker.
- 1 Press **c** to select audio-in mode.
- 2 Connect the supplied audio-in cable to:
  - the **AUDIO IN** jack (3.5mm) on the back of the unit.
  - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

# Adjust volume level

1 During play, press VOL +/- to increase/ decrease the volume level.

## Mute sound

 During play, press MUTE to mute/unmute sound.

# 5 Product information



Note

• Product information is subject to change without prior

# Specifications

Amplifier		
Rated Output Power	2X15 W RMS	
Signal to Noise Ratio	65 dBA	
Audio-in Link	0.6 V RMS 10 kohm	

General information		
AC power (power adaptor)	OH- 1065A1803500U2	
	Input: 100-240V~, 50/60Hz, 1.5A MAX;	
	Output: 18V === 3.5A;	
Operation Power Consumption	<60W	
ECO Standby Power Consumption	<0.5W	
Dimensions		
- Main Unit	443.9 × 166.7 ×	
$(W \times H \times D)$	180.3mm	
-Charge base	96.3 × 19.5mm	
(Diameter × Height)		
Weight		
- Main Unit	2.22 kg	

### Bluetooth

Frequency band	2.4000 GHz - 2.4835 GHz ISM Band
Range	8 meters(free space)
Standard	Bluetooth 2.1 + EDR

# 6 Troubleshooting

# A

### Warning

· Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www. philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet

### No sound

Adjust the volume.

### No response from the unit

• Disconnect and reconnect the AC power plug, then turn on the unit again.

## About Bluetooth device

Music playback is unavailable on the system even after successful Bluetooth connection.

 The device cannot be used with the system to play music.

# The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.

### Cannot connect with the system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device.
  Disconnect that device or all other connected devices and then try again.

# The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.
- For some devices, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.



Specifications are subject to change without notice

2013 © WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product.WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V."

