

Always there to help you

Register your product and get support at

www.philips.com/welcome

PD9030

Question?
Contact
Philips



User Manual

PHILIPS

Contents

1 Important	5
Safety and notice	5
Safety	5
Compliance	7
Care of the environment	7
Copyright	9
Warranty	10

2 Your portable DVD player	11
Introduction	11
What's in the box	11
Overview of the main unit	12
Overview of the remote control	14

3 Get started	16
Prepare	16
Mount the player in your car (for in-car use)	19
Switch on/off	21
Select OSD language	21

4 Play music or movies	23
Play discs	23
Connect additional equipment	24
Play from USB	25

5	Set the main unit	27
---	-------------------	----

6	Product information	28
---	---------------------	----

7	Troubleshooting	29
---	-----------------	----

1 Safety and notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.



The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.
WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.

- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only power supplies listed in the user manual.
- ⑬ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑭ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑮ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into

the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑩ Apparatus shall not be exposed to dripping or splashing.
- ⑪ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑫ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

Risk of swallowing batteries!

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Compliance

This apparatus includes this label:



 **Note**

- The type plate is located on the back of the product.

Any changes or modifications made to this product that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Care of the environment

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.

Recycling the product and the built-in battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries.

The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Copyright



Be responsible
Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

 
- DVD-Video
 - Video CD
 - Audio CD
 - MP3 CD
 - DivX
 - Discs with JPEG files
-

What's in the box

Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor, AY5808/77 or DSA-9PFB-09FAR090100
- Car adaptor
- AV cable
- Car mounting bracket
- User manual

Overview of the main unit

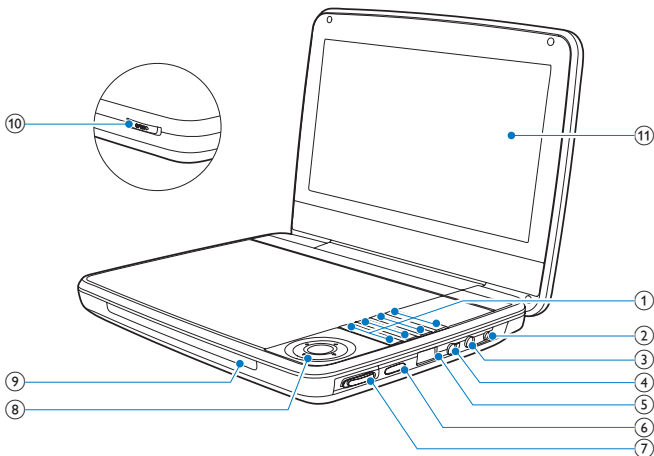

- ① ①
- Turns on/off DVD player.
- SOURCE**
- Switches between DISC and USB.
- SETUP**
- Accesses or exits the setup menu.
- OPTIONS**
- Accesses options relating to the current activity or selection.
 - Accesses or exits the setup menu.
- STOP**
- Stops disc play.
- DISC MENU**
- For DVD, accesses or exits disc menu.
 - For VCD, turns on or off PBC (Playback Control) mode.
 - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.



- Skips to the previous or next title, chapter, or track.

② DC IN

- Power supply socket.

③ AV OUT

- Audio/video output jack.

④ 

- Headphone jack.

⑤ 

- Connects a USB storage device.

⑥ VOL +/-

- Increases or decreases volume.

⑦ RESET

- When the player hangs up, press it with a ball-point pen or similar tool to reset the player.

⑧ ▲, ▼, ◀, ▶

- Navigates menus.



- Searches backward/forward at different speeds.



- Confirms an entry or selection.
- Starts, pauses or resumes disc play.

⑨ CHR/ Ⓛ

 
- Charging indicator/Power indicator.


⑩ OPEN ▶







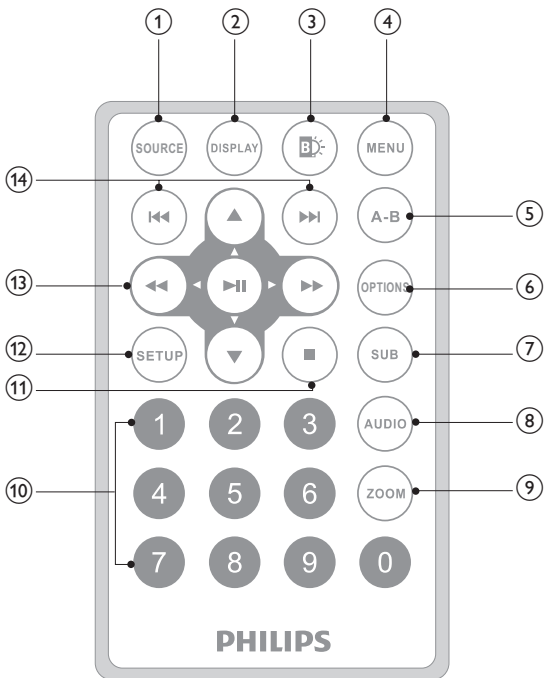







- Opens the disc compartment.

⑪ Display panel

Overview of the remote control



- 1 SOURCE**
 - Switches between DISC and USB.
- 2 DISPLAY**
 - Displays play information.
- 3 **
 - Adjusts brightness of the screen backlight.

- ④ **MENU**
- For DVD, accesses or exits disc menu.
 - For VCD, turns on or off PBC (Playback Control) mode.
 - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
 - For a USB device, accesses or exits the file menu.
- ⑤ **A-B**
- Marks the section for repeat play.
- ⑥ **OPTION**
- Accesses options relating to the current activity or selection.
- ⑦ **SUB**
- Selects a DVD subtitle language.
- ⑧ **AUDIO**
- For DVD, selects an audio language.
 - For VCD, selects an audio mode.
- ⑨ **ZOOM**
- Zooms into a video scene or picture.
- ⑩ **0-9**
- Inputs numbers.
- ⑪ 
- Stops disc play.
- ⑫ **SETUP**
- Accesses or exits the setup menu.
- ⑬ , , , 
- Navigates menus.
- , , 
- Searches backward/forward at different speeds.
-  
- Confirms an entry or selection.
 - Starts, pauses or resumes disc play.
- ⑭ ,  / , 
- Skips to the previous or next title, chapter, or track.

3 Get started



Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. _____

Serial No. _____

Prepare

Charge power

Charge the battery



Caution

- Risk of product damage. Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



Note

 
- The type plate is located on the bottom of the player.

To fast charge the battery,

1 press  to switch off the player.



- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

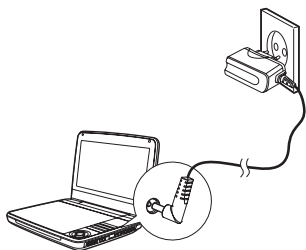

- ↳ The **CHR** indicator turns on (red).
- ↳ When the battery is fully charged, the **CHR** indicator turns off.

 


Tip

- You can also charge the battery during play.
- To maximize battery life, recharge the battery immediately once the battery is fully discharged. If you do not use the player for a long time, recharge the battery once every two months.

Charge through car adaptor

Connect the supplied car adaptor to the player and car cigarette lighter.

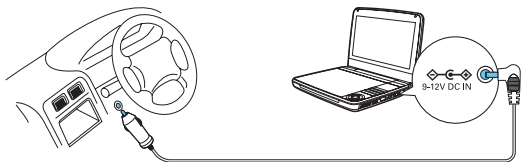

Install remote control battery



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Batteries contain chemical substances, they should be disposed of properly.
- Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

For first-time use:

 
1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:

1 Open the battery compartment.


2 Insert one CR2025 battery with correct polarity (+/-) as indicated.

3 Close the battery compartment.

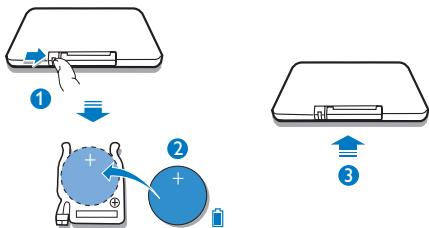

Mount the player in your car (for in-car use)

 Use the car mounting kit to mount the player onto the seat headrest in your car.

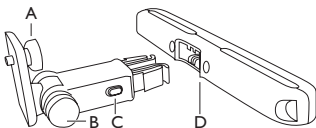

- A. Fastening screw node for DVD player
- B. Adjustment node for viewing angles
- C. Buckle release button
- D. Headrest mount bracket

 


Warning

- Remove the mounting kit and the DVD player from the seat when the DVD player is not in use.

To mount the DVD player onto the headrest


- 1 Fix the headrest mount bracket on to the front seat headrest.

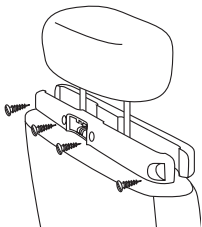

- ① Position the bracket on the bars of the headrest.
- ② Fasten the screw to fix the bracket firmly on the bars.


- 2 Fix the DVD mount bracket to the portable DVD player:

 - ① Aim the fastening screw of the bracket to the screw nut on the back of the DVD player.
- ② Screw tight the bracket onto the DVD player.

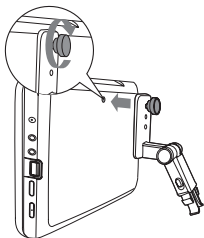


There are three holes on the bracket. Use any one as you like.

 - 3 Install the DVD player to the headrest.

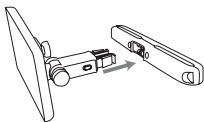

- Buckle DVD bracket into the headrest mount bracket.

 - 4 Adjust the viewing angle.

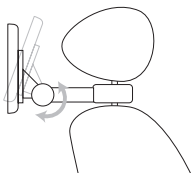


- ① Release the adjustment node.
- ② Adjust the viewing angle as desired.

③ Fasten the node.

To release the DVD player from the headrest

 - Press the release button

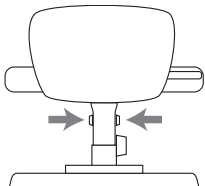

Switch on/off

- 1 Press **⏻** to switch on the player.
↳ The **⏻** indicator turns on (green).



- 2 To switch off the player, press **⏻**.
↳ The **⏻** indicator turns off.

Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETUP**.

↳ The setup menu is displayed.

- 2 Go to **[General]** > **[Language]**.
- 3 Press ▲ / ▼ to select a language option.
- 4 Press ► || /OK to confirm.
- 5 Press **SETUP** to exit.

4 Play music or movies

Play discs

- 1 Slide **OPEN** ► on the player.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the disc compartment.
 - ↳ Play starts automatically. If not, press ►||/OK.
 - If a menu is displayed, select an item, then press ►||/OK to start play.
 - To pause, press ►||/OK. Press again to resume play.
 - To stop, press **STOP** twice.
 - To select the previous/next item, press ◀ or ▶.
 - To start search within video/audio, press ◀ or ▶ once or more.

Play options

Select audio language

For DVDs that contain two or more audio languages.

- During play, press **AUDIO** repeatedly until the language is selected.

Select subtitle language

For DVDs that contain two or more subtitle languages.

- During play, press **SUBTITLE** repeatedly until the language is selected.

Repeat a section

You can repeat a specific section of audio/video within a title/chapter/track (repeat A-B).

- 1 During play, at the chosen start point, press **A-B**.
 - ↳ [↻ A] is displayed.
- 2 At the chosen end point, press **A-B** again.
 - ↳ [↻ AB] is displayed.
 - ↳ The selected section plays repeatedly.
- 3 Press **A-B** to cancel.

Zoom

For DVDs, VCDs and JPEG CDs, you can zoom in and out for video images or pictures.

- 1 Press **ZOOM** repeatedly to zoom in and out.
- 2 When the video image or picture is enlarged, press **▲**, **▼**, **◀**, **▶** to pan through it.

Select audio mode

When you play VCDs, you can select an audio mode.

- Press **AUDIO** repeatedly to select audio channel: **[Stereo]**, **[Left-mono]** or **[Right-mono]**.

Rotate pictures

For JPEG CDs only. While the JPEG is displayed:

- Press **▲** to flip up/down.
- Press **▼** to flip left/right.

Adjust brightness of screen backlight



Note

- You can adjust brightness of the screen backlight to match lighting conditions.

During play, press **BD** repeatedly to select an option.

- **[High]**
- **[Normal]**
- **[Dim]**



Tip

- For the longest playtime, select **[Dim]**.
- For the best view, select **[High]**.


Connect additional equipment

You can connect the player to a TV or an amplifier to enjoy DVDs.

**Caution**

 - Turn off your player before you connect it to any additional equipment.

You can connect the player to a TV or an amplifier to enjoy DVDs.

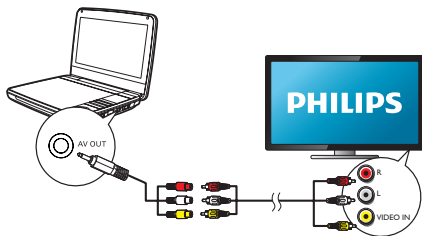


Match the color of the AV cables (the AV cable connected to TV is not supplied) with the jacks:

- the yellow cable is for the yellow video jack
- the red/white cable is for the red/white audio jacks.

Play from USB

You can play DivX, VOB, MP3, or JPEG files that are stored on a USB storage device.

 - 1 Connect the USB device to the player.
 ↳ The content menu is displayed.

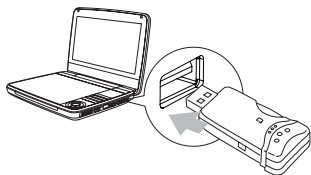

- 2 Press **SOURCE** to switch to USB mode.
- 3 Select a file, then press **▶||**.
↳ Play starts.
- 4 To stop play, press **STOP**.

5 Set the main unit

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.
↳ The setup menu is displayed.
- 2 Use navigation keys to select an option and press **▶||/OK** to confirm.

[General]	
[Language]	Select on-screen display language
[PBC settings]	Set playback control function on/off.
[Power save]	Set power saving mode.
[DivX (VOD)]	Get DivX registration code.
[DivX subtitles]	Select DivX subtitle language.
[Parental(DVD)]	Select parental options.
[Set password]	Change existing password (3308 by default).
[Factory settings]	Restore factory settings.
[Video]	
[LCD Display]	Set screen display aspect ratio.
[TV standard]	Set video output format to TV system.
[Brightness]	Adjust screen brightness.
[Contrast]	Adjust screen contrast.
[Audio]	
[Dolby]	Set Dolby output.
[Version]	Check the version information.

- 3 Press **◀** to go back to the previous menu.
- 4 Press **SETUP** to exit.

6 Product information



Note

- Product information is subject to change without prior notice.

Dimensions	239 x 39 x 178 mm
Weight	1.0 kg
AC power adaptor	AY5808/77 or DSA-9PFB-09FAR090100
Power supply	
- AC power adaptor	Input: 100-240V~ 50/60Hz Output: DC 9V $\overline{=}$ 1.0A
- Car adaptor	Output: DC 12V
Power consumption	11.5 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video output	
Format	PAL & NTSC
Output level	1V _p - p \pm 20%
Load impedance	75 Ω
Audio line out	
Audio out (analog audio)	Output level: 2V \pm 10%
Load impedance	10 K Ω
Audio distortion + noise	\leq -80 (1KHz)
Frequency response	20Hz-20KHz \pm 1dB
Signal/noise ratio	\geq 80 dB
Channel separation	\geq 80 dB
Dynamic range	\geq 80 dB

7 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/support. When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

No sound

- Ensure that the AV cable is connected correctly.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

Not work properly or freeze up

- Press **RESET** with a ball-point pen or similar tool to switch off the player, and press **⏪** to restart.

The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.



Specifications are subject to change without notice
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.

PD9030_77_UM_V1.0

