







Quick start guide



- Step A *Connect*
- Step B *Setup*
- Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

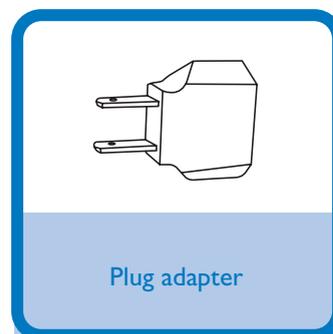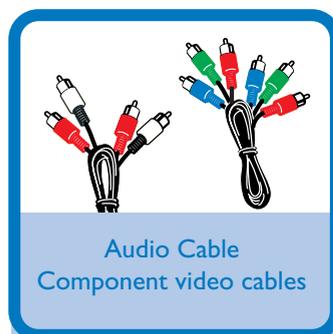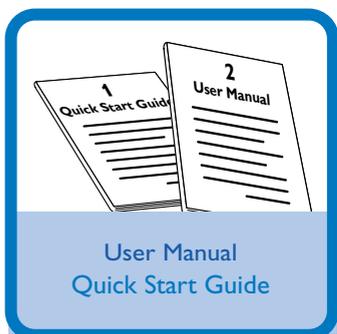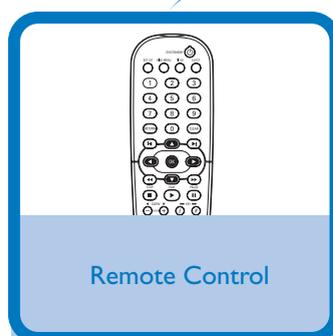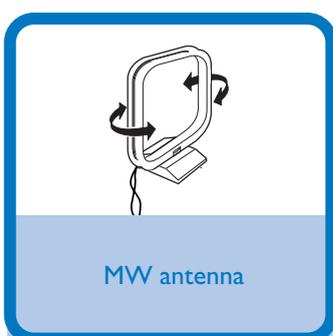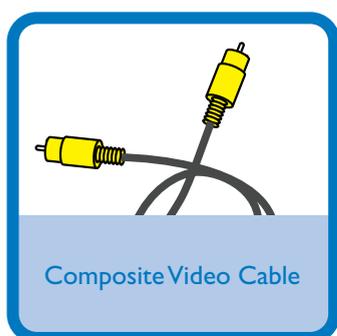

Step A *Connect*

1 Connect the speaker wires to the **SPEAKERS** terminals, right speaker to "**R**" and left speaker to "**L**", coloured (marked) wire to "**+**" and black (unmarked) wire to "**-**". Fully insert the stripped portion of the speaker wire into the terminal as shown.

2 For radio reception, connect the supplied MW loop antenna to the "**AM aerial**" terminal.

Tip

It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.


3 Use the composite video cable (yellow) to connect the system's **VIDEO OUT** jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV set. (**Option A**)

Use the component video cables (red/blue/green) to connect the system's **Pr/Cr Pb/Cb Y** jacks to the corresponding Component video input jacks on the TV set. (**Option B**)

Tip

- Set the **VIDEO OUT (put)** to 'Cr Cb Y' if you select **Option B**.
- See the **User Manual** for other TV connection options.

4 Connect the power cord of the DVD system to the AC power outlet.

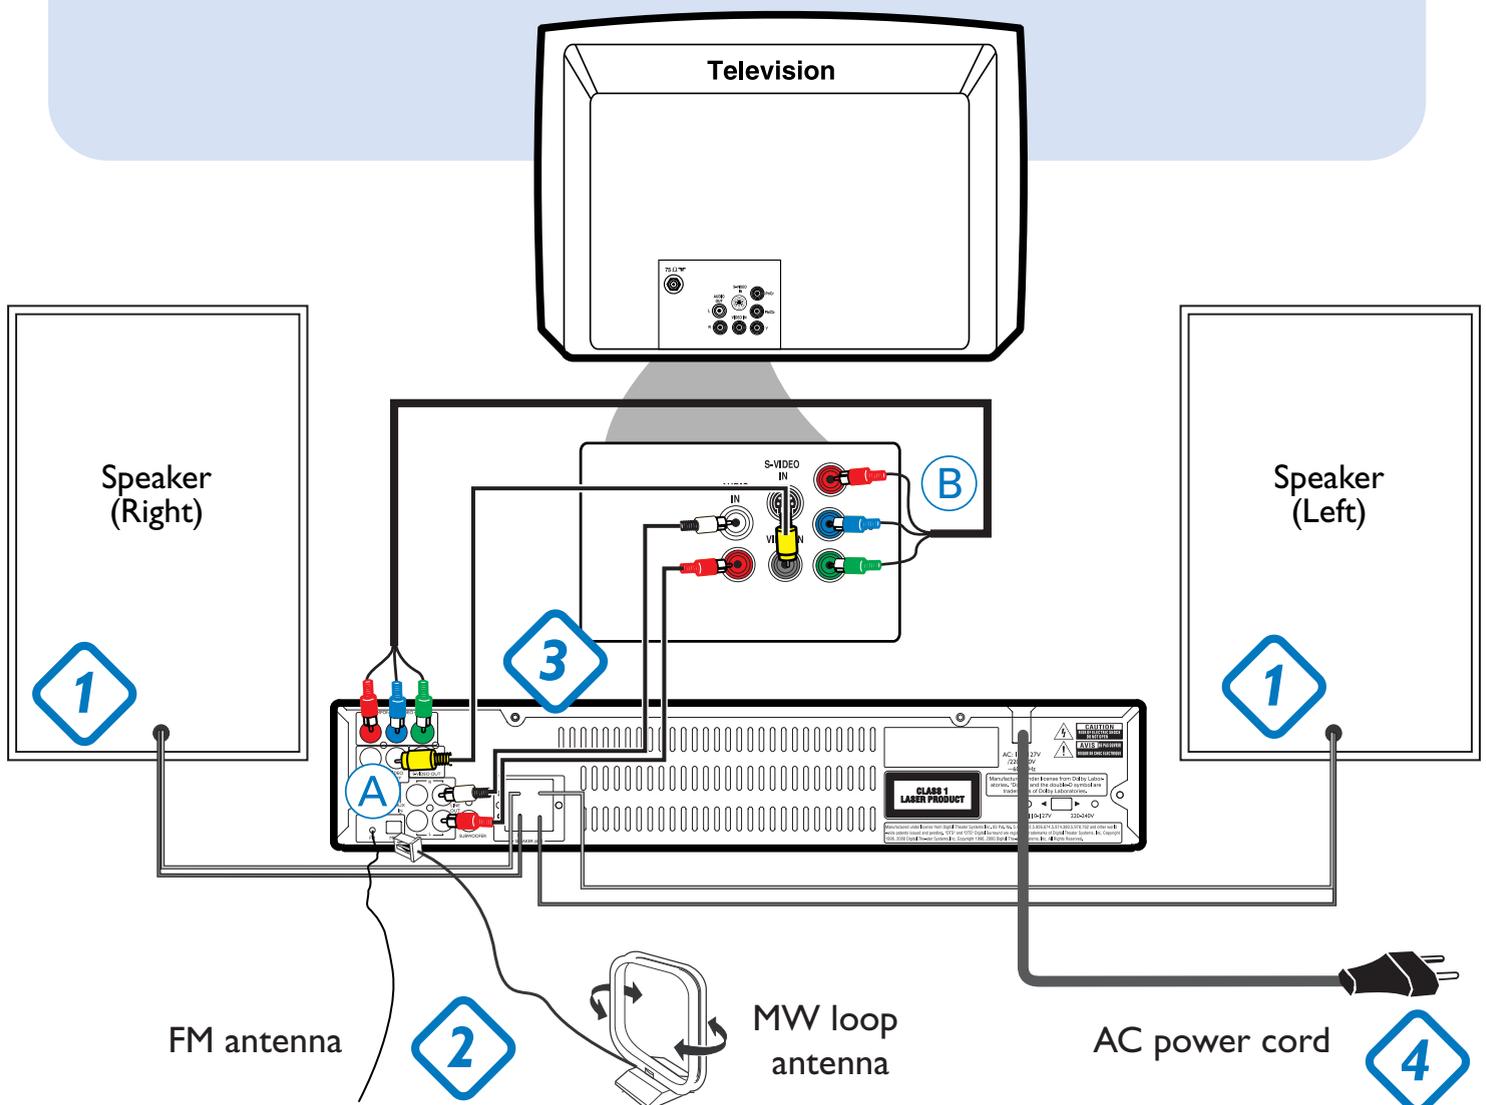


Step B Setup

Setting up the TV

- 1 Turn the **SOURCE** control knob to select DISC.
- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

Tip
See your TV manual for more details.

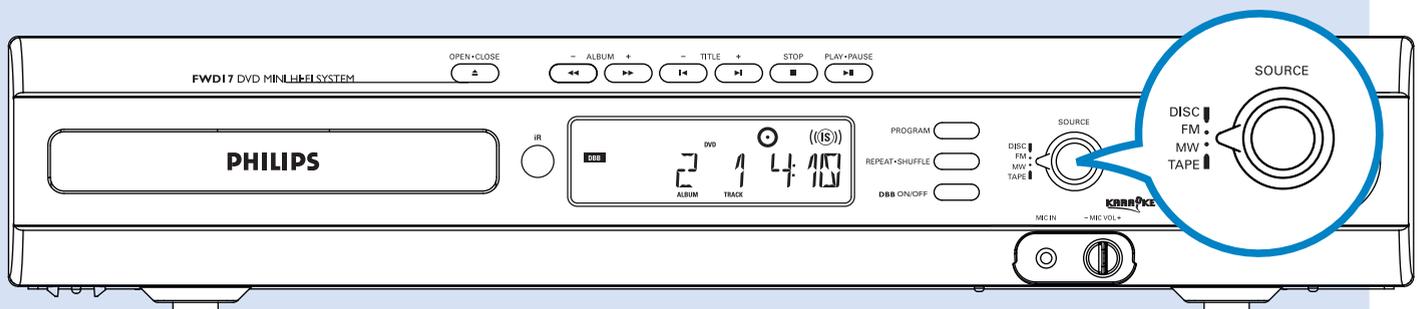

Setting language and video preferences


- 1 In the disc mode, stop playback and press **SET UP**.
- 2 Press **◀▶** on the remote to enter 'Language'. Then, select the preferred OSD menu, subtitle, audio, and menu languages using **◀▶**, **▲**, **▼** and **OK** on the remote.
- 3 Press **◀▶** on the remote to enter 'Video'. Then, select the TV shape, color system matching the connected TV set and the video output mode.
- 4 Press **SET UP** to exit the menu.

Language	Video	Audio	Rating
OSD Menu	English	English	
Subtitle	English	Fran ais	
Audio	English	Espa ol	
Menu	English	Portugu s	
		中文	

Language	Video	Audio	Rating
TV Shape	4:3 LB		4:3 PS
TV System	Auto		4:3 LB
Video out	S-VIDEO		16:9

Loading a disc



- 1 Press **OPEN•CLOSE ▲** (or **EJECT** on the remote) to open the disc tray.
- 2 Load in a DVD disc with the label side facing up.
- 3 A disc menu pops up.

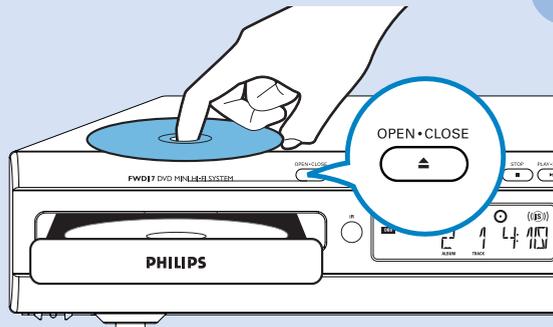

Tip
Refer to the User Manual for playback of other types of discs.

Playback

- 1 Use **◀▶, ▲, ▼** and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.
- 2 Press **PLAY•PAUSE ▶▶** (or **PLAY ▶** on the remote) to start playback.
- 3 Press **STOP ■** to stop playback.

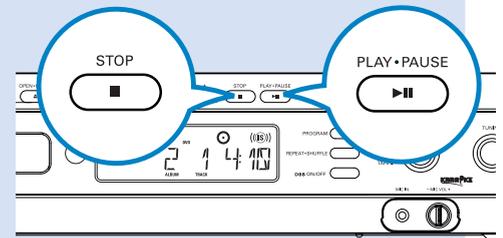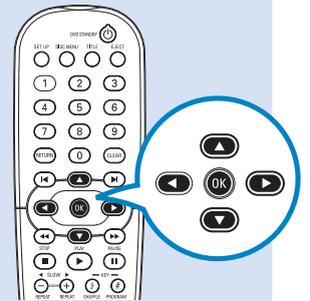

Types of Discs used on this DVD System

Type	Record	Playback	Edit
DVD+RW <small>DVD + ReWritable</small>	✗	✓	✗
DVD VIDEO	✗	✓	✗
VIDEO CD	✗	✓	✗
Super VCD	✗	✓	✗
AUDIO CD	✗	✓	✗
VIDEO CD	✗	✓	✗
MP3-CD	✗	✓	✗



2005 © Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com