

Philips CD Soundmachine with Dynamic Bass Boost

CD cassette

AZ1027

# Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The sleek and portable AZ1027 lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

# The ultimate listening experience

- Play CD, CD-R and CD-RW discs
- Autostop cassette deck
- FM/MW tuner for radio enjoyment

## Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalized music enjoyment
- MP3 Link for portable music playback

# Rich and clear sound

• Dynamic Bass Boost for deep and dramatic sound



# Specifications

### **Audio Playback**

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- · Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle
- Number of decks: 1
- · Cassette Deck Technology: Mechanical
- Programmable Tracks: 20

# Tuner/Reception/Transmission

• Tuner Bands: FM, MW · Antenna: FM Antenna

# Sound

- Output power (RMS): 2 X 1W
- Sound Enhancement: Dynamic Bass Boost
- · Sound System: Stereo
- Speaker diameter: 3.5"
- Volume Control: rotary

# **Audio Recording**

- Tape Recording Enhancement: CD Synchro Start Recording
- · Recording Media: Tape

#### **Convenience**

· Display Type: LCD

## **Connectivity**

• 3.5mm stereo line in: (MP3 LINK)

#### **Power**

- Battery type: LR14
- Battery voltage: 1.5 V
- Mains power: 230V 240V
- · Number of batteries: 6

# **Accessories**

• Included accessories: AC Power Cord, User Manual, Warranty certificate

#### **Dimensions**

- Packaging dimensions (W x H x D): 320 x 275 x 175 mm
- Product dimensions (W x H x D): 291 x 146 x 243 mm
- Weight: 1.9 kg
- · Weight incl. Packaging: 2.4 kg

# **Highlights**

# Autostop cassette deck

Autostop cassette deck

### **Dynamic Bass Boost**

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings from low to high - at the touch of a button! Bottomend bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

 
CD Shuffle/Repeat
The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

#### MP3 Link

The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.







© 2014 Koninklijke Philips N.V. All Rights reserved.

Version: 1.0.8

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 000 41837 EAN: 87 12581 43952 1

www.philips.com

