



AZ1856



PHILIPS


Register your product and get support at www.philips.com/welcome

- 1 Playing a disc**
- Adjust the **source selector** to **DISC/USB**.
 - Press **USB/CD** to enter CD mode if "USB" is displayed.
 - Open the disc door.
 - Insert a disc with the printed side facing up and close the door.
 - Press **▶II** to start playback.
 - To stop disc playback, press **■**.

- 3 CD ripping**
- Follow **steps a-d** from "Playing a disc".
 - Plug a USB mass storage device.
 - Select the tracks you want to record.
 - Press **USB REC** (or **REC** on the remote) and **REC** appears, flashing.
 - Disc playback starts automatically.
 - Disc ripping starts.
 - To stop ripping, press **■**.

- 2 Playing a USB device**
- Push the **source selector** to **DISC/USB**.
 - Press **USB/CD** to enter USB mode if "USB" is NOT displayed.
 - Plug a compatible USB mass storage device to AZ1856's **USB DIRECT** marked
 - Press **▶II** on your AZ1856 to start play.


- 4 Tape/tuner ripping**
- Adjust the source selector to **TAPE** or **FM**.
 - Plug a USB mass storage device.
 - Select the file(s) or a desired station you want to record.
 - Press **USB REC** (or **REC** on the remote) and **REC** appears, flashing.
 - Tape/tuner ripping starts.
 - To stop ripping, press **■**.

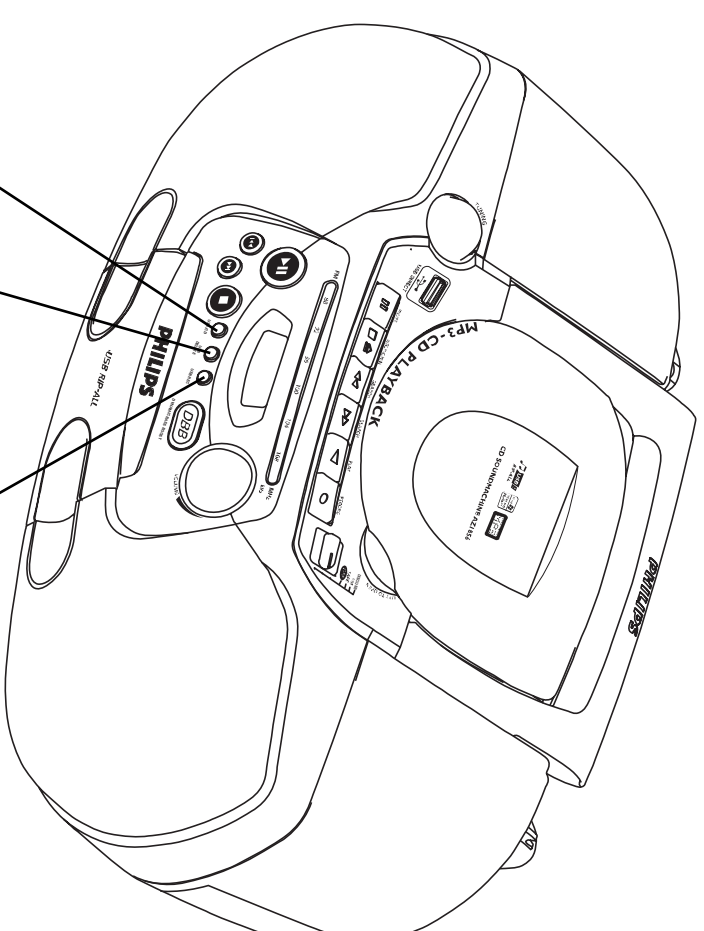

USB/CD
Press to enter disc or USB mode

USB REC
Copy one file or all files of a disc to an external portable USB storage device/MP3 player

USB DELETE
Delete one file of an external portable USB storage device/MP3 player

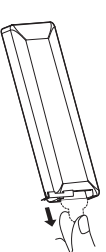

Removing the insulation plastic tab

