

Welcome

Quick start guide



1

Connect

2


Install

3


Enjoy

PHILIPS

What's in the box

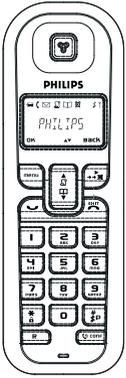


Handset
DECT 122

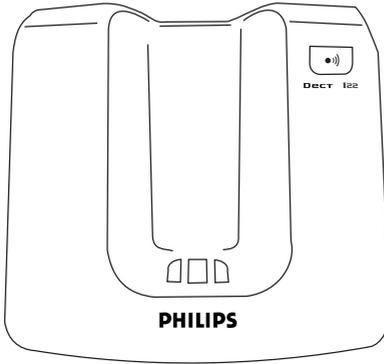

Base station
DECT 122



 Power supply
unit



Line cord



Rechargeable
batteries



Quick start guide



User manual



Guarantee

In multipack sets you will find additional handsets, chargers power supplies, line cords and batteries.


Always use the cables and batteries that came with your phone.

1

Connect

A

Connect the base station

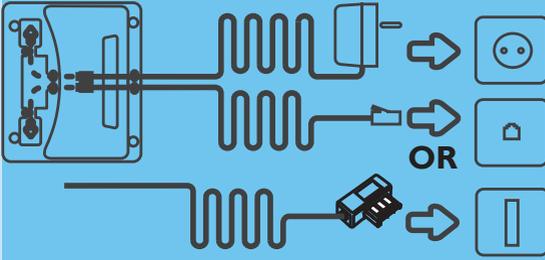

- Insert the plug of the power cord into the socket on the bottom of the base station.
- Insert the plug of the line cord into the socket on the bottom of the base station.
- Plug the power supply unit into your power outlet.
- Plug the line cord into the line socket.


2

Install

Always use rechargeable batteries.


A

Insert batteries

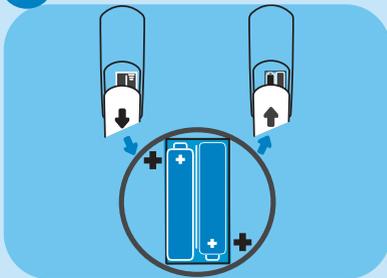

B

Charge handset for 24 hours

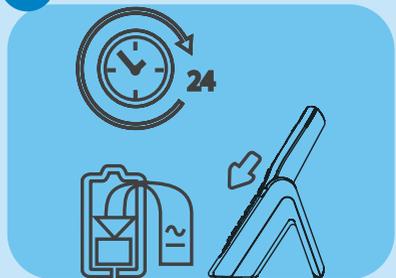

To set the date and time

1. Press .
2. Press Down to reach **CLOCK/ALARM**.
3. Press to display **DATE/TIME**.
4. Press and enter the current date.
5. Press and enter the current time.
6. Press to confirm the settings.

3

Enjoy

To make a call

Press  and dial the number.

To answer a call

Press .

TIP :You can predial the number before seizing the line.

To adjust earpiece volume while on line

Press Up or Down  to increase or decrease the volume.

To set the handset ring melody

1. Press  and press Down  to reach **PERSONAL SET.**
2. Press  to select **HANDSET TONE.**
3. Press  and press Down  to reach **RING MELODY.**
4. Press , the melody is played.
5. Press Up or Down  to browse the list of melodies.
6. Press  to confirm your choice.

To save a name & number in the phonebook

1. Press  and press Down  to reach **PHONEBOOK.**
2. Press  to select **ADD NUM.**
3. Press  and enter the name.
4. Press  to save the name.
5. Enter the number and press  to save the number.

To set or change the alarm clock settings

1. Press  and press Down  to reach **CLOCK/ALARM**.
2. Press  and press Down  to reach **SET ALARM**.
3. Press , scroll  to select **OFF** or **ON ONCE** or **ON DAILY**.
4. Press  to confirm.

If you select **ON ONCE** or **ON DAILY** :

Enter the time and press  to confirm.

TIP :When the alarm rings,
press any key to stop the alarm.

To rename a handset

1. Press  and press Down  to reach **PERSONAL SET**.
2. Press  and press Down  to reach **HANDSET NAME**.
3. Press  and enter the name (text entry, see manual page 10).
4. Press  to confirm.

Troubleshooting

For expanded overview see user manual page 25.

Problem

- No dialling tone.
- Poor audio quality.
- No symbol on the display.
- No Caller ID, poor connection quality with broadband DSL Internet.

Tip

- Check the connections.
- Use the line cord provided in the box.
- Try to place the base station at least one metre away from any electrical appliances.
- Make sure the product is plugged.
- Recharge the batteries.
- Check you have one DSL filter plugged directly on each line socket used in the house.
- Check the modem and the phone are plugged in correct filter slot (one specific for each).
- Filters can be defective, replace it and make another test.

Need help ?

User manual

See the user manual that came with your DECT 122.

Online help

www.p4c.philips.com