

Quick Start Guide




Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

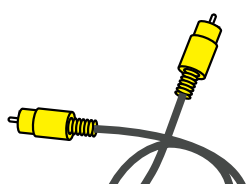


Composite Video Cable



Quick Start Guide



Remote control with two
AA batteries

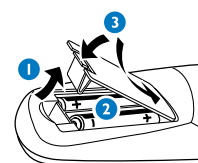

MW antenna



FM antenna



User Manual

PHILIPS

Step A *Connect*

Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2


Connect the MW antenna.

3

Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

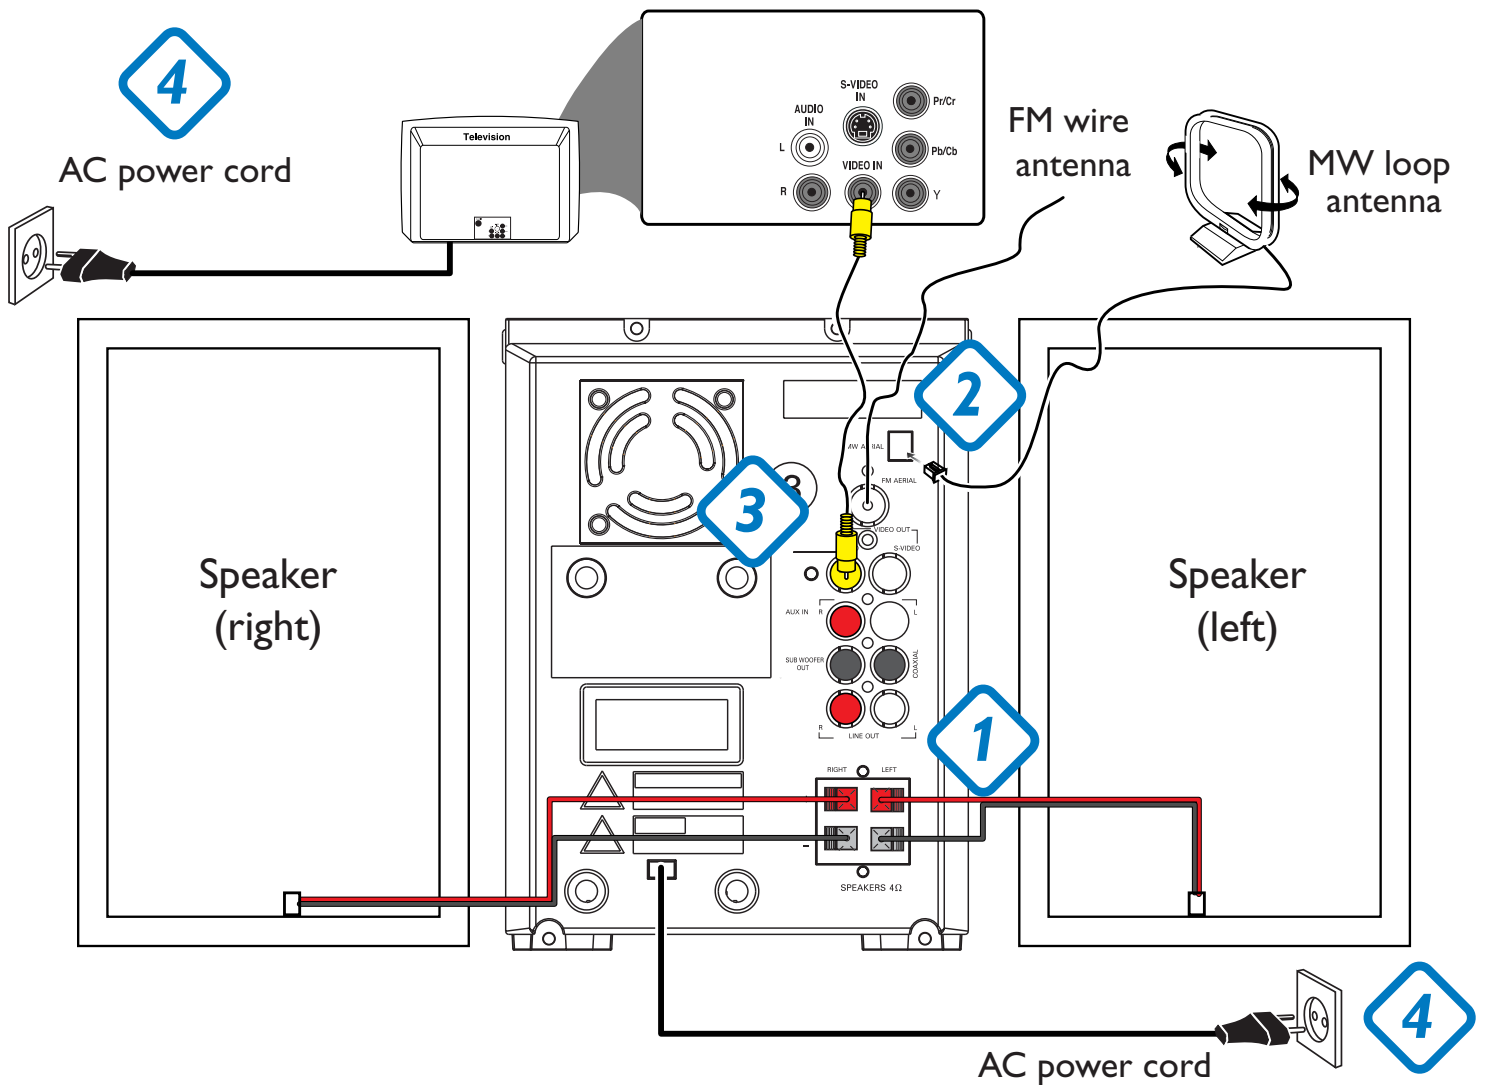

Step B *Setup*


Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

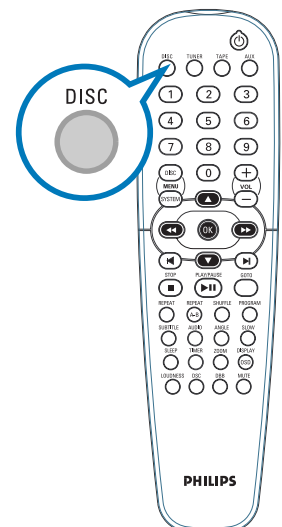






Step B Setup

Setting the clock

- 1 In standby mode, press and hold **CLOCK/RDS** on the system.
- 2 When the hour digits flash, turn the **VOLUME** control on the front panel or press **VOLUME +/-** on the remote to set the hours.
- 3 Press **CLOCK/RDS** again and the minute digits flash. Then turn the **VOLUME** control on the front panel or press **VOLUME +/-** on the remote to set the minutes.
- 4 Press **CLOCK/RDS** again to confirm the time setting.

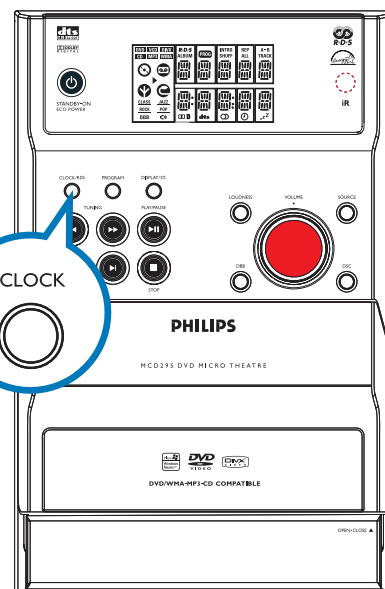

Setting system menu options

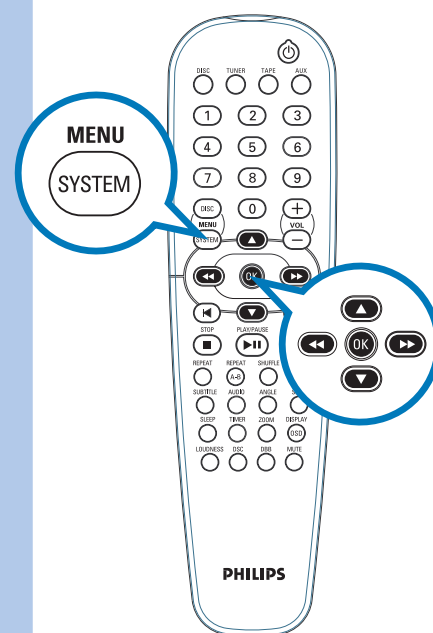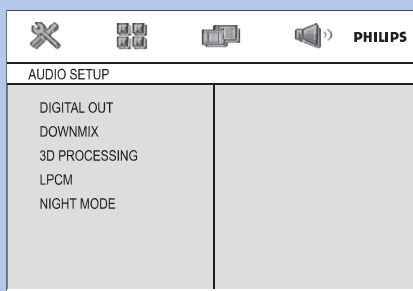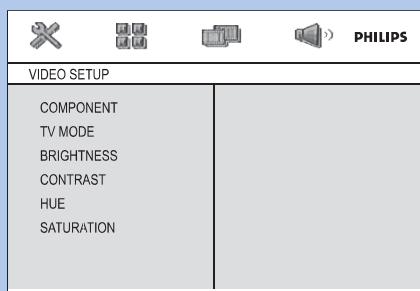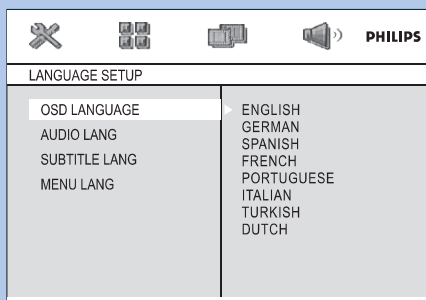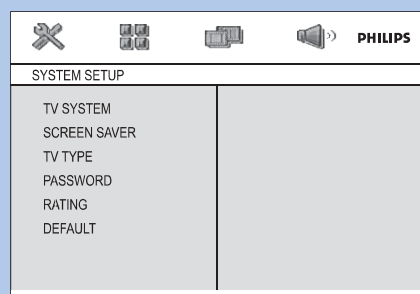

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.


Playing a disc



- 1 Press **OPEN•CLOSE▲** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **PLAY/PAUSE▶II**.

- 3 To stop playback, press **STOP■**.

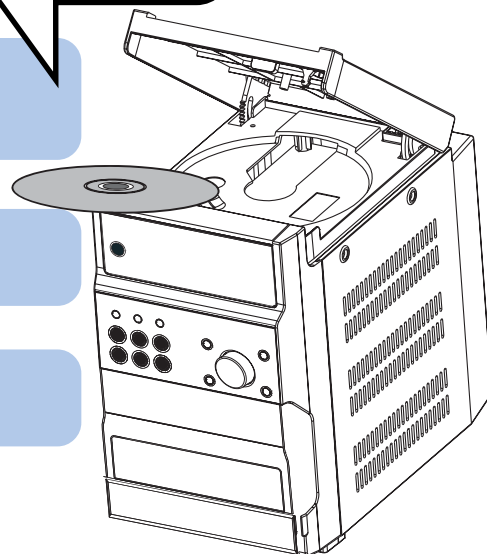

Programming and tuning to radio stations

- 1 Press **SOURCE (TUNER)** on the remote to select tuner source.

- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.

- 3 Press **PRESET◀/▶** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

