

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

AZ1027



EN      User manual

**PHILIPS**

# 1 Important

---

## Safety

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.  
Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.

- 16 Apparatus shall not be exposed to dripping or splashing.
- 17 Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 18 This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).



### Warning

- Never remove the casing of this Soundmachine.
- Never lubricate any part of this Soundmachine.
- Never place this Soundmachine on other electrical equipment.
- Keep this Soundmachine away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside the Soundmachine.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the Soundmachine from the power.



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## Notice



This product complies with the radio interference requirements of the European Community. Any changes or modifications made to this device that are not expressly approved by Philips Consumer Electronics may void the user's authority to operate the equipment.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

**This Soundmachine includes this label:**



Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

## Disposal of old equipment and Used batteries

### Information for Users on Collection and Disposal of Old Equipment and Used Batteries



Pb, Hg, Cd

These symbols on the products, batteries, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

### Information on Disposal in other Countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol



Pb, Hg, Cd

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

### Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into mono materials.

Please observe the local regulations regarding the disposal of packing materials.

## 2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.Philips.com/welcome](http://www.Philips.com/welcome).

---

### Introduction

With the CD Soundmachine you can play audio discs and listen to FM/MW radio. You can also program the play sequence of tracks. Dynamic Bass Boost (DBB) helps you to maximize music enjoyment.

---

 
## What's in the box

 
Check and identify the contents of the package:

- CD Soundmachine
- AC power cord
- User Manual

---

## Overview of the Soundmachine

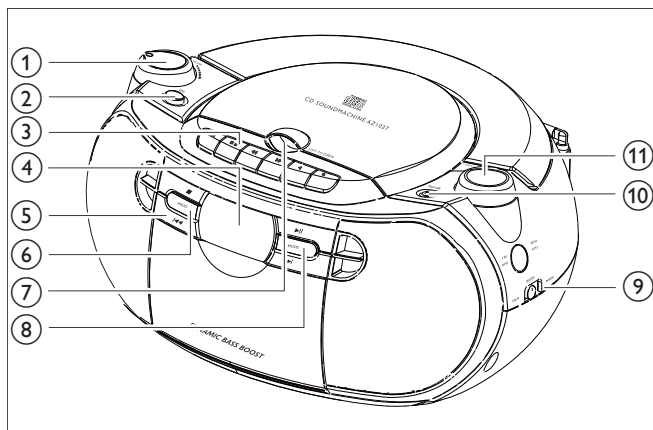

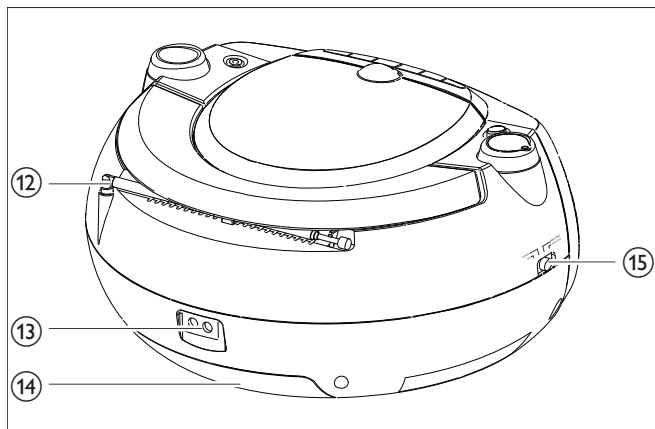

① VOLUME

- Adjust volume level

② DBB

- Turn the bass enhancement on/off

③ Cassette recorder buttons

- **⏸**

Pause play or record

- **■▲**

Stop cassette play or record

Open the cassette holder

- **⏮⏭**

Fast forward/rewind cassette

- **⏪**

Start cassette play

- **●**

Start cassette record

④ Display

⑤ CD Buttons

- **■**

Stop CD play

Erase a CD program

- 

Start or pause CD play

- 

Select the previous/next track

Fast search backward/forward within the current track

**6** PROG

- Program tracks and browse the program

**7** LIFT TO OPEN

- Open/Close the CD compartment

**8** MODE

- Select a play mode: REPEAT or SHUFFLE

**9** BAND

- Select a wave band

**10** LINE-IN

- Socket for audio input

**11** TUNING +/-

- Tune to radio stations

**12** Telescopic antenna

- Improve FM reception

**13** AC MAINS~

- Socket for the power cord

**14** Battery door

**15** Source selector: CD, TUNER, LINE-IN, TAPE/OFF

- Select sound source
- Switch to standby mode

## 3 Get started



### Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your Soundmachine. The model number and serial number are on the bottom of your Soundmachine. Write the numbers here:

 
Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

### Install batteries

- 1 Open the battery compartment.

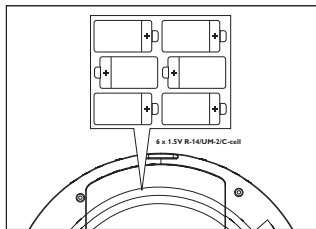

- 2 Insert 6 x 1.5V R14/UM-2/C-cell batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



### Tip

- If you want to save battery life, use the supplied power cord.



---

 
## Connect AC power

### Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Soundmachine.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

### Note

- Install the unit near the power supply socket and where the AC power plug can be easily reached.

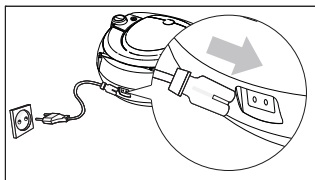

- 1 Connect the power cord to the **AC MAINS~** socket on the Soundmachine and to the power supply socket.
  - To switch the Soundmachine off completely, disconnect the power cord from the power supply socket.

### Tip

- To save energy: After use, set the source selector to **TAPE/OFF**.

---

## 4 Use your Soundmachine


### Play a CD

#### Note




- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio:

- CDs
- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)

- 1 Switch the source selector to **CD**.
- 2 Lift the lid of the CD compartment.
- 3 Insert a CD with the printed side facing up.
- 4 Close the CD lid gently.  
↳ The total number of tracks is displayed.
- 5 Press  to start play.  
↳ [**▶**] is displayed.



- To pause CD play, press .
- To resume CD play, press  again.
- To stop CD play, press .

 

---

## Select a track

- 1 During play, press  to select a track.

---

## Find a passage within a track

- 1 During play, press and hold .  
↳ The CD is played at high speed and with reduced volume.
- 2 Release  to resume normal play.



Tip

- When search reaches the end of the last track, the CD stops.

---

## Program play sequence

You can store up to 20 tracks in the desired sequence.

- 1 In stop mode, press **PROG** to start to program play sequence.  
↳ [**PROG**] and [**00**] are displayed.



- 2 Press **◀◀▶▶** to select a track.
- 3 Press **PROG** to store the track.
- 4 Repeat steps 2 to 3 to select and store all tracks.  
↳ When all 20 tracks are stored, no more tracks can be selected and the display shows [---].
- 5 To play program, press **▶||**
  - In stop mode, press **PROG** repeatedly to browse stored tracks.
  - To cancel program, press **■** twice.



#### Tip

- When program play stops, the Soundmachine returns to normal play. To play program again, repeat steps 1 to 5.

---

## Select play modes

### Repeat play

You can repeat a track, a disc, or a program.

- **[↺]** – plays the current track continuously
  - **[↺ALL]** – repeats the entire CD/program
- 1 During play, press **MODE** repeatedly until the display shows the repeat icon.
    - Repeat one track.



- Repeat the entire CD.



- To stop repeat play, press **MODE** repeatedly until the repeat icon is no longer displayed.

### Shuffle play

You can play all tracks in random order.

- 1 During play, press **MODE** repeatedly until the display shows the shuffle icon.



- To stop shuffle play, press **MODE** again.

---

## Listen to radio

- 1 Switch the source selector to **TUNER**.
- 2 Switch **BAND** to **FM** or **MW**.
- 3 Turn **TUNING +/-** to find a station.



### Tip

- To improve FM reception, you can extend, incline or turn the telescopic antenna for best reception.
- To improve MW reception, turn the Soundmachine to face a different direction.

---

## Play cassette recorder

- 1 Switch the source selector to **TAPE/OFF**.
- 2 Press **■▲** to open the cassette holder, insert a cassette tape, and then close the cassette holder.
- 3 Press **◀▶** to start play.
  - To pause play, press **||**.
  - To stop the play, press **■▲**.

---

## Find a passage within a tape

- 1 During stop, press **◀◀▶▶** to search for a desired passage in a tape.
- 2 To stop fast search, press **■▲**.

---

## Record from CD

- 1 Switch the source selector to **CD**.
- 2 Insert a CD with the printed side facing up.
- 3 If you want to record tracks in the desired sequence, program the desired tracks.
- 4 Press **■▲** to open the cassette holder.
- 5 Insert a blank cassette.
- 6 Close the holder.
- 7 Press **●** to start to record.
  - ↳ The disc/program starts automatically from the beginning.

- To pause, press **⏸**.
  - To resume, press **⏸** again.
- To stop, press **⏹**.

---

## Record from radio

- 1 Switch the source selector to **TUNER**.
- 2 Tune to a radio station.
- 3 Press **⏹** to open the cassette holder.
- 4 Insert a blank cassette.
- 5 Close the holder.
- 6 Press **⏻** to start to record.
  - To pause, press **⏸**.
    - To resume, press **⏸** again.
- To stop, press **⏹**.

## 5 Troubleshooting



### Warning

- Never remove the casing of this Soundmachine.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this Soundmachine, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.Philips.com/support](http://www.Philips.com/support)), or contact Philips (see Contact information). When you contact Philips, ensure that your Soundmachine is nearby and the model number and serial number are available.

### No power

- Ensure that the power cord is connected securely.
- Ensure that there is power at the power supply socket.
- Ensure that the batteries are installed correctly.

### No sound

- Adjust the volume.
- Ensure that the track played is of a compatible format.

### Display does not function properly./No reaction to operation of any of the controls.

- 1 Disconnect the AC power cord.
- 2 Connect the AC power cord after a few seconds.

### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.

- Ensure that the laser lens is clean.
- Ensure that the CD is not encoded with copyright protection technologies.

### The CD skips tracks

- Ensure that the CD is not damaged or dirty.
- Ensure that program/shuffle mode is deactivated.

### Poor cassette sound quality

- Ensure that heads in the cassette holder are clean.
- Ensure that a NORMAL (IECI) cassette tape is used for record.

### Cassette does not work for record

- Ensure that cassette tabs are not broken.

## 6 Product information

### Note

- Product information is subject to change without prior notice.

Dimensions (Main unit) (W x H x D)	291 x 146 x 243 mm 11.5 x 5.8 x 9.6 inches
Weight (Main unit)	1.8 kg 3.8 pound
Power supply	DC 9V 1.5 A AC 230-240V
Power consumption	Active 12W Standby < 2W
Power output	2 x 1W RMS
Operating temperature range	-10°C - +50°C 14°F - 122°F



sense and simplicity

PHILIPS CONSUMER ELECTRONICS  
WARRANTY POLICY FOR AUSTRALIA

Effective 1st July 2009

Philips provides its Consumer Electronics products with a 1 Year Manufacturers Warranty.

**The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.**

The conditions contained in this warranty replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Please record the following information for your records and keep in a safe place.  
It is essential that you retain your original purchase receipt to make a warranty claim.

Model number	:	.....
Serial number	:	.....
Date of purchase	:	.....
Retailer	:	.....

If you require assistance with the operation of the product, its features or specifications, you may call the **Philips Technology Care Centre** on **1300 363 391** where support is provided by our trained staff.

If the product fails within 12 months from the date of purchase, please return the faulty product to the place of purchase.

**Conditions of Warranty**

- a. All claims for warranty can only be made at the place of purchase and a copy of the purchase receipt is required for any warranty claim.
- b. The warranty period is valid from the original date of purchase of the product.
- c. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- d. Philips may, at its discretion choose to repair rather than replace this product.
- e. If a replacement product is supplied, it is warranted for the remainder of the warranty period, from the original date of purchase.
- f. This Manufacturers Warranty is limited to 3 months for products used in commercial applications.
- g. Product accessories are covered by the same warranty period. If an accessory is faulty, please contact the Philips Technology Care Centre on **1300 363 391**.
- h. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

**This Warranty does not cover:-**

- a. Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- b. Product failures caused by misuse, neglect, accidental breakage, transit damage, un-authorised repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- c. Reception problems, replacement of worn or used batteries or other consumables.
- d. Second hand products or refurbished products.
- e. Products failure, caused by other products.

## **NEW ZEALAND - Guarantee and Service for New Zealand**

---

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### **The Guarantee Controller**

**Philips New Zealand Ltd.**

✉ **P.O. Box 41.021**

**Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**



