



User manual

General information

Warnings

- · Only use attachments or accessories specified by manufacturer.
- . The battery shall not be exposed to excessive heat such as sunshine, fire etc.
- Only for indoor use.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the speaker (e.g.liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening


- Place the apparatus in a location with adequate ventilation to prevent internal heat build up.
- Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.

- Care of the cabinet
- Use a soft cloth slightly moistened to clean the cabinet.
- Do not use a solution containing alcohol, spirits, ammonia or abrasives to clean the cabinets.

Accessories

Item	3.5mm to stereo cable	User manual	USB cable	Strap

Top & Back panel

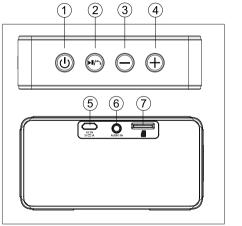

Top panel operation

A. Switch operation

		1 Ф	2. ▶Ⅱ/∿	3. —	4. +
	short press	function	a. play or pause b. accept or end the current call	Prev Song/Track*	Next Song/Track*
mode.	long press	Power on/off	a. disconnect BT connection b. reject an incoming call	Volume decreases	Volume increases, when it reaches higher volume it will make sound
	short press	function			
Audio mode.	long press	Power on/off		Volume decreases	Volume increases, when it reaches higher volume it will make sound
	short press	function		Back Stored radio/Track*	Next Stored radio/Track*
FM mode.	long press	Power on/off	FM channels and save	Volume decreases	Volume increases, when it reaches higher volume it will make sound
	short press	function	play or pause	Prev Song/Track*	Next Song/Track*
TF mode.	long press	Power on/off		Volume decreases	Volume increases, when it reaches higher volume it will make sound

- B. LED
- a. red LED: charging
- b. blue LED: bluetooth mode
- c. green LED: Audio mode.
- d. blue and green LED alternate: FM mode.
- e. light blue LED: mircro SD/ TF card mode.

Over view of the speaker

U - Power on/off and Source selection.

Turn the speaker on or off with long press.

•Select source by short pressing Bluetooth/ micro SD card (TF card)/ FM/ Line in (FM/ line in is available only when stereo cable is connected.

2. H/S

Play/ Pause -short press

Answer or end the current call -short press

•Reject an incoming call-long press

Disconnect Bluetooth connection -long press

Search FM channel and save -long press

Volume decrease -long press

Previous song/channel-short press

4."+"

Volume increase -long press

Next song/channel-short press

5. DC in- Recharging the built in battery.

6. Line in- Connect an external audio device and for use in FM as antenna.

7. Micro SD card (TF card).

C. Back panel

5. [MICRO USB] socket for charging the unit.

6. [Audio]: 3.5mm Audio socket. 7. [MICRO SD Card / TF Card]

^{**} In case of laptop BT connection, this will work with windows media player.



Register your product and get support at

www.philips.com/welcome Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license

This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



Over view of the speaker

Get started

- Place the speaker on a flat surface
- Charge the built in battery
- Notes for charging
- a) Before use, fully charge the built in battery.
- b) The micro USB socket is for charging only.
- c) Rechargeable battery has a limited number of charge cycles.
- Battery life and number of charge cycle vary by use & settings.
- Connect the USB cable between DC in socket on the speaker and USB Socket of a computer.

Bluetooth pairing

- To turn on the speaker long press "O" -speaker enters in Bluetooth mode blue LED will quickly flash.
- Turn on Bluetooth device like mobile, computer and search the Bluetooth name "PHILIPS BT60".
- Press pair in the device to connect with the speaker, when enter pairing mode it will give out a "Beep" sound while it will give out double "Beep" sound after pairing successfully.
- Blue light will stop flashing. (Normally no need to provide password, if need just put "0000" as the password.)
- After pairing successfully, the device will connect with speaker automatically next time.

Long press "►LONG press "►LONG for 3 seconds to disconnect current device, speaker enters in pairing mode.

Audio in

- Connect a stereo cable (audio input cable) on both ends to
- Audio in socket of speaker
- The headphone socket on the external device

Short press "(b" to choose FM mode/Audio in mode. Without Audio cable, speaker cannot go into line in mode.

Over view of the speaker

Connect and audio stereo cable (Audio cable) and press" () " speaker will go in FM mode and LED will flash blue & green alternatively. Long press "> 1/3", speaker will go in search mode & save all FM channels from 87.5 to 108Hz."-" or "+" with short press will select desired channel. Without Audio cable, speaker cannot go into FM mode.

Micro SD card (TF card)

When inserting micro SD card (TF card), short press "6" to choose micro SD/ TF card mode with LED color changing to light blue. Without micro SD/ TF card, speaker cannot go into micro SD/ TF card mode.

Handfree phone call function

Blue light will flash when there is an incoming call, the speaker will also come out with 'Beep' sound, long press button ">#\">" to reject the phone call, short press to anwer the call, short press again to end disconnect, by pressing "-"/ "+" to decrease or increase volume.

Low power

When it comes to low power, the speaker will come out with "Beep" sound, at the same time volume will be decreased to keep perfect playback.

pls charge in time, the speaker will shutdown for no power.

If you are not using the speaker for long time, ensure that it is being fully charged once every month in order to protect the battery.

This Philips Bluetooth speaker system is warranted against any defect due to defective materials or

Warranty

workmanship for 12 months from the date of purchase, should a defect develop during the period of warranty,

The warranty is not valid in case:

- Proof of purchase is not accompanied with this warranty card.
- 2 The warranty card is not completed immediately after purchase
- 3. The apparatus is not used according to this user manual.
- Defects are caused due to improper or reckless use.
- 5. Any repairs are done by unauthorized personnel.
- The serial number is tampered with.
- 7. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty.

Product SI No Model No Invoice Number Date of Purchase: ___/___/____ Customer's Name and address:

Always there to help you!

Visit us at www.support.philips.com SARRICA ALISTRAL DE PRODUCTOS ELECTRICOS SA Smeralda 910 - l' piso (C1007ABL) - C.A.B.A. - Antertina Atención al Cliente de Philips 0810-444-7782 (CABA)

0800-444-7749 (Interior)

Audio input

Rated output power

Signal to Noise Ratio

Frequency Response

Product specifications*

- Parameter		
Speaker Impedance	4 ohm 1.5 inches	
Speaker Driver		
Sensitivity	80 dBm	

70Hz~20KHz

Bluetooth version	V 5.0
Bluetooth profile	V2.1+EDR
Bluetooth freg	2.4GHz-248GHz
Bluetooth range	Up to 10M (freespaee)

Up to 10M (freespaee) *Specification subject to change without prior notice.

Measured under specific conditions.

General Introduction 3W RMS

Weight

Power supply Built in Battery Dimension ma

,	
ry	Li-polymer battery
nain unit (LxWxH)mm	110x32x56mm
	145g

V === 1A

Cornectivity	FM,mirco SD (TF-Card), Audio in, Bluetooth
Micro SD(TF card)	up to 32GB

