

PHILIPS


Soundbar

HTL8121



User manual

 Playing the speakers

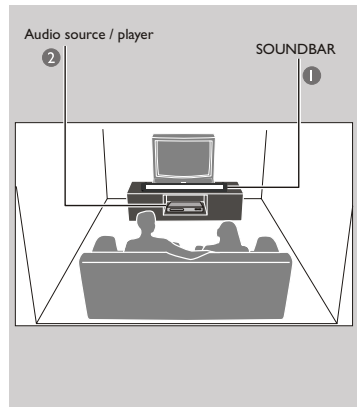

System positioning :

The soundbar is recommended to be put on the fat desktop to get a better acoustic effect.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

7

General information

Safety instructions

Please read carefully the safety mark on the back side



This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet


- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories


Item	2RCA- 2RCA cable	Remote control	User manual	Optical cable	Power cord
Quantity	1	1	1	1	1

2

 Connections

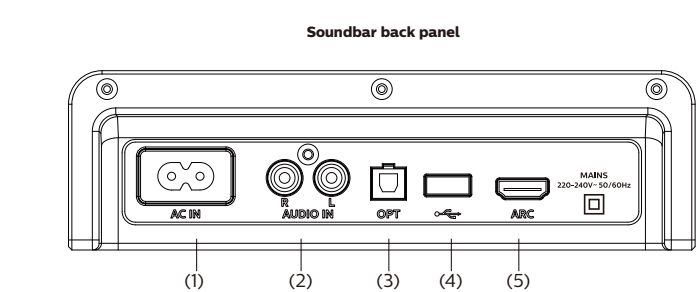

 
- AC Power cord.
- Input Connect to sound sources such as computer, CD player, MP3, etc.
- Optical Input.
- USB* slot.
- HDMI ARC Input.



***Do NOT use USB for charging devices which can cause damage to your external devices.thank you.

3

 Top panel operation

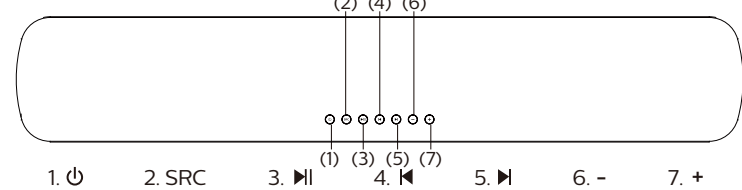

- Power or standby mode.
- SRC: Change the input mode: "bt" denotes Bluetooth Mode. "Hd" denotes HDMI ARC Mode. "OP" denotes Optical Mode. "AU" denotes Audio Mode. "Ud" denotes USB* mode.
- Play/pause in USB*/BT mode.
- Play the previous song in USB*/BT mode.
- Play next song in USB*/BT mode.
- Volume decrease.
- Volume increase.

 
Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume.

* AVAILABLE IF CONNECTED

4

Remote controls

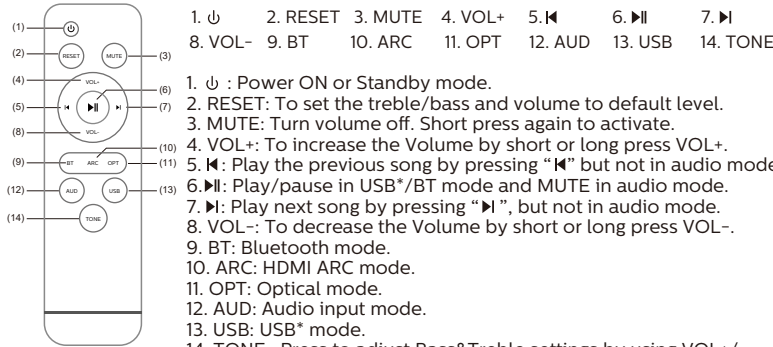

- Power ON or Standby mode.
- RESET: To set the treble/bass and volume to default level.
- MUTE: Turn volume off. Short press again to activate.
- VOL+: To increase the Volume by short or long press VOL+.
- Play the previous song by pressing "Previous" but not in audio mode.
- Play/pause in USB*/BT mode and MUTE in audio mode.
- Play next song by pressing "Next", but not in audio mode.
- VOL-: To decrease the Volume by short or long press VOL-.
- BT: Bluetooth mode.
- ARC: HDMI ARC mode.
- OPT: Optical mode.
- AUD: Audio input mode.
- USB: USB* mode.
- TONE : Press to adjust Bass&Treble settings by using VOL+/- buttons. Bass&Treble levels: -6(min)~+6(max).

Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume.

* AVAILABLE IF CONNECTED

5



Register your product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



总尺寸: 660x173mm
工艺: 风琴折 105g铜版纸黑色双面印刷
成品尺寸: 110x86.5mm
料号: 30709L000115-005

成品正面:



成品背面:

