

Always there to help you
Register your product and get support at
www.philips.com/welcome

Question?
Contact
Philips



Short User Manual 简明用户手册



AJ7260D

PHILIPS




All registered and unregistered trademarks are property of their respective owners.
© 2013 Koninklijke Philips Electronics N.V.
All rights reserved.


AJ7260D_93_Short User Manual_V1.0

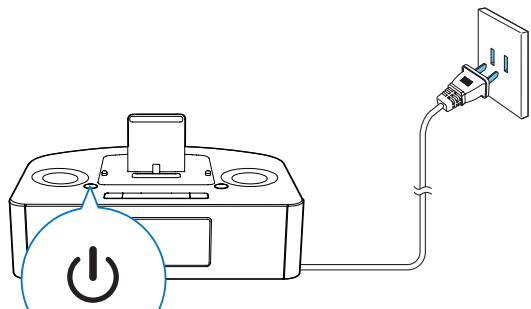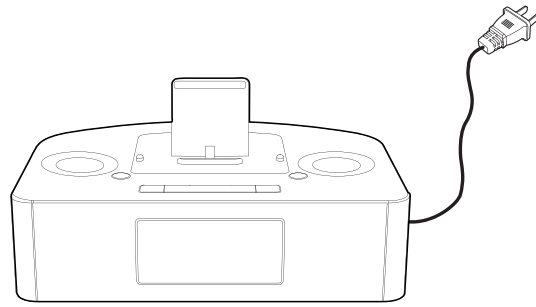


Tip: Press again to switch the unit to standby mode.
注意: 再次按住 可将装置切换至待机模式。

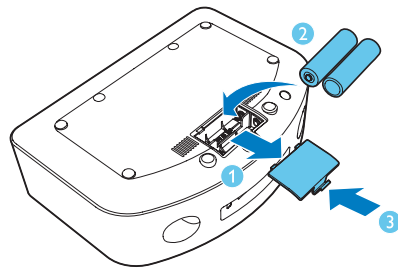

You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.
您只能使用交流电源作为电源。电池（未随附）只用作备用目的。

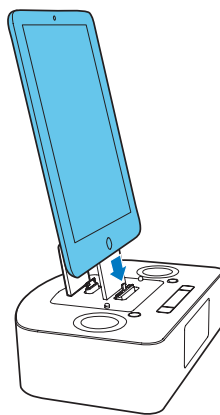


Dock 1
• iPod nano (7th generation)
• iPod touch (5th generation)
• iPad (4th generation)
• iPad mini
• iPhone 5

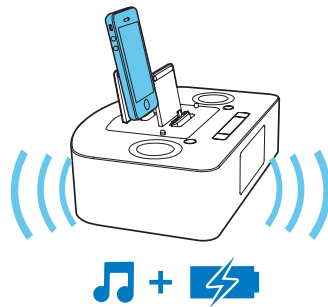

Dock 2
• iPod nano (2nd/3rd/4th/5th/6th generation)
• iPod classic
• iPod touch (1st/2nd/3rd/4th generation)
• iPad (3rd generation)
• iPad 2
• iPad
• iPhone 4S
• iPhone 4
• iPhone 3GS
• iPhone 3G
• iPhone

Listen to the iPod/iPhone/iPad
Press **SOURCE** repeatedly to select DOCK 1 or DOCK 2 mode.
• To pause/resume play, press .
• To skip to a track, press .
• To search during play, press and hold or **PRESET** , then release to resume normal play.




During play, press **SET TIME** repeatedly to select from a preset sound effect and turn on/off dynamic bass enhancement.

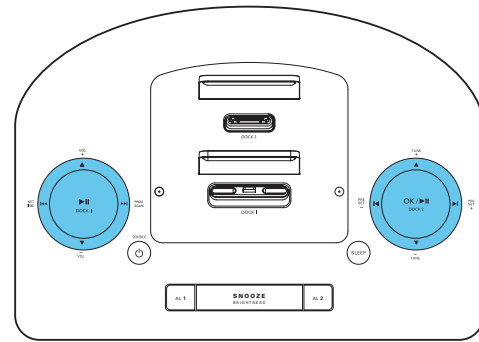

收听 iPod/iPhone/iPad 音频
反复按 **SOURCE** 选择 DOCK 1 或 DOCK 2 模式




- 要暂停/继续播放, 请按 .
- 要跳到某个曲目, 请按 .
- 要在播放期间搜索, 请按住 或 **PRESET** , 然后放开可恢复正常播放。

播放时, 反复按 **SET TIME** 可选择预设音效并打开/关闭动态低音增强。

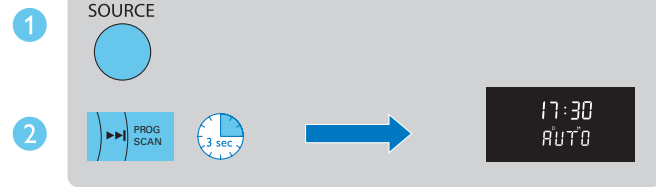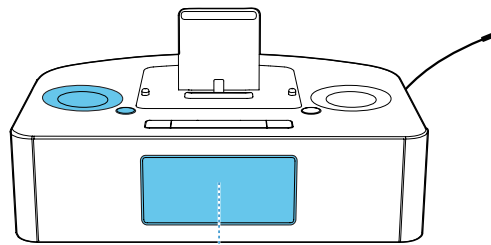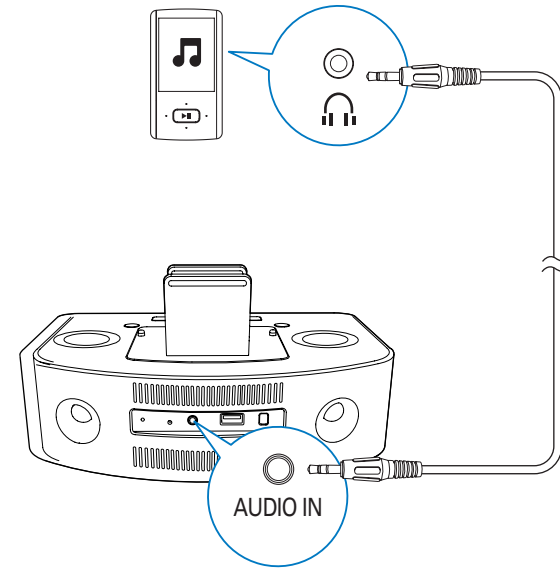

Store FM radio stations automatically
In the tuner mode, press and hold **PROG** for more than 3 seconds to activate automatic program mode.

自动存储 FM 电台
在调谐器模式下, 按住 **PROG** 超过 3 秒钟可启用自动设定模式。

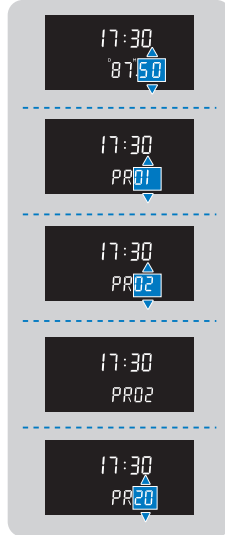
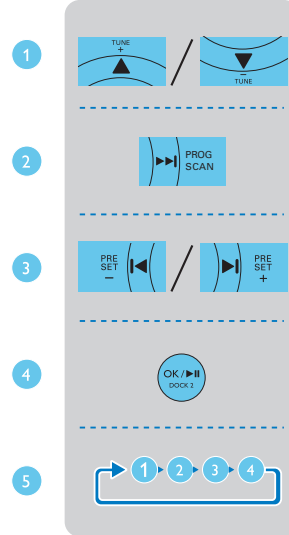
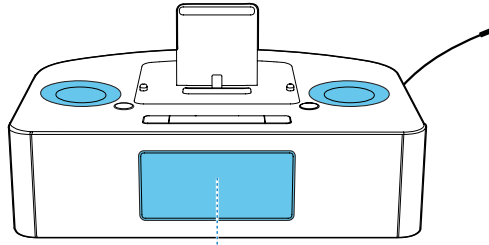


Store FM radio stations manually
1 Tune to a radio station.
2 Press **PROG** to activate the program mode.
3 Press to select a number.
4 Press **OK** to confirm.
5 Repeat the above steps to program other stations.

手动存储 FM 电台
1 调谐至电台。
2 按 **PROG** 激活设定模式。
3 按 选择编号。
4 按 **OK** 确认。
5 重复上述步骤编程其它电台。



Select a preset radio station
Press to select a preset number.

选择预设电台
按 选择预设编号。

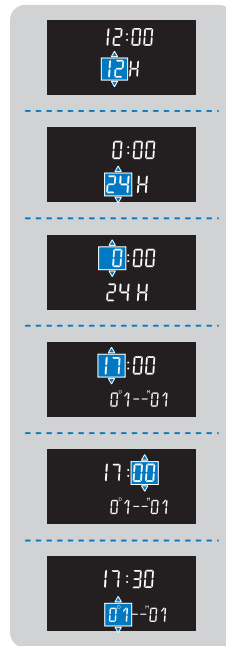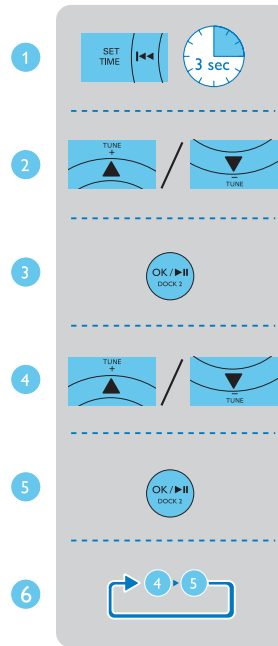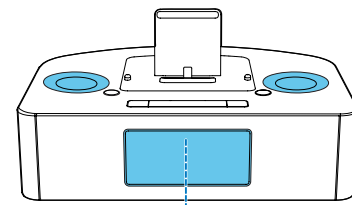

- 1 In standby mode, press and hold **SET TIME** for 3 seconds.
- 2 Press **TUNE+/TUNE-** to select the 12/24 hour format.
- 3 Press **OK** to confirm.
- 4 Press **TUNE+/TUNE-** to set the hour.
- 5 Press **OK** to confirm.
- 6 Repeat steps 4-5 to set the minute, day, month, and year.

- 1 在待机模式下, 按住 **SET TIME** 3 秒钟。
- 2 按 **TUNE+** 或 **TUNE-** 可选择 12/24 小时格式。
- 3 按 **OK** 确认。
- 4 按 **TUNE+** 或 **TUNE-** 以设置小时。
- 5 按 **OK** 确认。
- 6 重复步骤 4-5 可设置分钟、日、月和年。

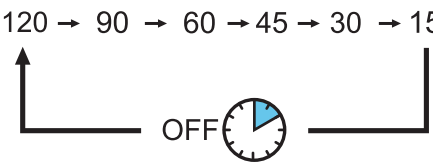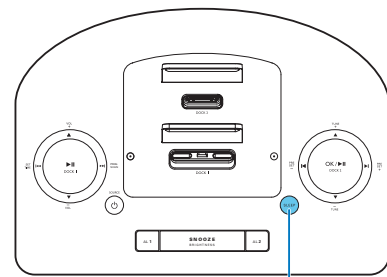


SLEEP

When the system is turned on, press it to select the sleep timer period. When [OFF] is displayed, the sleep timer is deactivated.

SLEEP

系统打开后, 按下可选择定时关机时段。显示 [OFF] (关) 时, 表明定时关机已被禁用。

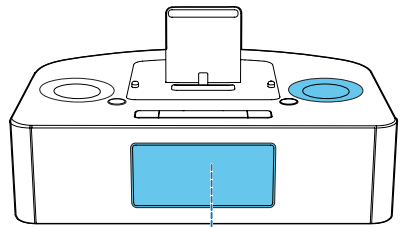

- 1 Press and hold **AL 1/AL 2** for 3 seconds.
- 2 Press **TUNE+/TUNE-** to set the hour.
- 3 Press **OK** to confirm.
- 4 Repeat steps 2-3 to set the minute, select when to ring the alarm, choose alarm sound source, and set alarm volume.

- 1 按住 **AL 1** 或 **AL 2**。
- 2 反复按 **TUNE+/TUNE-** 设置小时。
- 3 按 **OK** 确认。
- 4 重复步骤 2-3 可设置分钟、选择何时响铃、选择闹钟声源和闹钟音量。

English

Safety

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus. CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- Use only power supplies listed in the user manual.

Caution

- Danger of explosion if battery is incorrectly replaced.
- Remove battery if it is exhausted or will not be used for a long time.
- Batteries contain chemical substances, so they should be disposed of properly.
- Perchlorate Material-special handling may apply. See www.dtscc.ca.gov/hazardouswaste/perchlorate.

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control.
- Make sure that there is enough free space around the product for ventilation.
- The system shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the system (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

Class II equipment symbol:





CLASS II apparatus with double insulation, and no protective earth provided.



Note

- The type plate is located on the bottom of the unit.

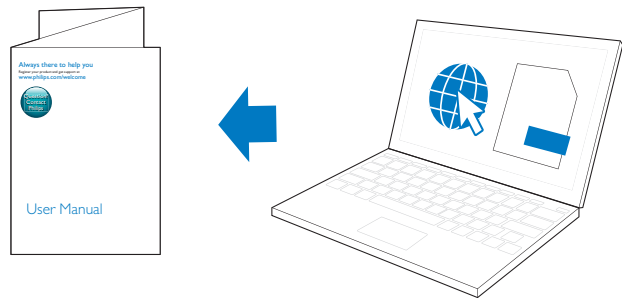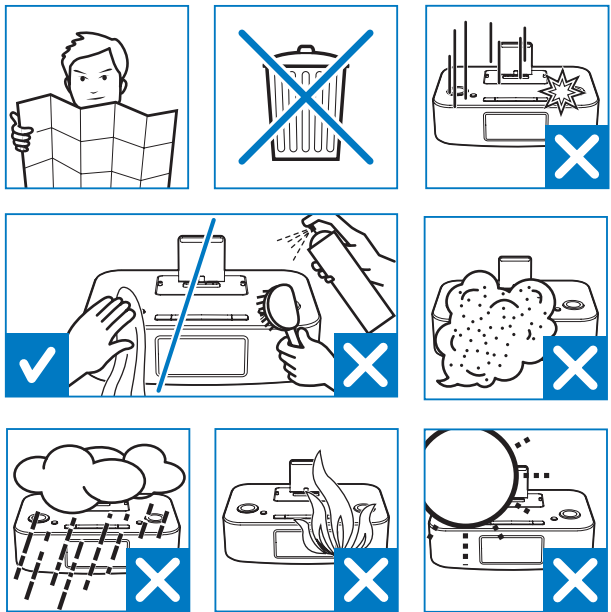

To download the full user manual, visit www.philips.com/support.

要下载完整用户手册，请访问 www.philips.com/support。

中文简体

安全

了解这些安全标志



此“闪电标志”表示设备中的未绝缘材料可能导致触电。为了您家中每个人的安全，请勿卸下产品外壳。“惊叹号”表示需要对某些功能多加注意，您应仔细阅读附带的说明书以防止出现操作和维护问题。警告：为减少火灾或触电危险，此设备应避免淋雨或受潮，不得将装有液体的物体（如花瓶）放在此设备上。注意：为防止触电，请将插头的宽插片完全插入宽插槽。

警告

- 切勿拆下本产品的外壳。
- 切勿润滑本装置的任何部件。
- 切勿将本装置放在其它电器设备上面。
- 应让本装置远离阳光直射、明火或高温。
- 确保始终可轻松地接触到电源线、电源插头或适配器，以便于将本装置从电源上断开。
- 仅使用用户手册中列出的电源。
- 主插头用作断路装置，在不使用时应将插头拔掉，应保证与电网电源完全切断。

注意

- 电池安装不正确会有爆炸危险。
- 如果电池已耗尽或无法长时间使用，请将其取出。
- 电池含有化学物质，因此应正确处理。
- 高酸盐盐材料 - 可能需要特殊处理。请参阅 www.dtscc.ca.gov/hazardouswaste/perchlorate。

- 产品/遥控器可能包含纽扣式/按钮式电池，容易被吞咽。始终将电池放在儿童接触不到的地方！如不慎吞咽，电池可能导致严重受伤或死亡。摄入后 2 小时内可能发生严重的内部烧伤。
- 如果您怀疑电池不慎被吞咽或位于体内的任何部位，请立即就医。
- 更换电池时，请务必将所有新旧电池放在儿童接触不到的地方。更换电池后，确保电池仓完全紧闭。
- 如果电池仓无法完全紧闭，请不要继续使用产品。放在儿童接触不到的地方并联系制造商。
- 不可将电池（电池组或安装的电池）置于高温环境，如阳光直射处、明火或类似环境。
- 电池使用注意事项 – 为防止电池泄漏而造成人身伤害、财产损失或遥控器损坏，请：
- 请确保产品周围有足够的空间进行通风。
- 切勿将系统暴露于漏水或潮湿环境下。
- 不要将任何危险源放在系统上（例如装有液体的物体、点燃的蜡烛）。
- 将电源插头或产品耦合器用作断开设备时，该断开设备应可以随时使用。

注意

如果用户未经 Philips 优质生活部门的明确许可而擅自对此设备进行更改或修改，则可能导致其无权操作此设备。

旧产品和电池的处置

本产品采用可回收利用的高性能材料和组件制造而成。切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气产品及电池的规定。正确弃置这些产品有助于避免对环境 and 人体健康造成潜在的负面影响。本产品所含的电池不能与一般的生活垃圾一同弃置。请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境 and 人类健康造成潜在的负面影响。关于您所在地区回收中心的更多信息，请访问 www.recycle.philips.com。



"Made for iPod"、"Made for iPhone" 和 "Made for iPad" 表示电子附件专为连接 iPod、iPhone 或 iPad 而设计，并经开发人员认证，符合 Apple 性能标准。Apple 对该设备的操作及其是否符合安全法规标准不负任何责任。请注意，通过 iPod、iPhone 或 iPad 使用该配件可能影响无线性能。iPod 和 iPhone 是 Apple Inc. 在美国和其它国家/地区注册的商标。iPad 是 Apple Inc. 的商标。II 类设备符号：



具有双重绝缘的 II 类设备，不提供保护接地。



注

- 铭牌（铭牌上的信息包括工作电压、消耗功率、绝缘等级）位于主机底部，使用前请先了解铭牌上的相关信息。



Specifications

Total output power	8 W
Frequency Response	80 Hz -16 kHz, ±3dB
Signal to Noise Ratio	≥67dB
Aux Input (Audio in)	0.6 V RMS 20kohm
Tuning Range	FM 87.5 - 108 MHz
Tuning grid	50 KHz
- Mono, 26dB quieting sensitivity	<22 dBf
- Stereo, 46dB quieting sensitivity	<51 dBf
Search Sensitivity	<41 dBf
Total Harmonic Distortion	<2%
Signal to Noise Ratio	FM: >45 dB
Speaker Impedance	4 ohm
Speaker Driver	57mm
Sensitivity	>84dB/m/W
AC power	220V~ , 50Hz
Operation Power Consumption	15 W
Dimensions - Main Unit (W x H x D)	260 x 138 x 185 mm
Weight (Main unit, without packing)	1.13 kg

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	×	○	○	○	○	○
Accessories (Remote control & cables) 附件 (遥控器、电源线、连接线)	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。
○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 - 2006 标准规定的限量要求。

×: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.