

Quick start guide



Step A *Connect*

Step B *Setup*

 
Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.



FM Antenna





MW Antenna




Remote Control


Pull out the plastic protective sheet before use.

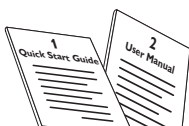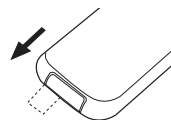

User Manual
Quick Start Guide

 

USB Cable

 

DB Cable

PHILIPS

Step A *Connect*

1

Connect the main set to the left speaker with the supplied DB cable.

2

Connect the right speaker to the left speaker.

3

Connect the MW and FM antennas.

4


Connect the power cable on the back of the left speaker.

Tip

See the User Manual for how to connect other equipment to this system.

Speaker
(right)


Speaker
(left)

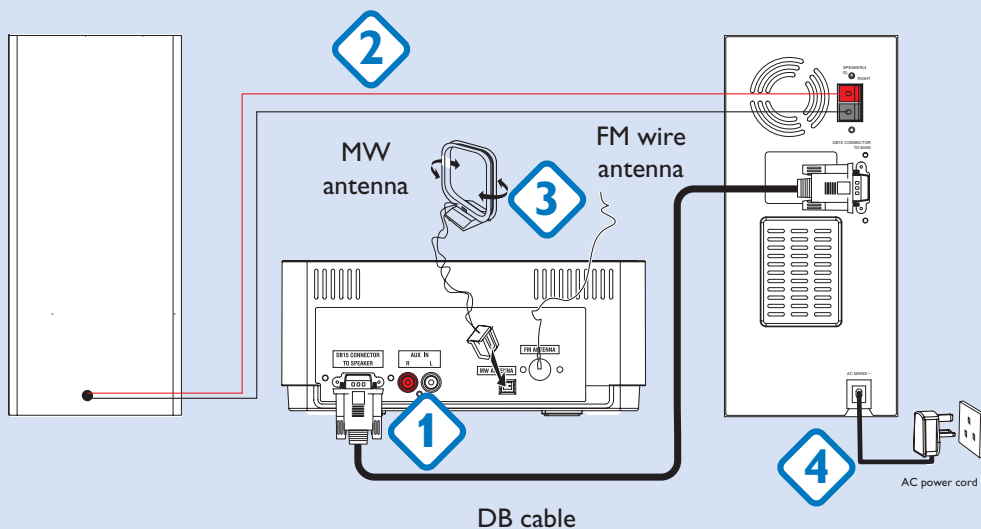

Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **STANDBY-ON/ECO POWER**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **DISPLAY/CLOCK** on the remote control for more than 3 seconds.

2

Press **VOLUME +/-** (**VOL+/-** on the remote) repeatedly to select clock mode.

3


Press **VOLUME +/-** (**VOL+/-** on the remote) repeatedly to set the hour.

4

Press **VOLUME +/-** (**VOL+/-** on the remote) repeatedly to set the minute.

5


Press **DISPLAY/CLOCK** again to store the setting.

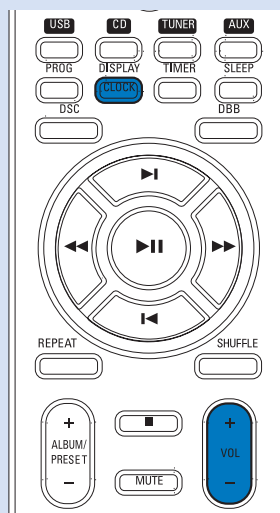

Step C Enjoy

Playing a disc

1

Press **OPEN•CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.


→ Make sure the label side of the disc is facing up.

2

Press **▶||** to start playback.

3

To stop playback, press **■**.

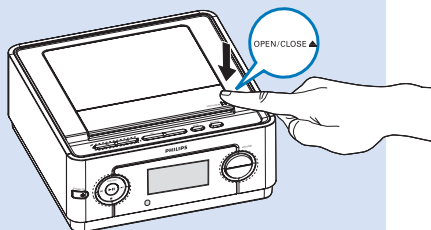

Programming and tuning to radio stations

1


Press **TUNER** to select the tuner source.

2

Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.

3


Press **◀** or **▶** until the desired preset station is displayed.

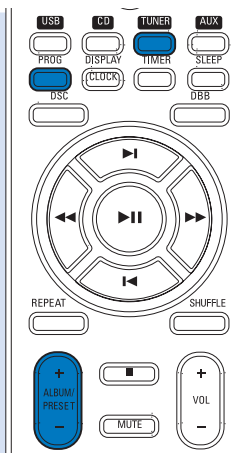

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

1

Insert the USB device's USB plug into the socket  on the set.

2

Press **SOURCE** once or more to select **USB** (or **USB** on the remote control).

3

Play the USB's audio files as you do with the albums/tracks on a CD.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

