

Always there to help you

Register your product and get support at
www.philips.com/support



FWM205



User Manual

PHILIPS

Contents

1 Important	3
Important Safety Instructions	3

2 Your Mini Hi-Fi System	4
Introduction	4
What's in the box	4
Overview of the main unit	5
Overview of the remote control	6

3 Get started	7
Connect MW (AM) antenna	7
Connect speakers	8
Prepare the remote control	8
Connect power	8
Turn on	9
Set clock	9

4 Play	9
Play disc	9
Play from USB	9
Basic play operations	9
Repeat and shuffle play	10
Program tracks	10

5 Listen to radio	10
Tune to radio stations	10
Store radio stations automatically	10
Store radio stations manually	11
Select a preset radio station	11

6 Listen to an external device	11
---------------------------------------	-----------

7 Play options	12
Adjust sound	12
Display different information	12

8 Other features	12
Set alarm timer	12
Set sleep timer	12

9 Product information	13
General information	13
Disc	13
Tuner	13
Amplifier	13
Speakers	13
USB playability information	13
Supported MP3 disc formats	14
Maintenance	14

10 Troubleshooting	15
---------------------------	-----------

11 Notice	16
Compliance	16
Trademarks	16
Copyright	16

1 Important

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electric shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- 11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

- ⑮ Apparatus shall not be exposed to dripping or splashing.
 - ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
 - ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

2 Your Mini Hi-Fi System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this Hi-Fi system, you can:

- enjoy audio from discs, USB device, or other external devices; and
- listen to FM/AM radio stations

To enrich sound, this Hi-Fi system offers you these sound effects³:

- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)
- Max Sound for instant power boost

The Hi-Fi system supports these media formats:




What's in the box






Check and identify the contents of your package:

- Main unit
- Remote control (with batteries)

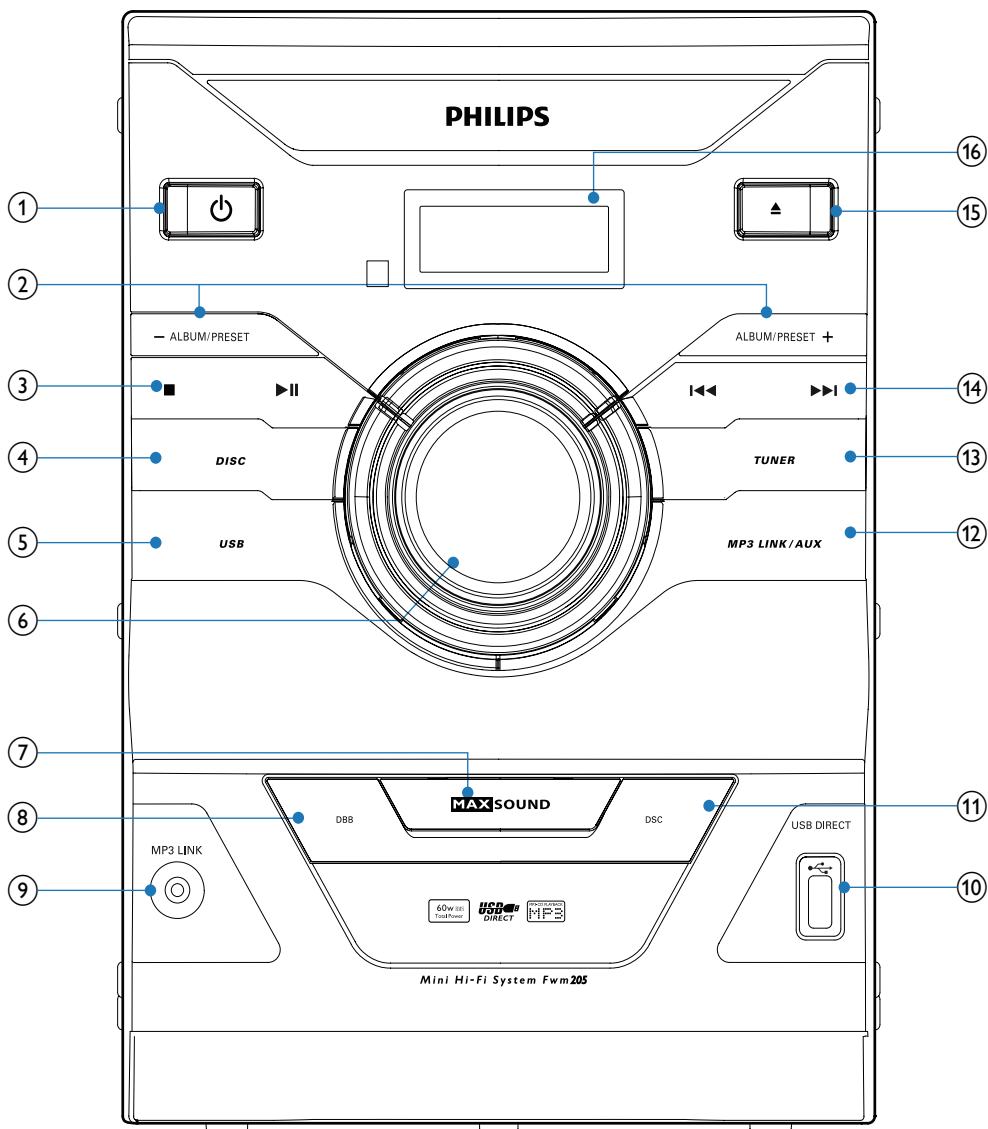
- Speaker box (x 2)
- AM loop antenna
- User manual
- Quick start guide



Overview of the main unit



- ① 
 - Turn the Hi-Fi system on.
 - Switch to standby mode.
- ② **ALBUM/PRESET +/-**
 - Select a preset radio station.
 - Skip to the previous or next album.
- ③ 
 - Stop play or erase a program.
 - Start or pause play.
- ④ **DISC**
 - Select disc source.
- ⑤ **USB**
 - Select USB source.
- ⑥ **Volume control**
 - Adjust volume.
- ⑦ **MAX SOUND**
 - Turn instant power boost on/off.
- ⑧ **DBB**
 - Turn dynamic bass enhancement on/off.
- ⑨ **MP3 LINK**
 - Connect an external audio device.
- ⑩ **USB DIRECT** 
 - Connect USB device.
- ⑪ **DSC**
 - Select a preset sound setting.
- ⑫ **MP3 LINK/AUX**
 - Select MP3 link or AUX source.
- ⑬ **TUNER**
 - Select tuner source.
- ⑭ 
 - Skip to the previous or next track.
 - Search within a track or disc.
 - Tune to a radio station.
 - Adjust time.
- ⑮ 
 - Open or close the disc tray.
- ⑯ **Display panel**
 - Show current status.

 Overview of the remote control

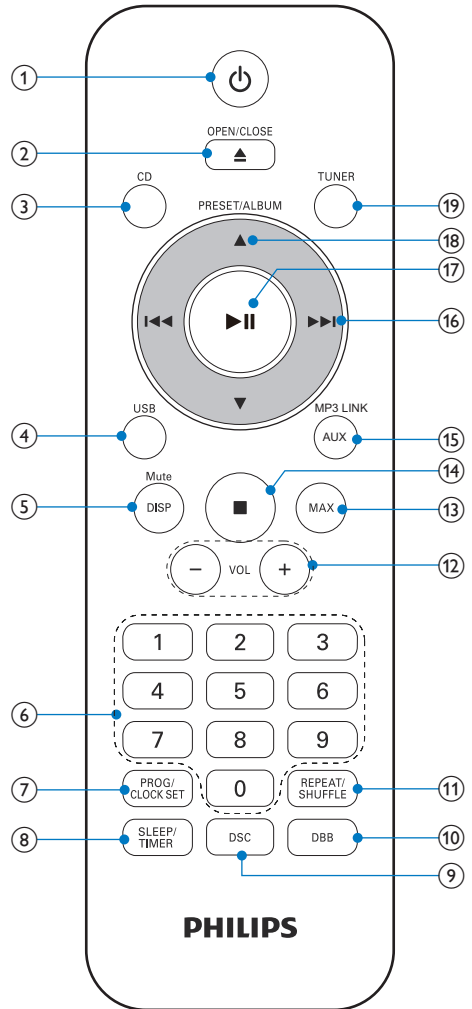

- ① 
 - Turn the Hi-Fi system on.
 - Switch to standby mode.
- ② **OPEN/CLOSE** 
 - Open or close the disc tray.
- ③ **CD**
 - Select disk source.

- ④ **USB**
 - Select USB source.
- ⑤ **DISP/MUTE**
 - Mute or unmute sound.
 - Display clock and play information.
- ⑥ **Numeric keypad**
 - Select a track from a disc directly.
- ⑦ **PROG/CLOCK SET**
 - Set time.
 - Program tracks and radio stations.
- ⑧ **SLEEP/TIMER**
 - Set alarm or sleep timer.
- ⑨ **DSC**
 - Select a preset sound setting.
- ⑩ **DBB**
 - Turn dynamic bass enhancement on/off.
- ⑪ **REPEAT/SHUFFLE**
 - Play tracks repeatedly or randomly.
- ⑫ **VOL +/-**
 - Adjust volume.
- ⑬ **MAX**
 - Turn instant power boost on/off.
- ⑭ **■**
 - Stop play.
 - Erase a program.
- ⑮ **MP3 LINK/AUX**
 - Select MP3 Link or AUX source.
- ⑯ **◀◀ / ▶▶**
 - Search within a track or disc.
 - Tune to a radio station.
 - Skip to the previous or next track.
 - Adjust time.
- ⑰ **▶▶**
 - Start or pause play.
- ⑱ **PRESET/ALBUM ▲ ▼**
 - Select a preset radio station.
 - Skip to the previous or next album.
- ⑲ **TUNER**
 - Select tuner source.

3 Get started




Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.


Always follow the instructions in this chapter in sequence.

Connect MW (AM) antenna

- 1 Assemble the MW (AM) loop antenna.

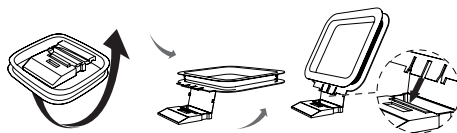

- 2 Connect the MW (AM) loop antenna to the **AMANT** socket at the back of the Hi-Fi system.


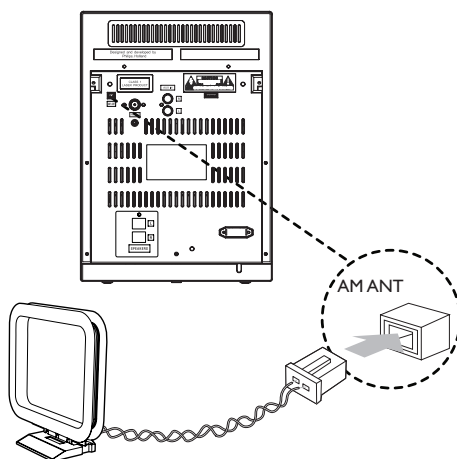


Connect speakers

Note

- For better sound effect, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the "Specifications" section of this manual.

Insert speaker wires completely into the speaker sockets at the back of the Hi-Fi system.

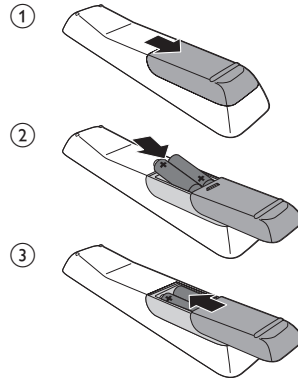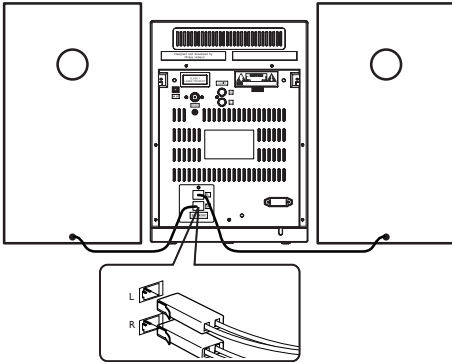

Connect power

Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the head of the AC power cord.
- Risk of electric shock! When you unplug the power cord, always pull the plug from the socket. Never pull the cord.

Note

- Before connecting the AC power cord, make sure that you have completed all other connections.


Prepare the remote control

Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.

Before using the remote control, install two AAA batteries with correct polarity (+/-) as indicated.

Connect the AC power cord to the wall power socket.

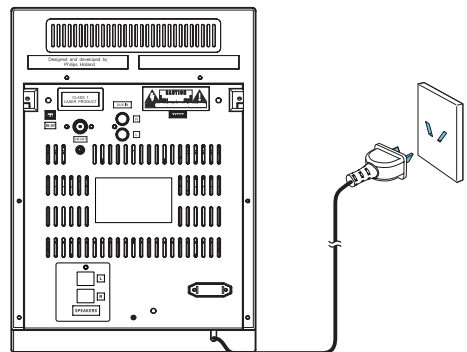

Turn on

Press **⏻**.

- ↳ The Hi-Fi system switches to the last selected source.

Switch to standby mode

Press **⏻** to switch the Hi-Fi system to standby mode.

- ↳ The clock (if set) appears on the display panel.

Set clock

- 1 In standby mode, press and hold **CLOCK SET** for two seconds.
 - ↳ **[SET CLOCK]** (set clock) scrolls on the display, then **[24H]** or **[12H]** appears.
- 2 Press **⏪ / ⏩** to select 12/24 hour format.
- 3 Press **CLOCK SET** to confirm.
 - ↳ The hour digits begin to blink.
- 4 Repeat steps 2 to 3 to set the hour and minute.



Tip

- To exit clock setting mode, press **■**.

4 Play

Play disc

Note

- Make sure that the disk contains playable audio content.

- 1 Press **CD** to select the disk source.
- 2 Press **▲**.
 - ↳ The disc tray opens.
- 3 Insert a disc with the printed side facing up, then press **▲** to close the disc tray.
 - ↳ **[Read]** (read) blinks for about 10 seconds, then play starts automatically.

Play from USB

Note

- Make sure that the USB device contains playable audio content.

- 1 Insert the USB device into the **USB** socket.
- 2 Press **USB** to select the USB source.
 - ↳ Play starts automatically.

Basic play operations

You can control play through the following operations.

Function	Action
To stop play	Press ■ .
To pause or resume play	Press ▶ .
To skip to a track	Press ⏪ / ⏩ .

To search during play	Press and hold ◀◀ / ▶▶ , then release to resume normal play.
To select an album (for MP3/WMA)	Press ▲ / ▼ .
To select a track directly	Press the numeric buttons.

Repeat and shuffle play

- 1 Press **REPEAT** repeatedly to select:
 - **🔁**: play current track repeatedly.
 - **🔁ALL** (repeat all): play all tracks repeatedly.
 - **🔁ALB** (for MP3/WMA only): play current album repeatedly.
 - **🔁**: play all tracks randomly.
- 2 To return to normal play, press **REPEAT** repeatedly until **[TRK]** (track) is displayed.

Program tracks

You can program a maximum of 20 tracks.

- 1 In CD or USB mode, press **■** to stop playback, then press **PROG** to activate programming mode.
 - ↳ **[PROG]** (program) and the preset number blinks on the display panel.
- 2 For MP3/WMA tracks, press **▲** / **▼** to select an album.
- 3 Press **◀◀** / **▶▶** to select a track number, then press **PROG** to confirm.
- 4 Repeat steps 2 to 3 to program more tracks.
- 5 Press **▶▶▶** to play the programmed tracks.
 - ↳ During play, **[PROG]** (program) is displayed.
 - To erase the program, when playback is stopped, press **■**.

5 Listen to radio

Tune to radio stations

Note

- To improve FM reception, fully extend and adjust the position of FM antenna.

- 1 Press **TUNER** repeatedly to select FM/ MW(AM) tuner source.
- 2 Press and hold **◀◀** / **▶▶** for 2 seconds.
 - ↳ The Hi-Fi system tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.

To tune to a weak station:

- 1 Press **◀◀** / **▶▶** repeatedly until you find optimal reception.

Store radio stations automatically

Note

- You can store a maximum of 30 FM radio stations and 10 MW(AM) radio stations.

In tuner mode, press and hold **PROG** for 2 seconds.

- ↳ **[AUTO]** (auto) is displayed.
- ↳ The system stores all the available stations and broadcasts the first available station automatically.

Store radio stations manually

- 1 Tune to an FM/MW(AM) radio station.
- 2 Press **PROG**.
↳ The preset number blinks.
- 3 Press ▲ / ▼ repeatedly to select a number.
- 4 Press **PROG** again to confirm.
- 5 Repeat steps 1 to 4 to store other stations.

Note

- To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press ▲ / ▼ repeatedly or the numeric buttons on the remote control to select a preset radio station.

6 Listen to an external device

You can also listen to an external audio device through this unit.

For a audio device with a headphone socket:

- 1 Press **MP3 LINK** to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3 LINK** socket on this unit
 - the headphone socket on an MP3 player.
- 3 Start to play the MP3 player. (See the user manual of the MP3 player)

For other audio devices:

- 1 Press **AUX** to select the AUX source.
- 2 Connect audio cables to:
 - the **AUX IN** sockets on this unit
 - the audio output sockets on the audio device.
- 3 Start to play the device. (See the device user manual)

7 Play options

Adjust sound

During play, you can adjust volume and select the sound effects.

Function	Action
To increase or decrease volume	Press VOL +/- .
To mute or resume sound	Press and hold MUTE for two seconds.
To turn instant power boost on or off	Press MAX .
To turn dynamic bass enhancement on or off	Press DBB .
To select a preset sound effect:	Press DSC repeatedly.
FLAT (flat);	
OPTIMAL (optimal);	
JAZZ (jazz);	
ROCK (rock);	
TECHNO (techno)	

Display different information

During play, press **DISPLAY** repeatedly to view time and different play information.

8 Other features

Set alarm timer

This Hi-Fi system can be used as an alarm clock. For alarm source, you can select disc, tuner, or USB.



Note

- Make sure that you have set the clock correctly.

- 1 In standby mode, press and hold **TIMER** until **[SET TIMER]** (set timer) appears.
↳ **[SELECT SOURCE]** (select source) scrolls on the display.
- 2 Press the source selection keys to select an alarm source: **DISC**, **TUNER**, or **USB**.
- 3 Press **TIMER** to confirm.
↳ The hour digits blink.
- 4 Press **◀◀ / ▶▶** to set the hour.
- 5 Press **TIMER** to confirm.
↳ The minute digits blink.
- 6 Repeat steps 4-5 to set the minute.
↳ The alarm icon appears.

Set sleep timer

This Hi-Fi system can switch to standby mode automatically after a preset time period. Press **SLEEP** repeatedly to select a preset period (in minutes).

↳ When the sleep timer is activated, **zz** appears.

To deactivate the sleep timer:

Press **SLEEP** repeatedly until **[SLP OFF]** (sleep off) is displayed.

↳ **zz** disappears.

9 Product information

Note

- Product information is subject to change without prior notice.

General information

AC Power	110 - 127V/220 - 240V ~, 50/60 Hz
----------	-----------------------------------

Operation Power Consumption	45 W
-----------------------------	------

Standby Power Consumption	< 8 W
---------------------------	-------

USB Direct	Version 2.0/1.1
------------	-----------------

Dimensions	
- Main Unit (W x H x D)	220 x 312 x 248 mm
- Speaker Box (W x H x D)	195 x 310 x 207 mm

Weight	
- With Packing	9.5 kg
- Main Unit	3.4 kg
- Speaker Box	2 x 2.1 kg

Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24Bits / 44.1kHz
Total Harmonic Distortion	<1%
Frequency Response	63Hz - 16kHz
S/N Ratio	>65dBA

Tuner

Tuning Range	FM:87.5 - 108 MHz MW: 530 - 1710 kHz
--------------	---

Tuning grid	FM: 50 KHz MW: 10 KHz
-------------	--------------------------

Sensitivity	
- Mono, 26dB S/N Ratio	< 22 dBu
- Stereo, 46dB S/N Ratio	< 45 dBu

Search Selectivity	< 28 dBu
--------------------	----------

Total Harmonic Distortion	< 3%
---------------------------	------

Signal to Noise Ratio	> 45 dBA
-----------------------	----------

Amplifier

Max Output Power	2 X 30 W RMS
------------------	--------------

Frequency Response	63 - 16000 Hz, ± 3 dB
--------------------	---------------------------

Signal to Noise Ratio	> 55 dBA
-----------------------	----------

AUX IN Input (MP3 LINK input)	500 mV RMS
-------------------------------	------------

Speakers

Speaker Impedance	4ohm
-------------------	------

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- Memory cards (requires an additional card reader to work with this unit)

Supported formats:

- USB or memory file format FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier

- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 511 (depending on file name length)
- Maximum album number: 511
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~320 (kbps), variable bit rates
- ID3 tag v2.0 or later

Maintenance

Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.

10 Troubleshooting



Warning

- Never remove the casing of this product.

To keep the warranty valid, never try to repair the product yourself.

If you encounter problems when using this product, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the product is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the Hi-Fi system

- Disconnect and reconnect the AC power plug, then turn on the system again.
- As a power-saving feature, the unit switches off automatically 15 minutes after track play reaches the end and no control is operated.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.

- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

Alarm does not work

- Set the clock/alarm correctly.

Clock/alarm setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/alarm.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

11 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

Compliance

This apparatus includes this label:



Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.



WARNING: Care with the use and disposal of batteries.

- Do not dispose of batteries along with normal household waste.
- The improper disposal of batteries may present risks to the environment and human health.
- In order to contribute to environmental quality and your health, Philips will accept batteries sold or supplied with its products that have reached the end of their life; these will be forwarded for environmentally correct disposal. Philips provides collection points at Technical Assistance.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademarks



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Copyright

2014 © WOOX Innovations Limited. All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.' Specifications are subject to change without notice. WOOX reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



All registered and unregistered trademarks are property of their respective owners.
2014 © WOOX Innovations Limited. All rights reserved.

This product was brought to the market by WOOX Innovations Limited or one of its affiliates, further referred to in this document as WOOX Innovations, and is the manufacturer of the product. WOOX Innovations is the warrantor in relation to the product with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V."

