User manual Manual do usuário Manual del usuario



PHILIPS

México Es necesario qu [,] manejo.	e lea cuidadosamente su instructivo de
Verifi St Para evitar el	ECAUCIÓN - ADVERTENCIA abrir, riesgo de choque eléctrico ATENCIÓN ique que el voltaje de alimentación ea el requerido para su aparato riesgo de choque eléctrico, no quite la tapa. uerir servicio, dirijase al personal calificado.
En caso ac req	acti scivicio, unijuse ul personal cumedad.
Descripción	Minisistema de Audio
Descripción: Modelo :	Minisistema de Audio FWM576/55
Descripción: Modelo : Alimentación:	FWM576/55
Modelo :	
Modelo : Alimentación:	FWM576/55 110–127 / 220–240V~; 50–60 Hz
Modelo : Alimentación: Consumo:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W
Modelo : Alimentación: Consumo: Importador:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W Philips Mexicana, S.A. de C.V.
Modelo : Alimentación: Consumo: Importador: Domicilio:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W Philips Mexicana, S.A. de C.V. Av. La Palma No.6 Col. San Fernando La Herradura Huixquilucan
Modelo : Alimentación: Consumo: Importador:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W Philips Mexicana, S.A. de C.V. Av. La Palma No.6 Col. San Fernando La Herradura Huixquilucan Edo. de México C.P. 52784
Modelo : Alimentación: Consumo: Importador: Domicilio: Localidad y Tel:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W Philips Mexicana, S.A. de C.V. Av. La Palma No.6 Col. San Fernando La Herradura Huixquilucan Edo. de México C.P. 52784 Tel.52 69 90 00
Modelo : Alimentación: Consumo: Importador: Domicilio:	FWM576/55 110–127 / 220–240V~; 50–60 Hz 165W Philips Mexicana, S.A. de C.V. Av. La Palma No.6 Col. San Fernando La Herradura Huixquilucan Edo. de México C.P. 52784 Tel.52 69 90 00 Philips Electronics HK, Ltd.

LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE USAR SU APARATO.


AVISO IMPORTANTE


Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).
- Cuando el aparato no haya sido operarado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

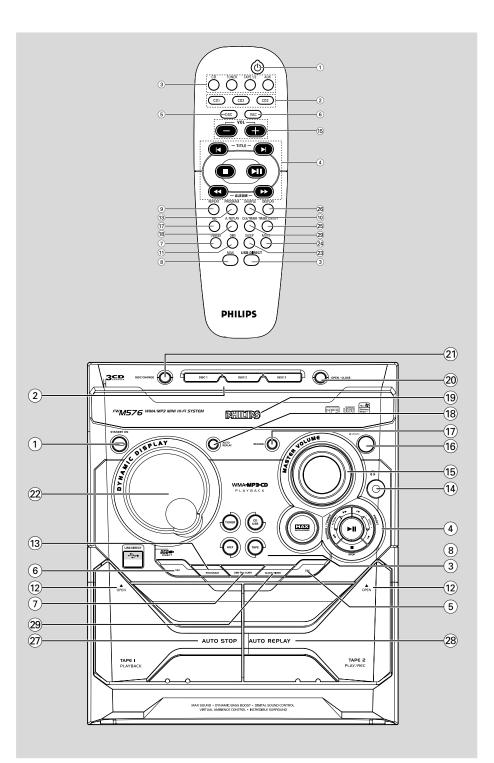

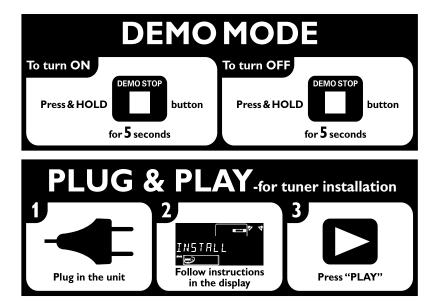

Index

English6	English
Español 30	Español
Português 54	Português

Contents

General Information

Supplied accessories	7
Environmental information	7
Safety information	7

Preparations

Rear connections	8–9
Power	
Antennas Connection	
Speakers Connection	
Optional connection	9
Connecting a USB device or memory car	ď
Inserting batteries into the remote control	9

Controls

Controls on the system and remote co	ontrol
	10–11

Basic Functions

Plug and Play	12
Demonstration mode	13
Switching the system on	13
Switching the system to standby mode	13
Dim mode	13
Volume control	14
Sound control	14
MAX Sound	
VAC (Virtual Ambience Control)	
DSC (Digital Sound Control)	
DBB (Dynamic Bass Boost)	
Incredible Surround	

CD/MP3-CD Operations

Discs for playback 15
About MP3 disc 15
Loading discs 15
Playing discs
Replacing discs during playback 16
Selecting a desired track/passage 16
Selecting a desired Album/Title 16
Different play modes: SHUFFLE and REPEAT
Programming the disc tracks 17
Erasing the programme 17

Radio Reception

Tuning to radio stations	18
Storing preset radio stations	18–19
Automatic Preset Programming	
Manual Preset Programming	
Tuning to preset radio stations	19
Changing tuning grid	19

Tape Operation/Recording

Loading tape	20
Playing tapes	20
Rewinding / Fast forwarding	21
General information on recording	21
Preparation for recording	21
One touch recording	21
CD/USB Synchronised start recording	22
Dubbing tapes	22

External Sources

Connecting external equipment	22
Using a USB mass storage device	22

Clock/Timer

View clock Clock setting Timer setting To deactivate the TIMER	23
To activate the TIMER Sleep timer setting	24
Specifications	25
Maintenance	
Troubleshooting	26–27

IMPORTANT! PLEASE NOTE THAT THE VOLTAGE SELECTOR LOCATED AT THE REAR OF THIS SYSTEM IS PRESET AT 220V FROM THE FACTORY. FOR COUNTRIES THAT OPERATE AT 110V-127V, PLEASE ADJUST TO 110V-127V BEFORE YOU SWITCH ON THE SYSTEM.

Supplied accessories

- 2 speaker boxes
- remote control
- MW loop antenna
- FM wire antenna
- AC power cord

Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Safety information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Don't expose the system to dripping or splashing.
- Install this unit near the AC outlet and where the AC power can be reached easily.
- The lens may cloud over when the system is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the system in the warm environment until the moisture evaporates.
- The mechanical parts of the set contain selflubricating bearings and must not be oiled or lubricated.
- When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.

Preparations

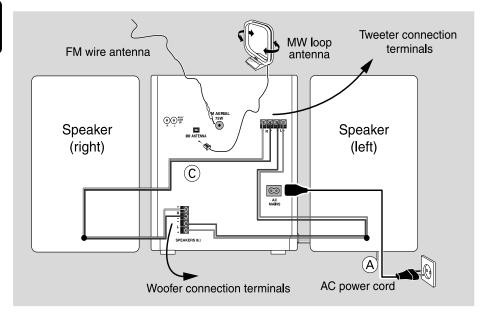

Rear connections

The type plate is located at the rear of the system.

A Power

 Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.

 If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage.

Warning!

 For optimal performance, use only the original power cable.


 Never make or change any connections with the power switched on.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it (not available for all versions).

B Antennas Connection

Connect the supplied MW loop antenna and FM antenna to the respective terminals. Adjust the position of the antenna for optimal reception.

MW Antenna

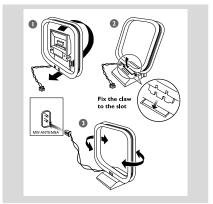

 Position the antenna as far as possible from a TV, VCR or other radiation source.

FM Antenna



 For better FM stereo reception, connect an outdoor FM antenna to the FM ANTENNA terminal.

© Speakers Connection

Front Speakers

Connect the speaker wires to the **SPEAKERS** terminals, right speaker to "**R**" and left speaker to "**L**", red wires to "**+**" and black wires to "**-**" of the woofer connection terminals, gray wires to "**+**" and blue wires to "**-**" of the tweeter connection terminals.



 Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

 For optimal sound performance, use the supplied speakers.

 Do not connect more than one speaker to any one pair of +/- speaker terminals.

 Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Optional connection

The optional equipment and connecting cords are not supplied. Refer to the operating instructions of the connected equipment for details.

Connecting a USB device or memory card

By connecting a USB mass storage device (including USB flash memory, USB flash players or memory cards) to the Hi-Fi system, you can enjoy the device's stored music through the powerful speakers of Hi-Fi system. Insert the USB device's USB plug into the socket on the set.

OR for the devices with USB cables:

- Insert one plug of the USB cable (not supplied) to the socket on the set.
- 2 Insert the other plug of the USB cable to the USB output terminal of the USB device.

OR

for the memory card:

Insert the memory card into a card reader (not supplied).

Use a USB cable (not supplied) to connect the card reader into the +>+ socket on the set.

Connecting a non-USB device

 
Use a cinch cable to connect **AUX** to the analogue audio out terminals of an external equipment (TV,VCR, Laser Disc player; DVD player or CD Recorder).

Note:

 If you are connecting equipment with a mono output (a single audio out terminal), connect it to the AUX left terminal. Alternatively, you can use a "single to double" cinch cable (the output sound still remain mono).

Inserting batteries into the remote control

Insert two batteries (Type R06 or AA) into the remote control with the correct polarity as indicated by the "+" and "-" symbols inside the battery compartment.



CAUTION!

- Remove batteries if they are exhausted
- or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

- () STANDBY ON ပံ
 - to switch the system on or to standby mode.
- 2 DISC 1/2/3 (CD 1/2/3)
- to select a disc tray for playback.
- 3 Source selection to select the following :

CD/USB (on the system only) to switch between disc or USB source.

CD (on the remote only)

- to select disc source.
- press repeatedly to select a disc tray for playback.

TUNER

to select waveband : FM or MW.

TAPE (TAPE 1/2)

to select tape deck 1 or 2.

AUX

 to select the input for an additional appliance : AUX.

USB DIRECT (on the remote only) to select USB source directly.

(4) Mode Selection

ALBUM −/+ ◄

for MP3-CD/USB . to select previous/next album. for CD to search backward/forward. for Tuner to tune to a lower or higher radio frequency. for Tape to rewind or fast forward. for Clock *(on the system only)* to set the hour.

STOP ■

- - plug & play mode.

► II

for CD/MP3-CD/USB to start or interrupt playback.

for Tape to start playback.

for Plug & Play (on the system only) to initiate and start plug & play mode.

TITLE-/+ ◄/► PRESET

for MP3-CD/USB.	to select previous/next title.
for CD	to skip to the beginning of
	the current, previous, or next
	track.
for Tuner	to select a preset radio
	station.
for Clock	(on the system only) to set the
	minute.

5 DSC

 Selects different type of preset sound equaliser settings. (OPTIMAL, JAZZ, ROCK or TECHNO)

6 VAC

Selects different type of ambience-based equaliser settings. (HALL, CONCERT or CINEMA)

7 DBB/INC. SURR (DBB/IS)

- to select the desired bass boost level. (DBB 1, DBB 2, DBB 3 or DBB OFF)
- to activate or deactivate the surround sound effect.

8 MAX SOUND (MAX)

to activate or deactivate the optimal mix of various sound features.

9 REPEAT

 to playback track(s)/disc(s)/programme repeatedly.

10 SHUFFLE

- Turns on/off the random play mode.

(1) DIM

 to select different brightness for the display screen : DIM 1, DIM 2, DIM 3 or DIM OFF.

12 OPEN **▲**

to open the tape deck door.

13 PROGRAM

for CD/ MP3-CD . to programme disc tracks. for Tuner to programme preset radio stations.

for Clock to select 12- or 24-hour clock mode.

14 🎧

to connect headphones.

(15) MASTER VOLUME (VOL -/+)

to increase or decrease the volume.

16 IR SENSOR

sensor for the infrared remote control.

17 RECORD (REC)

to start recording on tape deck 1 or 2.

18 AUTO REPLAY (A. REPLAY)

 to select continuous playback in either AUTO REPLAY or ONCE MODE only.

19 Disc tray

20 OPEN•CLOSE

to open or close the disc tray.

21 DISC CHANGE

to change disc(s).

22 Display screen

to view the current status of the system.

23 SLEEP

to activate/deactivate or set the sleep timer.

24 MUTE

Mutes or restores the volume.

25 TIMER ON/OFF

- activates/deactivates the timer function.
- 26 DISPLAY
- to display the album and title name for MP3 disc.
- 27) Tape deck 1
- 28 Tape deck 2
- 29 CLOCK•TIMER (CLK/TIMER)
- to view the clock.

30 USB DIRECT 🖧

jack for the external USB mass storage device.

Hearing Safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.


- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notes for remote control:

 First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).

Then select the desired function (▶, /◄, ▶), for example).

Basic Functions

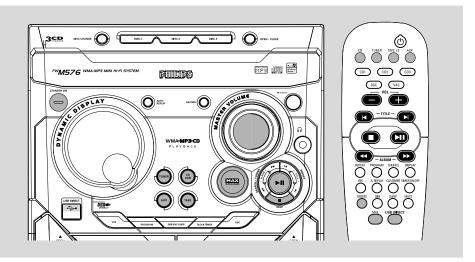

IMPORTANT!

Before you operate the system, complete the preparation procedures.

Plug and Play (for tuner installation)

Plug and Play allows you to store all available radio stations automatically.

First time setup/power up

When you turn on the main supply, "RUTO INSTRLL - PRESS PLAY" is displayed.

Press ► II on the system to start installation.
 → "PLUG RNI PLRY" "INSTRLL" is displayed, followed by "TUNER" and "RUTD".
 → PROG starts flashing.

 All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by MW band.
 When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station will be played.

To reinstall Plug and Play

- In standby or demonstration mode, press and hold > II on the system until "RUTO INSTRLL - PRESS PLRY" is displayed.
- Press > II again to start installation.
 All previously stored radio stations will be replaced.

To exit without storing the Plug and Play

Press ■ on the system. → If you do not complete the Plug and Play installation, the function will be restarted when you next turn on the main supply again.

Notes:

 When the power is turned on, the disc tray may open and close to initialise the system.

- If no stereo frequency is detected during Plug and Play, "CHECK ANTENNA" will be displayed.

 During Plug and Play, if no button is pressed within 15 seconds, the system will exit Plug and Play mode.

Demonstration mode

The system has a demonstration mode that shows the various features offered by the system.

To activate the demonstration

 In standby mode, press and hold ■ on the system for 5 seconds to switch to demonstration.

To deactivate the demonstration

 Press and hold
 on the system for 5 seconds to switch to standby mode.

Switching the system on

In standby/demonstration mode

- Press STANDBY ON/ U to switch on the last selected source.
- Press CD, TUNER, TAPE (TAPE 1/2) or AUX.
- Press OPEN+CLOSE, DISC 1/2/3(CD 1/2/ 3), DISC CHANGE.
 - → The system will switch to CD mode.

Switching the system to standby mode

In demonstration mode

● Press and hold ■ on the system.

In any other source mode

Press STANDBY ON (or ¹/₄) on the remote control).

→ The clock will appear on the display when the system is in standby mode.

Dim mode

You can select the desired brightness for the display.

In any source mode, press **DIM MODE** repeatedly to select DIM 1, DIM 2, DIM 3 or DIM OFF display mode.

→ DIM is shown, except for DIM OFF mode.

DIM mode	Brightness	Spectrum Analyser
1	normal	off
2	half	on
3	half	off
OFF	normal	on

Volume control

Adjust **VOLUME** to increase (turn knob clockwise or press **VOLUME +**) or decrease (turn knob anti-clockwise or press **VOLUME –**) the sound level.

To listen through the headphones

 Connect the headphones plug to the ∩ socket at the front of the system.
 → The speakers will be muted.



To switch off the volume temporarily

- Press MUTE on the remote control.
 Playback will continue without sound and "TUTE" is displayed.
- To restore the volume, press MUTE again or increase the volume level.

Sound control

For optimal sound listening, select only one of the following navigation sound controls at a time : MAX, DSC or VAC.

MAX Sound

MAX sound provides the best mixture of various sound features (DSC, VAC, DBB, for example).

Press MAX SOUND (or MAX on the remote control) repeatedly.

→ If activated, **MAX SOUND** is shown and the MAX SOUND button lights up.

→ If deactivated, "MBX DFF" is displayed and the MAX button black out.

Note:

 When MAX sound is selected, all other sound navigation will switch off automatically.

VAC (Virtual Ambience Control)

The VAC feature enables you to adjust the system to select a type of environment.

- Press **VAC** to select : CINEMA, HALL or CONCERT.
 - ➔ The selected VAC is shown.

Note:

 When you select VAC, Incredible Surround will switch on automatically.

DSC (Digital Sound Control)

The DSC feature enables you to enjoy special sound effects that have preset equaliser settings, providing the best music reproduction.

- Press DSC to select : OPTIMAL, JAZZ, ROCK or TECHNO.
 - ➔ The selected DSC is shown.

DBB (Dynamic Bass Boost)

There are three DBB settings to enhance the bass response.

Press DBB to select : DBB 1, DBB 2, DBB 3 or DBB OFF.

→ The selected **DBB** is shown, except for DBB OFF mode.

Note:

 Some discs or tapes might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off DBB or reduce the volume.

Automatic DSC-DBB selection

The best DBB setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.

DSC	DBB
JAZZ	off
ROCK	on (3)
TECHNO	on (3)
OPTIMAL	on (2)

Incredible Surround


The Incredible Surround magnifies the virtual distance between the front speakers for an incredibly wide, enveloping, stereo effect.

 Press and hold DBB-INC SURR (or DBB/IS on the remote control) until "INCR SUR" is display.

➔ If activated, "INER SUR" is displayed.

➔ If deactivated, "IS DFF" is displayed.

CD/MP3-CD Operations

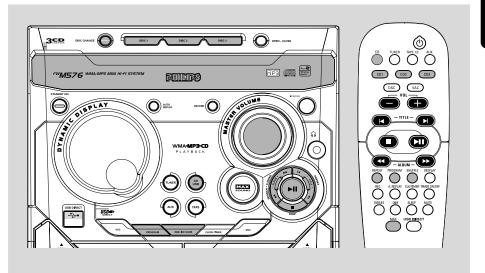

IMPORTANT!

 This system is designed for regular discs.
 Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the changer mechanism.

Do not load more than one disc into each tray.

Discs for playback

This system can playback all digital audio CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW)discs.

MP3-CDs (CD-ROMs with MP3 tracks)



 
About MP3 disc

Supported formats

- ISO9660, Joliet, Multisession
- Max. track number plus album is 255
- Max. nested directory is 8 levels
- The max. album number is 32
- The max. MP3 program track number is 99
- Supported VBR bit-rate
- Supported sampling frequencies for MP3 disc are: 32 kHz, 44.1 kHz, 48 kHz
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps)

Loading discs

- Press OPEN•CLOSE to open the disc tray.
- 2 Load up to two discs on the individual disc trays. To load the third disc, press DISC CHANGE.
 - → The disc tray will rotate until the empty tray is ready for loading.



CD/MP3-CD Operations

Press OPEN-CLOSE to close the disc tray.
 "READING DISC" scrolls. The selected disc tray, total number of tracks and the playing time will appear on the display.

→ A lighted button indicates that a disc is loaded on the disc tray.

→ For MP3 disc, the name of the first album and title will be scrolled through the display once and followed by "BXX TXXX".

Notes:

Load the discs with the label side facing up.

 To ensure good system performance, wait until the disc tray completely reads the disc(s) before proceeding.

 For MP3 disc, the disc reading time may exceed 10 seconds due to the large number of songs compiled into one disc.

Playing discs

To play current disc on the disc tray ● Press ► II .

 The current discs will play once, then stop.
 During playback, the selected disc tray, track number and elapsed playing time of the current track are displayed.

→ For MP3 disc, TITLE is shown. For mixed mode discs, only one mode will be selected for playback depending on the recording format.

To play the selected disc only

 In CD mode, press DISC 1/2/3 (or CD 1/2/3 on the remote control).

→ The selected disc will play once, then stop.

To interrupt playback

● Press ► II.

The current track time flashes.

● To resume playback, press ▶ Ⅱ again.

To stop playback

Press STOP

For MP3-CD

During playback, press **DISPLAY** to show the album and title name.

Replacing discs during playback

Press DISC CHANGE.

→ The disc tray will open without interrupting current playback.

To change the inner disc, press DISC CHANGE again.

→ "CHANGING JISE" is displayed and the disc will stop playing.

→ The disc tray will close to retrieve the inner disc, then reopen with the inner disc accessible.

Selecting a desired track/passage

To search for a particular passage during playback

 Press and hold ALBUM-/+ <<>> and release it when the desired passage is located.
 During searching, the volume will be reduced.

To select a desired track

- Press TITLE-/+I◀ / ►I repeatedly until the desired track is displayed.
- If playback is stopped, press
 II to start playback.

Selecting a desired Album/Title (MP3 disc only)

To select a desired album

Press ALBUM-/+ <<>> repeatedly.
 The album's name will scroll through the display once.

To select a desired title

Press TITLE-/+I◀ / ►I repeatedly.

 \rightarrow The title's name will scroll through the display once.

Note:

 The album and title will only displayed once when selected. To view again, press the DISPLAY button repeatedly to display ALBUM and TITLE alternatively.

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback.

 Press REPEAT on the remote control to select:
 "REPERT TRREK" – to repeat playback of the current track.

→ "REPERT DISE" – to repeat playback of the current disc.

→ "REPERT OFF" – to stop repeat function and playback current disc.

- To resume normal playback, press REPEAT until "REPERT OFF" is displayed.
- Press SHUFFLE on the remote control to select:

→ "SHUFFLE DN" – to random playback of the current disc.

→ "SHUFFLE DFF" – to stop shuffle function and playback current disc.

 To resume normal playback, press SHUFFLE until "SHUFFLE DFF" is displayed.
 REP or SHUF is shown, except SHUFFLE OFF mode

Note:

 During program play mode or playing a MP3 CD, it is not possible to repeat playback of the current disc (Repeat Disc mode).

Programming the disc tracks

Programming tracks is possible when playback is stopped. Up to 99 tracks can be stored in the memory in any order.

- Load the desired discs on the disc tray (refer to "Loading discs").
- Press DISC 1/2/3 to select a disc.
- Press PROG to start programming.
 PROG starts flashing.
- Press TITLE-/+ ◄ / ► repeatedly to select the desired track.
- For MP3 disc, press ALBUM-/+ ◄◄ → and TITLE-/+ I◄ / →I to select the desired album and title for programming.

- 9 Press PROG to store the track.
- To end programming, press STOP= once.
 PROG stays and the programme mode remains active.

→ The total number of tracks programmed and the total playing time are displayed.

→ For MP3 disc, total playing time will not be shown.

To start programme play, press ► II.
 * "PLAY PRDGRAM" is displayed.

Notes:

 It is not possible to create a programme with MP3 tracks from multiple CDs, or combined with normal audio tracks.

- If the total playing time is more than "99:59" then "-:--" is displayed instead of the total playing time.

- If you attempt to programme more than 99 tracks, "PROGRAM FULL" is displayed.

 During programming, if no button is pressed within 20 seconds, the system will exit the programme mode automatically.

To review the programme

 Stop playback and press TITLE-/+ ◄ / ► repeatedly.

To exit review mode, press STOP■.

Erasing the programme

Press STOP once when playback is stopped or twice during playback.


→ **PROG** disappears and "PRDGRAM ELEAREI" is displayed.

Note:

 The programme will be erased when the system is disconnected from the power supply or when the disc tray is opened.

For Recording, please refer to "Tape Operation/Recording".

Radio Reception

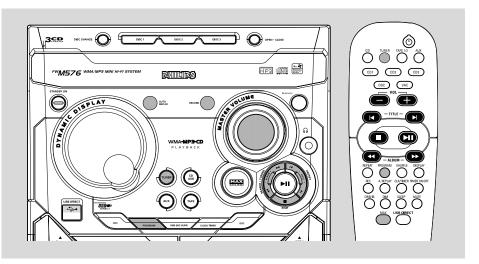

Tuning to radio stations

- Press TUNER to select TUNER mode.
 "TUNER" is displayed. A few seconds later, the current radio frequency will appear on the display.
- Press TUNER again to select the desired waveband : FM or MW.
- Press and hold ALBUM-/+ <>>> until the frequency indication starts to change, then release.

→ The display will show "SEARCH" until a radio station with sufficient signal strength is found.

- Repeat step 3 if necessary until you find the desired radio station.
- To tune to a weak station, press ALBUM-/+ <
 briefly and repeatedly until optimal reception found.

Storing preset radio stations

You can store up to 40 preset radio stations in the memory.

Automatic Preset Programming

 Plug and Play setting (refer to "Basic Functions -Plug and Play").
 OR Press TUNER to select TUNER mode.

To begin automatic preset from a desired preset number

Press TITLE-/+ I◀ / ▶ PRESET to select the desired preset number.

→ If a radio station has been stored in one of the presets, it will not be stored again under another preset number.

- Press and hold **PROGRAM** until "AUTO" is displayed.
 - PROG starts flashing.

All available radio stations with sufficient signal strength will be stored automatically, starting from FM and followed by MW band.

→ When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station will be played.

To stop storing the automatic preset

Press **PROGRAM** or **STOP** on the system.

Note:

 If no preset number is selected, automatic preset will begin from preset (1) and all your former presets will be overridden.

Manual Preset Programming

- Tune to your desired radio station (refer to "Tuning to radio stations").
- Press PROGRAM.
 - → PROG starts flashing.

The next available preset number is displayed for selection.

To store the radio station to another preset number

- Press TITLE-/+ I◀ / ▶ PRESET to select the desired preset number.
- Press PROGRAM again to store the radio station.

PROG disappears.

Repeat steps 1–3 to store other radio stations.

To exit manual preset mode

• Press \blacksquare on the system.

Notes:

- If you attempt to store more than 40 preset radio stations, "FULL" is displayed.

 During programming, if no key is pressed within 20 seconds, the system will exit the programme mode automatically.

Tuning to preset radio stations

Once you've programmed the radio stations, press TITLE-/+ |< / >| PRESET to select the desired preset number.
 The preset number, radio frequency, and waveband are displayed.

For Recording, please refer to "Tape Operation/Recording".

Changing tuning grid (not available for

all versions)

In North and South America, the frequency step between adjacent channels in the MW band is 10 kHz (9 kHz in some areas).

Changing the tuning grid will erase all previously stored preset radio stations.

Disconnect the system from the AC power supply (pull out the AC power cord).


While holding down **TUNER** and → on the system, reconnect the system to the AC power supply.

→ The display will show "GRID 9" or "GRID 10".

Notes:

GRID 9 and GRID 10 indicate that the tuning grid is in step of 9 kHz and 10 kHz respectively.
 The FM tuning grid also will be changed from 50 kHz to 100 kHz or vice versa.

Tape Operation/Recording

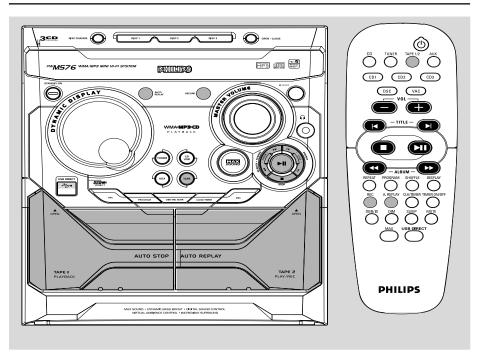

IMPORTANT!

Before playing a tape, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
C-120 tape is extremely thin and is easily deformed or damaged. It is not recommended for use in this system.
Store the tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV or speaker).

Loading tape

• Press **OPEN** to open the tape deck door.



2 Load the tape with the open side downward and full spool to the left.

Olose the tape deck door.

Playing tapes

To playback a selected tape deck

- Press TAPE (or TAPE 1/2 on the remote control) repeatedly to select tape deck 1 or 2.
- 2 Press ▶ II.

To stop playback

Press .

To select automatic replay or one time playback

 Press AUTO REPLAY (or A.REPLAY) repeatedly to select the different playback modes.

→ "RUTO REPLAY" ((\frown)) or "DNEE" (\frown) is displayed.

- AUTO REPLAY ... the tape will rewind automatically at the end of playback and replay again. It will replay up to a maximum of 20 times. ONCE the tape will playback the
- ONCE the tape will playback the selected side once and then stop.

Tape Operation/Recording

Rewinding / Fast forwarding

Stop playback, press << >> .
 → The tape will stop automatically at the end of rewinding or fast forwarding.

Press I to stop rewinding or fast forwarding.

Note:

 
 During rewinding or fast forwarding of a tape, it is also possible to select another source (CD or TUNER, for example).

General information on recording

- For recording, use only tape of IEC type I (normal tape).
- The recording level is set automatically, regardless of the position of the Volume, DBB, DSC and so forth.
- The tape is secured at both ends with leader tape. At the beginning and end of the tape, nothing will be recorded for six to seven seconds.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.



 If "CHECK TRPE" is displayed, the protection tab has been broken. Put a piece of clear adhesive tape over the opening.



IMPORTANT!

 Recording is permissible if copyright or other rights of third parties are not infringed upon.

- Recording is possible only on tape deck 2.

Preparation for recording

Press TAPE to select TAPE 2.

2 Load a recordable tape into tape deck 2 with full spool to the left.

Prepare the source to be recorded.
 CD – load the disc(s).

TUNER – tune to the desired radio station. **TAPE** – load the prerecorded tape into tape deck 1 with the full spool to the left.

AUX – connect external equipment.

USB – connect a USB mass storage device.

When recording is in progress

→ REC starts flashing.

- It is not possible to listen to another source, except tape dubbing.
- It is not possible to activate the timer function during recording or tape dubbing.

One touch recording

- Press CD, TUNER, AUX or USB to select the source.
- 2 Start playback of the selected source.
- Press RECORD to start recording.

To stop recording

Press

 on the system.

Note:

- One Touch Recording is not possible in TAPE mode, "SELECT SOURCE" is displayed.

CD/USB Synchronised start recording

- Select CD or USB source.
- Press TITLE-/+ ◄ / ► to select the desired track, then press RECORD to start recording.
- You can programme the tracks in the order you want them to be recorded (refer to "CD Operation - Programming the disc tracks").
- Press **RECORD** to start recording.
 The disc will start playback automatically.

To stop recording

Press STOP .

→ Recording and disc playback will stop simultaneously.

Dubbing tapes

- Load the prerecorded tape in tape deck 1.
- You can set the tape to the desired passage where recording will start.

Press RECORD.

- → Playing and recording will start simultaneously.
 → "IUB" is displayed.
- Dubbing of tapes is possible on one side of the tape only. To continue recording on the reverse side, at the end of side A, flip the tape to side B and repeat the procedure.

• Press STOP ■.

Notes:

Dubbing of tapes is possible only from tape deck 1 to tape deck 2.

 To ensure good dubbing, use tapes of the same length.

English

Connecting external equipment

- Connect the audio out terminals of the external equipment (TV,VCR, Laser Disc player, DVD player or CD Recorder) to the AUX terminals of your system.
- Press AUX to select external equipment.
 → "RUX" is displayed.

Note:

 All the sound control features (DSC or DBB, for example) are available for selection.

Refer to the operating instructions for the connected equipment for details.

For Recording, please refer to "Tape Operation/Recording".

Using a USB mass storage device

By connecting a USB mass storage device to the Hi-Fi system, you can enjoy the device's stored music through the powerful speakers of Hi-Fi system.

Playing a USB mass storage device Compatible USB mass storage devices

With the Hi-Fi system, you can use:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this Hi-Fi system)

Note:

 In some USB flash players (or memory devices), the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as this Hi-Fi system).

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 - 65,536 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 400
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

The system will not play or support the following:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.
- Non-supported file formats are skipped. This means that e.g.: Word documents .doc or MP3 files with extension .dlf are ignored and will not be played.
- AAC, WAV, PCM audio files
- DRM protected WMA files
- WMA files in Lossless format

How to transfer music files from PC to a USB mass storage device


By dragging and dropping music files, you can easily transfer your favorite music from PC to a USB mass storage device.

For the flash player, you can also use its music management software for the music transfer.

However, those WMA files may be unplayable for compatibility reasons.

How to organize your MP3/WMA files on the USB mass storage device

This Hi-Fi system will browse the MP3/WMA files in the folders/sub-folders/titles order. Example:

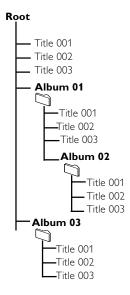

Organize your MP3/WMA files in different folders or subfolders as required.

Notes:

 If you have not organized MP3/WMA files into any albums on your disc, an album "00" will be automatically assigned for all those files.
 Make sure that the file names of MP3 files end with mb2 and the file names of MP3 files and

with .mp3. and the file names of WMA files end with .wma.

 For DRM protected WMA files, use Windows Media Player 10 (or later) for conversion.Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).

- Check the USB device has been properly connected. (See Installation: Connecting an additional appliance).
- Press CD/USB once or more to select USB (or USB DIRECT on the remote control).
 NO RUDIO appears if no audio file is found in the USB device.


Play the USB's audio files as you do with the albums/tracks on a CD (See CD/MP3 Operations).

Notes:

 For compatibility reasons, the album/track information may differ from what it is displayed through flash players' music management software.

 File names or ID3 tags will be displayed as — if they are not in English.

Clock/Timer

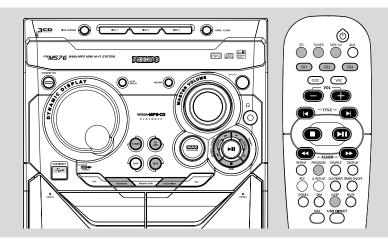

IMPORTANT!

- Use CLOCK•TIMER on the set to set the clock and timer.

View clock

The clock (if it is set) will be shown in standby mode.

To view the clock in any source mode (CD or TUNER for example)

Press CLOCK•TIMER.

The clock is displayed for a few seconds.
 If the clock has not been set, "--:--" is displayed.

Clock setting

The clock can be set in either 12-hour or 24-hour mode ("RM 12:00" or "00:00" for example)

- In standby or view clock mode, press CLOCK-TIMER once. In other source mode, press CLOCK-TIMER twice.
- Press PROGRAM repeatedly to select clock mode.

→ "RM 12:00" or "00:00" starts flashing.

- Press ALBUM-/+ ◄ ►► on the system repeatedly to set the hour.
- Press TITLE-/+ ◄ / ► on the system repeatedly to set the minute.

Press CLOCK-TIMER again to store the setting.
 The clock starts working.

To exit without storing the setting

Press **STOP** ■ on the system.

Notes:

 The clock setting will be cancelled when the power cord is disconnected or if a power failure occurs.

 During clock setting, if no button is pressed within 90 seconds, the system will exit clock setting mode automatically.

Timer setting

The system can switch on to CD,TUNER, or USB mode automatically at a preset time, serving as an alarm to wake you up.

IMPORTANT!

- Before setting the timer, ensure that the clock is set correctly.
- The timer will always be switched on after it has been set.

 The timer will not start if a recording is in progress.

 The volume of the timer will increase gradually from the minimum level to the last tuned volume level.

 Press and hold CLOCK-TIMER for more than two seconds to select timer mode.
 The last timer setting starts flashing.
 TIMER starts flashing.
 The selected source will be lighted and flashing.

- Press CD, TUNER or TAPE to select the desired source.
- Before setting timer, make sure the music source has been prepared.

CD – Load the disc(s). To start from a specific track, make a programme (refer to "CD Operation - Programming the disc tracks").

TUNER – tune to the desired radio station. **TAPE** – load the prerecorded tape into tape deck 2.

- Press ALBUM-/+ << >> on the system repeatedly to set the hour for the timer to start.
- Press TITLE-/+ |◀ / ▶| on the system repeatedly to set the minute for the timer to start.
- Press CLOCK•TIMER to store the start time.
 TIMER remains on the display.
- At the preset time, the selected source will play.

To exit without storing the setting

● Press **STOP** ■ on the system.

Notes:

 When the preset time is reached and the selected disc tray is empty, the next available disc will be selected. If all the disc trays are not available, Tuner will be selected automatically. During timer setting, if no button is pressed within 90 seconds, the system will exit timer setting mode automatically.

To deactivate the TIMER

Press TIMER ON/OFF on the remote control.
 → The display will show "□FF" and TIMER will disappear from the display.

To activate the TIMER

 Press TIMER ON/OFF on the remote control.
 The last set timer information will be shown for a few seconds and TIMER will appear on the display.

Sleep timer setting

The sleep timer enables the system to switch to standby mode automatically at a preset time.

Press SLEEP on the remote control repeatedly to select a preset time.

→ The selections are as follows (time in minutes):

 $IS \rightarrow 30 \rightarrow 4S \rightarrow 60 \rightarrow 0FF \rightarrow IS \dots$ \Rightarrow "SLEEP XX" or "DFF" is displayed. "XX" is the time in minutes.

When you reach the desired length of time, stop pressing the **SLEEP** button.

→ SLEEP is shown, except for "□FF" mode.
 → The sleep timer is now set. Before the system switches to standby mode, a countdown of 10 seconds is displayed.

"SLEEP ID" → "SLEEP S".... → "SLEEP I" → "SLEEP"

To check the remaining length of time after sleep timer is activated

• Press **SLEEP** once.

To change the preset sleep timer

 Press SLEEP again while the remaining sleep timer is shown.

→ The display will show the next sleep timer options.

To deactivate the sleep timer

 Press SLEEP repeatedly until "DFF" is displayed, or press STANDBY ON ().

Specifications

AMPLIFIER

RMS output power	RMS	output	power
------------------	-----	--------	-------

CD/MP3-CD PLAYER

Number of programmable tracks	99
Frequency response 50 – 20000 Hz	-3dB
Signal-to-noise ratio	dB A
Channel separation 60 dB (1	kHz)
Total harmonic distortion < 0.	003%
MPEG 1 Layer 3 (MP3-CD) MPEG AU	JDIO
MP3-CD bit rate 32-256	kbps
(128 kbps ac	lvised)
Sampling frequencies	8 kHz

TUNER

FM wave range	87.5 – 108 MHz
MW wave range (9 kHz)	531 – 1602 kHz
MW wave range (10 kHz)	530 – 1700 kHz
Tuning grid	9/10 kHz
Number of presets	
Antenna	
FM	
MW	Loop antenna

USB PLAYER

USB 12Mb/s,V1.1
support MP3 and WMA files
Number of albums/folders maximum 99
Number of tracks/titles maximum 400

TAPE PLAYER

Frequency response
Normal tape (type I) 80 – 12500 Hz (8 dB)
Signal-to-noise ratio
Normal tape (type I) 48 dB A
Wow and flutter \leq 0.4% DIN

SPEAKERS

System 2-way; double port bass reflex	
Impedance	6 Ω
Woofer 1	× 5.5"
Tweeter	.1×2"
Dimensions (w \times h \times d)	
	5 (mm)
Weight 6.1 k	kg each

GENERAL

Material/finish	Polystyrene/Metal
AC Power	.110 – 127 / 220 – 240 V;
	50/60 Hz Switchable
Power Consumption	
Active	180 W
Standby	≤ 15 W
Dimensions (w x h x d) 265 x 310 x 367 (mm)
Weight (without speak	ers) 9.1 kg

Specifications and external appearance are subject to change without notice.

Maintenance

Cleaning the Cabinet

 Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

 When a disc becomes dirty, clean it with a cleaning cloth.
 Wipe the disc from the centre out. Do not wipe in circular motion.



 
Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Cleaning the disc lens

 After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You also can clean the heads by playing a cleaning tape once.



Demagnetising the heads

Use a demagnetising tape available at your dealer.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
"ND DISE" is displayed.	 Insert a disc. Check if the disc is inserted upside down. Wait until the moisture condensation at the lens has cleared. Replace or clean the disc, see "Maintenance". Use a finalized CD-RW or a correct MP3-CD format disc.
"DISC NOT FINALIZED" is displayed.	✓ Use a finalised CD-RW or CD-R.
Some files on the USB device are not displayed.	 Check if the number of folders exceeds 99 or the number of titles exceeds 400.
"JEVICE NOT SUPPORTED" scrolls on the display.	 Remove the USB mass storage device or select another source.

Radio	reception	is poor.
-------	-----------	----------

Recording or playback cannot be made.

The tape deck door cannot open.

The system does not react when buttons are pressed.

Sound cannot be heard or is of poor quality.

The left and right sound outputs are reversed.

The remote control does not function properly.

The time is not working.

Not all lighted buttons are showing light.

The Clock/Timer setting is erased.

The system displays features automatically and buttons start flashing.

- If the signal is too weak, adjust the antenna or connect an external antenna for better reception.
- Increase the distance between the Mini HiFi System and your TV or VCR.
- ✔ Clean deck parts, see "Maintenance".
- ✓ Use only NORMAL (IEC I) tape.
- Apply a piece of adhesive tape over the missing tab space.
- Remove and reconnect the AC power plug and switch on the system again.
- Remove and reconnect the AC power plug and switch on the system again.
- ✓ Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- ✓ Check if the stripped speaker wire is clamped.
- Make sure the MP3-CD was recorded within 32-256 kbps bit rate with sampling frequencies at 48 kHz, 44.1 kHz or 32 kHz.
- ✓ Check the speaker connections and location.
- Select the source (CD or TUNER, for example) before pressing the function button (É,í,ë).
- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control directly towards the IR sensor.
- ✓ Set the clock correctly.
- Press and hold CLOCK•TIMER to switch on the timer.
- If recording or tape dubbing is in progress, stop recording.
- ✓ Press DIM to select DIM OFF display mode.
- Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.
- ✓ Press and hold on the system to switch off the demonstration.

Meet Philips at the Internet http://www.philips.com



FWM576

CLASS 1 LASER PRODUCT

