




1 Choosing Power Supply

- Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR- Open the **battery door** and insert 6 x C batteries (not included).

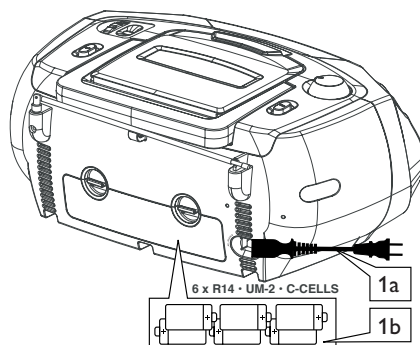

R-14, UM-2 or C-cells
(not included)


2 Listening to the Radio

- Push the **source selector** to **TUNER**.
- Adjust **BAND** to **AM** or **FM**.
- Turn **TUNING** to tune to a station.

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD, and WMA.

- Adjust the **source selector** to **CD/USB**.
- Press **CD/USB** to enter CD mode if "USB" is displayed.
- Open the disc door.
- Insert a disc with the printed side facing up and close the door.
- Press **▶II** to start playback.
- To stop disc playback, press **■**.

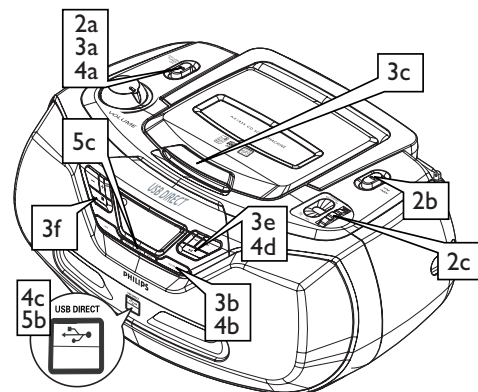

4 Playing a USB device

- Push the **source selector** to **CD/USB**.
- Press **CD/USB** to enter USB mode if "USB" is NOT displayed.
- Plug a compatible USB mass storage device to AZ1835's USB port marked .
- Press **▶II** on your AZ1835 to start play.

5 CD ripping

- Follow **steps a-d** from "3 Playing a disc".
- Plug a USB mass storage device.
 - Select the track you want to record.
 - Press once or repeatedly **USB REC** (or **REC** on the remote) until **ONE** appears, flashing.

To record all

 - Press repeatedly **USB REC** (or **REC** on the remote) until **ALL** appears, flashing.
 - Disc playback will start automatically.

Source selector

Slide to select function: CD/MP3 (or USB mode), or radio

VOLUME

Turn to adjust volume level

LIFT TO OPEN

Lift to open the disc door

+/-

For **MP3-CD/USB/WMA** play:
Press to select albums



Press to stop disc/USB playback, or erase a disc program

DBB

Turns the bass enhancement on/off

PROG

Use to program disc tracks and review a disc program

USB Port

Connects an external USB mass storage device

USB REC

Copy one file or all files of a disc to an external portable USB storage device/MP3 player

TUNING

Turn to tune to a station

BAND

Slide to select waveband

Telescopic antenna

Improves FM reception



Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward



Press to start or pause disc/USB playback

Display

 
Shows disc/USB functions

CD/USB

Press to enter disc or USB mode

MODE

Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order)



Removing the insulation plastic tab

