
## **QUICK USE GUIDE**

12nc: 3139 246 14151



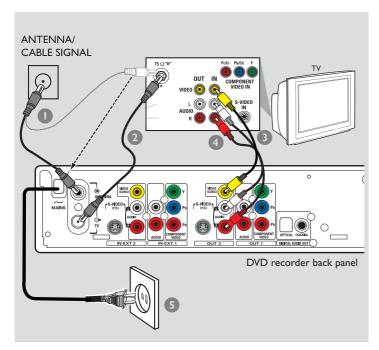



- Remove the antenna cable plug from your TV (or Satellite Receiver/Cable Box). Connect it to the ANTENNA input socket at the back of the DVD recorder.
- Use the supplied antenna cable to connect the DVD recorder's TV output socket to the antenna input socket at the back of your TV set
- Use the supplied AV cables (yellow plug) to connect the DVD recorder's **VIDEO** (CVBS) (OUT 2) socket to the Video In socket at the back of your TV set.
- Use the supplied AV cables (red/white plugs) to connect the DVD recorder's **AUDIO L/R (OUT 2)** socket to the audio input socket at the back of your TV set.
- Connect the power cable from the DVD recorder's
   MAINS to the power supply.

#### **Helpful Hint:**

If your TV does not have the above-mentioned connectors, please refer to the user manual for more information on others possible connection to your TV set.



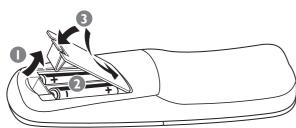

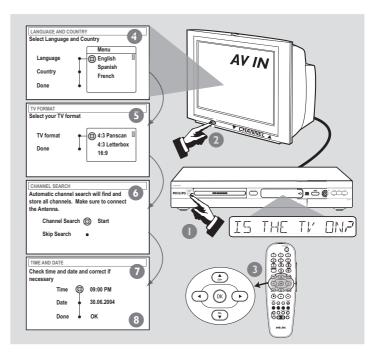

## Start first installation

- Press **STANDBY-ON** (b) on the DVD recorder to switch it on.
- 2 Switch on the TV set and select the correct video in channel, the First Installation menu appears on the TV.

**NO PICTURE!** Press the TV/AV button or CHANNEL ▲ ▼ button on the TV to select the correct video in channel, for example, 'EXT', '0', or 'AV'.

- 3 Press ▲ ▼ to select an item in the menu.
  - Press ▶ to access the selected item's options.
    - Press ◀ to confirm your selection.

When you complete, select { **Done** } in the menu and press **OK** to continue.

- 4 { Language and Country } menu appears.
  - { Language } select on-screen display language.
  - { Country } select country of your residence.
- **5** { **TV Format** } menu appears.
  - $\{ TV Format \}$  select TV screen display.
- 6 { Channel Search } menu appears.

Press **OK** to start automatic TV channel search.

Once the TV channel search complete, the total number of channels found appears.


{ Time and Date } menu appears.


If the time and date shown on the TV are not correct, press  $\blacktriangleright$  to enter the respective time/date field. Press  $\blacktriangle$   $\blacktriangledown$  to change the first digit and press  $\blacktriangleright$  to go to the next digit field. Once complete, press  $\bigcirc$ K to confirm.

8 Press ▼ to select { Done } and press OK to save the changes.
 → The first installation is now complete.

The DVD recorder is ready for use! See next page for basic recording and playback.

## ... cont.

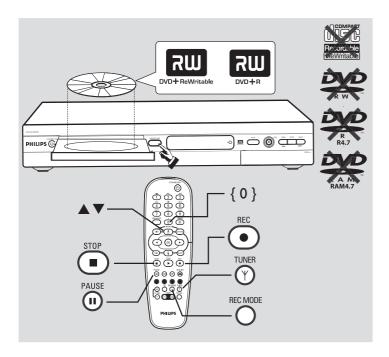

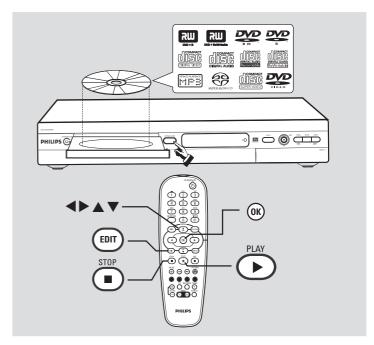

# 4

## Start manual recording

- Insert a recordable DVD+R(W) with the label side facing up.
- Press **TUNER** on the remote control to see the TV programmes, then press ▲ ▼ to select the programme number you wish to record.
  - → If you wish to record from additional device (e.g. Video Cassette Recorder), press button ▲ ▼ on the remote control to select the correspond external input channel.
  - For example, select  $\{EXT2\}$  if you have connected the VCR to IN-EXT2 socket at the back of the DVD recorder.
- Press REC MODE to select a desired recording mode. It defines the picture quality and the maximum recording time for a disc.

Record Mode	Picture Quality	Maximum Recording Time per Disc
M1	High quality (HQ)	1 hour
M2	DVD quality-Standard Play (SP)	2 hours
M2x	DVD quality-Standard Play Plus (SP+)	2.5 hours
M3	S-VHS quality-Long Play (LP)	3 hours
M4	VHS quality-Extended Play (EP)	4 hours
M6	VHS quality-Super Long Play (SLP)	6 hours
M8	VHS quality-Super Extended Play (SEP)	8 hours

- 4 Press REC to start recording.
- If required, you can press REC twice to start a 30-minute recording. Each time you press REC ● button, you will add 30 minutes to the recording time.
- During recording, you may press **PAUSE II** to pause the recording and press **REC** to continue.
- To stop the recording, press STOP ■.
   → Wait until the message disappears from the display panel before you remove the disc.

# 5

## Start Playback

- Insert a disc with the label side facing up.
- Playback will start automatically.
  - → If a dialogue appears on the TV showing { Do you want to access the disc content }, press ▲ ▼ to select { Yes } to show the disc content or { No } to switch to the last active mode, then press OK to confirm.
  - → If a disc menu appears, press 
    ▼ to navigate within the menu, highlight a title and press OK or PLAY > to start playback.

**NO SOUND!** Connect the AUDIO L/R (red/white) sockets at the back of the DVD recorder to the correspond AUDIO input sockets on a TV set, stereo system or receiver. Turn on the connected system and select the appropriate channel.

**3** To stop playback, press **STOP** ■.

#### To watch the TV programmes

Press **TUNER** on the remote control, then press ▲ ▼ to select the programme number.


## To play a DVD+R on other DVD players, you must finalise it first

- Press **EDIT** on the remote control.
- Press ▲ ▼ to select { **Finalise** } in the menu, then press OK.

Once a DVD+R is finalised, no further recording or editing is possible. Unfinalising a DVD+R is not possible.



# 快速使用指南

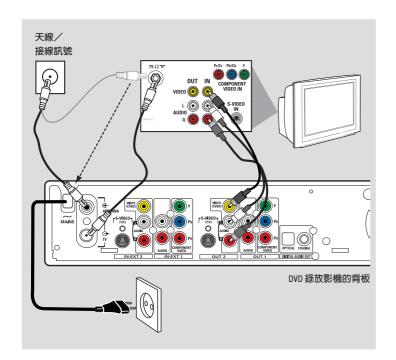



### 連接DVD錄放影機


- 從電視(或衛星電視接收器/有線電視盒子)拔出天線接線插頭,將它連接在DVD錄放影機背面的ANTENNA輸入插孔。
- ② 使用隨機附送的天線接線,將DVD錄放影機的 **TV** 輸出插孔,連接在電視背面的天線輸入插孔。
- ③ 使用隨機附送的AV接線(黃色插頭),將DVD錄放影機的VIDEO (CVBS) (OUT2)插孔,連接在電視機背部的視類輸入振孔。
- ④ 使用隨機附送的AV接線(紅/白插頭),將DVD錄放影機的AUDIO L/R (OUT2) 插孔,連接在電視機背部的音頻輸入插孔。
- 5 將DVD錄放影機的電源線 (~MAINS) 連接至電源插座。


#### 醒目小提示:

若你的電視沒有上述的連接插孔,請參閱用戶手冊,以獲得更多與電視連接的其他資料。



## 遙控器的預備

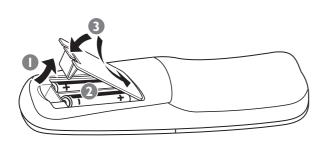

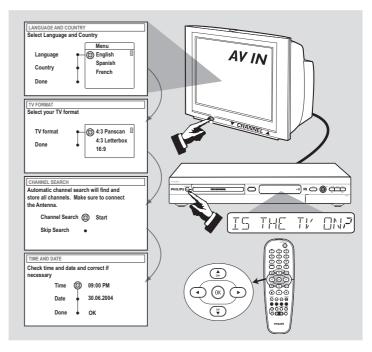

# 2

### 開始首次安裝

- 按DVD錄放影機的STANDBY-ON ①以啟動本產品。
- ② 啟動電視機並選擇正確的視頻輸入頻道,在電視畫面, 會出現首次安裝功能表。

沒有影像!按TV/AV按鈕或在電視的CHANNEL ▲▼按鈕,選擇正確的視頻輸入頻道,如'EXT'、'0'或'AV'

- ③ 按▲▼選擇在功能表的項目
  - 按▶進入已選的項目
  - 按 ◀ 確認你的選擇


當完成操作後,請在功能表,選擇{ Done }並按 OK 繼續操作。

- 出現 { Language and Country } 功能表 { Language } - 選擇在螢幕顯示的語言 { Country } - 選擇你居住的國家
- 5 出現 { TV Format } 功能表 { List } 選擇電視畫面顯示
- 出現 { Channel Search } 功能表 按OK,開始電視頻道自動搜索功能。 當完成電視頻道搜索後,按OK確認。
- 出現{ Time and Date } 功能表若在電視出現的時間和日期是不正確,請按▶,進入相應的時間/日期字段,按▲▼改變第一個數字,並按▶, 進入下一個數字字段,當操作完畢後,請按 OK 確認。
- 按 ▼ , 選擇{ Done } , 並按OK儲存改變。 首個安裝程序, 便告完成。

DVD 錄放影機可以隨時開始使用 請參看下一頁,以獲得更多錄製和播放影片的資料

DVDR6xx\_69\_QUG chT 1 8/19/04, 3:57 PM

## 繼續

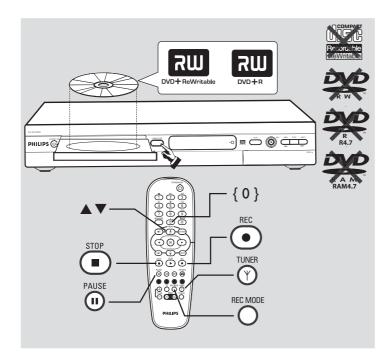




### 開始人手錄製影片

- 放入一張可錄製的DVD+R(W)光碟,有標貼的一面向上。
- ② 按遙控器上的TUNER,以觀看電視節目表,然後按 ▲▼,揀選你想錄製的節目號碼。
  - → 如果你想用額外的器材來錄製影片(例如錄影機), 請按遙控器的 ▼,選擇相應的外置輸入頻道。例子: 如果你已接駁錄影機到DVD錄放影機背部的EXT 2 AUX-I/O插孔,請選擇{EXT2}。
- ③ 按REC MODE ,選擇一個喜愛的錄製模式。它已設定影像的質素和光碟的最長錄影時間。

影片質素	一張光碟最長 錄製時間
高質素 (HQ)	1 小時
DVD 標準影像 (SP)	2小時
DVD 標準播放+(SP+)	2.5 小時
S-VHS 加長播放(LP)	3小時
VHS 延長播放 (EP)	4 小時
VHS 質素加長播放(SLP)	6小時
VHS 質素 超級加長播放(S	SEP) 8 小時
	高質素 (HQ) DVD 標準影像 (SP) DVD 標準播放+(SP+) S-VHS 加長播放(LP) VHS 延長播放 (EP) VHS 質素加長播放(SLP)

- ④ 按 REC ●,開始錄製影片。
- 如有需要,你可按REC 兩次來開始一個30分鐘的錄製 過程。當你每次按REC ● 按鈕,便會延長30分鐘的錄製 時間。
- ⑤ 錄製影片時,你可以按 PAUSE II t來暫停錄製節目,再按 REC 便可繼續進行錄製。
- ⑥ 要終止錄製,請按 STOP ■.
  - → 請等候在顯示屏上的字句消失後,方可拿出影碟。

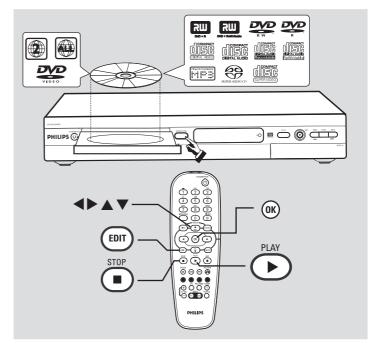

# 5

### 開始播放

- 放入影碟,具有標籤的一面向上。
- ② 本DVD機會自動開始播放。
  - 如電視畫面顯示{ Do you want to access the disc content? },
     請按 ▲ ▼ 選擇{ Yes }, 顯示影碟內容,或選擇{ No }(否),
     切換至最後使用的模式。
    - → 如出現影碟功能表,按 ◀▶▲▼,便可在功能表內導航, 然後顯亮其中一個標題,接著,按OK或PLAY▶,開始播放 影片。

沒有聲音! 將DVD錄放影機背部的AUDIO L/R (紅/白)插孔,連接至電視、立體聲系統或接收器的相對AUDIO輸入插孔。啟動已連接的系統,並選擇適當的頻道。

③ 要停止播放,請按 STOP ■。

#### 觀看電視節目

● 按遙控器的 TUNER 然後按▲ ▼ 選擇節目號碼。

## 要在其他DVD影碟機播放DVD+R時,你必須先完成錄製程序。

- 按遙控器的 EDIT。
- ② 按 ▲ ▼ 在功能表選擇{ Finalise } ,然後按OK ,完成 DVD+R的錄製程序。

當DVD+R錄製完成後,便不可在光碟再錄製任何節目或編輯任何資料,要取消在DVD+R的錄製程式,是不可能的。



詳細的播放和附加功能,請參閱附送的用戶手冊。

DVDR6xx\_69\_QUG cht 2 8/19/04, 3:57 PM